


JVC

SERVICE MANUAL

DIGITAL SYNTHESIZER RECEIVER

RX-212BK

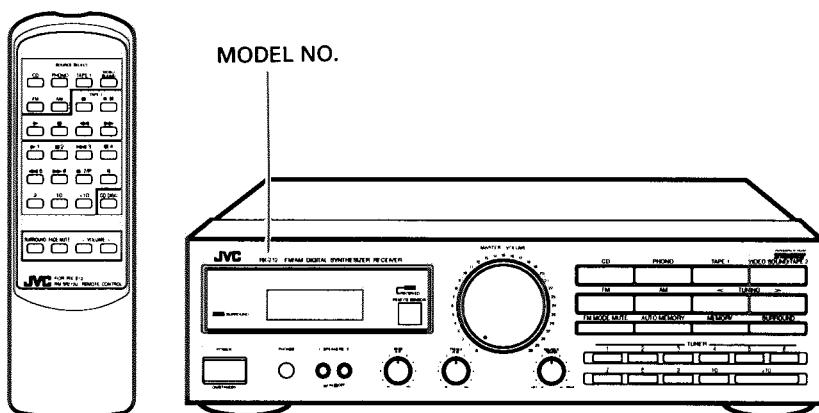


COMPU LINK
/// Remote ///
Control Component

Contents

<i>Safety Precautions</i>	1-2	<i>Adjustment Procedures</i>	1-20
<i>Instruction Book</i>	1-3	<i>Power Amplifier Adjustment Procedures</i>	1-21
<i>Description of Major ICs</i>	1-13	<i>Block Diagrams</i>	1-22
<i>Internal Block Diagram of Other ICs</i>	1-17	<i>Schematic Diagrams</i>	Insertion
<i>Internal Connections of FL Display</i>	1-18	<i>Printed Circuit Boards</i>	Insertion
<i>Disassembly Procedures</i>	1-19	<i>Parts List</i>	Insertion

Safety Precautions

1. The design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Services should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (\triangle) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement parts shown in the Parts List of Service Manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.
5. Leakage current check (Electrical shock hazard testing)
After re-assembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.
Do not use a line isolation transformer during this check.
 - Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal parts of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5mA AC (r.m.s.).
 - Alternate check method
Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having, 1,000 ohms per volt or more sensitivity in the following manner. Connect a $1,500\Omega$ 10 W resistor paralleled by a $0.15 \mu\text{F}$ AC-type capacitor between an exposed metal part and a known good earth ground.
Measure the AC voltage across the resistor with the AC voltmeter.
Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor.
Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75 V AC (r.m.s.).
This corresponds to 0.5 mA AC (r.m.s.).

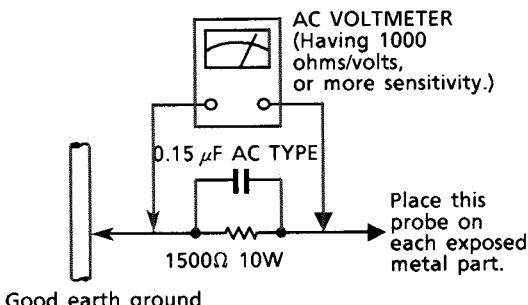

Warning

1. This equipment has been designed and manufactured to meet international safety standards.
2. It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
3. Repairs must be made in accordance with the relevant safety standards.
4. It is essential that safety critical components are replaced by approved parts.
5. If mains voltage selector is provided, check setting for local voltage.

Connecting Stereo Equipment

Before Starting

Before connecting the receiver, read the following paragraphs carefully.


IMPORTANT! The left channel of any audio component must be connected to the left-channel jack of the receiver, and the right channel to the right-channel jack. If they are reversed, the stereophonic image will not be correct.

NOTE: To ensure correct connections, insert the red plug into the right channel.

Basic Connections

Connect stereo component to the amplifier using cables with RCA PIN plugs. Connect the output jacks on a tape deck to the jacks marked IN (PLAY) on the amplifier, and the input jacks to those marked OUT (REC).

NOTE: Any turntables incorporating a small-output cartridge such as an MC (moving-coil type) must be connected to this amplifier through a commercial head amplifier or step-up transformer. Direct connection may result in insufficient volume.

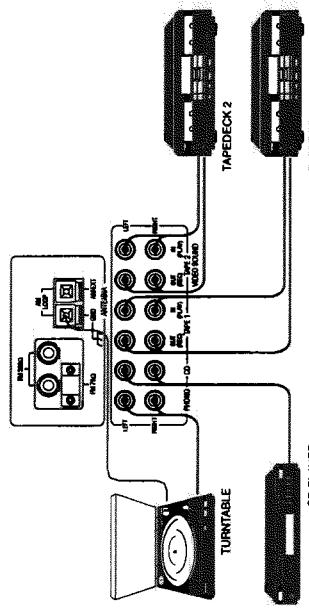


NOTE: If a ground cable is fitted to your turntable, connect the ground cable to the AM LOOP terminal marked GND. In this case, do not disconnect the AM LOOP wire from the GND terminal.

COMPU LINK-3 Connections

COMPU LINK-3 SYNCHRO jacks on the back of the receiver connect the COMPU LINK remote control system. This system connects other JVC audio components with the receiver to make listening and recording more convenient. To use this system, attach the cables provided with your JVC components to the COMPU LINK-1 or 3 SYNCHRO jacks on the rear panel of each component. Then connect the cables to the receiver.

NOTES:

- COMPU LINK-3 is an upgraded version of COMPU LINK-1. If your equipment provides COMPU LINK-3 jacks, you can still connect your equipment, but slight imperfections may result.
- Refer to page 18 for details about the COMPU LINK remote control system.

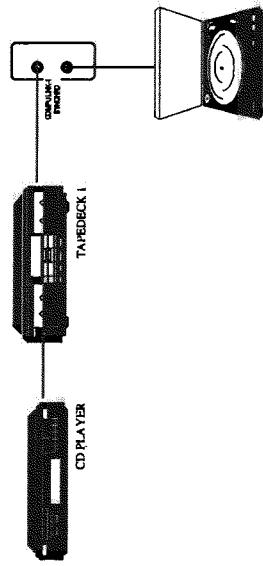


△ CAUTION! Do not connect Tape Deck 2 to the COMPU LINK jacks. It may cause the COMPU LINK system to malfunction.

Other Audio Connections

Use the socket on the back of the receiver to connect the power supply of any audio components.

△ CAUTION! Do not connect any components that consume more power than the capacity of the AC outlet. This capacity is indicated near the socket on the back of the receiver.

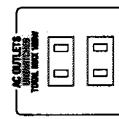

NOTE:

- Provided except for European countries.

Connecting Speakers

Before Starting Up to four speakers (two sets) can be connected to the receiver. Connecting four speakers will allow you to use the built-in Surround feature.



Connecting Speakers Connect speakers to the SPEAKERS terminals on the back of the receiver. Use the wire supplied with the speakers.

To connect each speaker, follow these steps:

Step 1 Open each terminal on the back of the receiver and insert the end of the speaker wire, as shown.

Step 2 Close the terminals to clamp the speaker wires in place, as shown.

CAUTION! Use speakers which have an impedance within the range indicated near the terminal.

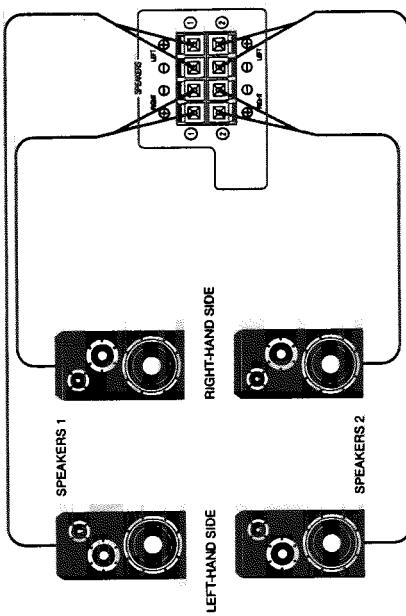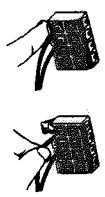**Connecting an AM Antenna**

Before Starting One AM loop antenna is supplied with your receiver.

Basic Connections

To connect the AM loop antenna to the AM LOOP terminals, follow these steps:

Step 1 Open each terminal and insert one of the two ends of the AM antenna wire.

Step 2 Close the terminals to clamp the antenna wires in place.


Step 3 Stand the AM loop antenna on its own base, as shown. Set it on any flat surface.






**AM Outdoor Antenna**

If your AM broadcast reception is unsatisfactory, you should connect an AM outdoor antenna in addition to the loop antenna. The antenna wire should be 16 to 40 feet (5 to 13 meters) long. Connect one end of the outdoor single vinyl-covered antenna wire to the AM LOOP terminal marked AM EXT.

IMPORTANT! The AM loop antenna must be installed to receive AM broadcasts. Do not disconnect the loop antenna when installing an outdoor antenna.

IMPORTANT! Except for the connection, make sure no uninsulated antenna wire touches the rear panel of the receiver. Otherwise, the receiver might not pick up AM broadcasts.

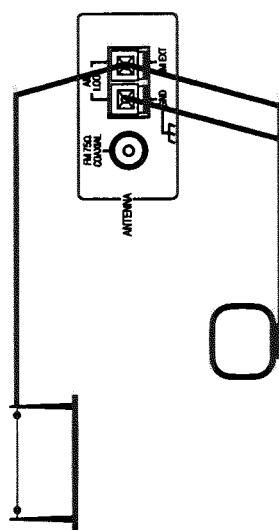

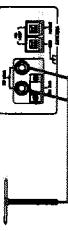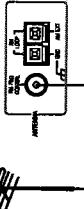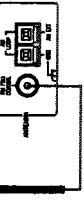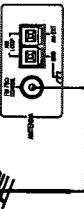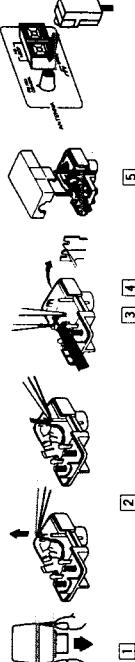Connecting an FM Antenna		For Countries Outside Europe	For countries outside Europe, there are two connection types:
Before Starting	The type of terminal provided for connecting an FM antenna depends on your geographic area. Read the section below which corresponds to your area.	To connect a 300-ohm antenna, follow these steps:	
For Germany	IMPORTANT! Make sure the antenna conductors do not touch any other terminals on the receiver. This could cause poor reception.		Step 1 Loosen the cap on the 300/75-ohm terminal on the back of the receiver. Step 2 Loosen the cap on the 300-ohm terminal on the back of the receiver. Step 3 Connect the antenna by inserting one wire behind each cap. Step 4 Tighten the caps on both terminals.
For Other European Countries	You have two options for connecting an FM antenna. Connect the included wire antenna as shown in option ③, or purchase antenna and cable with connector DIN 45332 and attach as shown in option ⑤.		To connect a 75-ohm antenna, follow these steps: Step 1 Unscrew the cap and bracket screw on the 300/75-ohm terminal. Insert the round antenna cable from below. Step 2 Make sure the shield braid on the cable contacts the bracket, and the center conductor of the cable contacts the 300/75-ohm terminal. Step 3 Tighten the bracket screw and the cap on the 300/75-ohm terminal.
			To attach the Antenna Adaptor to the 75-ohm coaxial cable, follow these steps: Step 1 Remove the cover of the Antenna Adaptor by lifting the tabs on both sides. Step 2 Remove the jumper wire in the Antenna Adaptor with a tweezer. Step 3 Insert the center conductor of the coaxial cable into the notch located in the center of the fitting at the end of the Antenna Adaptor. Step 4 Using a pair of pliers, secure the fitting in the center of the Antenna Adaptor so that the shield braid of the coaxial cable is held tightly in the fitting. Step 5 Snap the cover back onto the Antenna Adaptor.
			

For Countries Outside Europe, there are two connection types:

To connect a 300-ohm antenna, follow these steps:

- Step 1** Loosen the cap on the 300/75-ohm terminal on the back of the receiver.
- Step 2** Loosen the cap on the 300-ohm terminal on the back of the receiver.
- Step 3** Connect the antenna by inserting one wire behind each cap.
- Step 4** Tighten the caps on both terminals.

For countries outside Europe, there are two connection types:
You have two options — a 300-ohm feeder cable, or a 75-ohm coaxial cable.

To attach the Antenna Adaptor to the 300-ohm Feeder cable, secure the two conductors to the screws of the Antenna Adaptor, as shown at the left.



To attach the Antenna Adaptor to the 75-ohm coaxial cable, follow these steps:

- Step 1** Remove the cover of the Antenna Adaptor by lifting the tabs on both sides.
- Step 2** Remove the jumper wire in the Antenna Adaptor with a tweezer.
- Step 3** Insert the center conductor of the coaxial cable into the notch located in the center of the fitting at the end of the Antenna Adaptor.
- Step 4** Using a pair of pliers, secure the fitting in the center of the Antenna Adaptor so that the shield braid of the coaxial cable is held tightly in the fitting.
- Step 5** Snap the cover back onto the Antenna Adaptor.

Operation Outline

Connecting the Power

Before Starting

In countries outside Europe, you will find voltage selector and AM channel spacing selector switches on the back of the receiver. If your receiver has these switches, follow the instructions below to set them before connecting the power.



Voltage Selector: Using a Philips screwdriver, adjust the voltage selector to the correct supply voltage for your area.

AM Channel Spacing Selector: Using the tip of a ballpoint pen, adjust the AM channel spacing for your area.

Connecting the Power Supply

⚠ CAUTION!

- Do not handle the power cord with wet hands.
- Do not pull on the power cord to unplug the receiver. Always grasp the plug directly so as not to damage the cord.
- Do not plug the power cord into a socket until all components are connected correctly.

IMPORTANT! If the power cord is disconnected or a power failure occurs, the receiver settings in memory are retained for 2 or 3 days.

Inserting Batteries into the Remote Control

The remote control requires two batteries (supplied). To insert batteries, follow these steps:

Step 1 On the back side of the remote control, press down on the battery cover and slide it out.

Step 2 Insert batteries. Make sure to observe the proper polarity: (+) to (+) and (-) to (-).

Step 3 Slide the cover in.

If the range or effectiveness of the remote control decreases, replace the batteries. Use two (2) dry-cell batteries of the AA/R6/UM-3 type.




⚠ CAUTION! Follow these precautions to avoid leaking or cracking cells:

- Place batteries in the remote control so they match the polarity indicated (+) to (+) and (-) to (-).
- Use the correct type of batteries. Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose batteries to heat or flame.



Basic Operation Reference

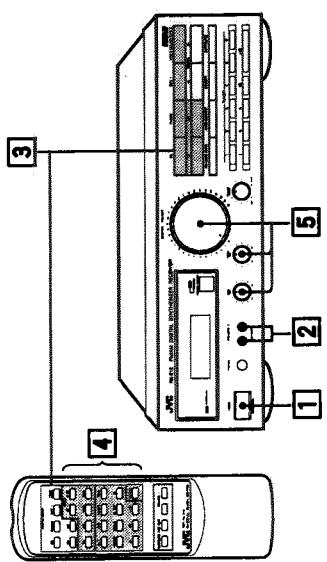

- [1] Turn on the power



NOTE:
Pushing the POWER switch again turns off the power. A small amount of power (7 watts) is consumed in the standby mode. To turn the power off completely, disconnect the power cord from the wall outlet.

- [2] Select speakers
[\[See page 16\]](#)
- [3] Choose an audio source
[\[See page 12\]](#)
- To choose an audio source, press one of the SOURCE SELECT buttons on the receiver or select one of the components on the remote control.



- [4] Operate the audio source
[\[See pages 18-20\]](#)
- Refer to the manual provided with each component. If your JV/C components are connected to the COMPUTER LINK jack of the receiver, you can operate them using the remote control.

- [5] Adjust volume and tone
[\[See pages 16-17\]](#)
- Rotate the MASTER VOLUME control on the receiver or press the VOLUME button on the remote control to adjust volume. See page 16 for other ways to change the volume or tone.

Selecting the Audio Source

The receiver can receive input from compact discs, cassette tapes, turntables, or any audio source that you connect. You can select a source for either listening or recording.


Listening



Press one of the SOURCE SELECT buttons on the receiver or the remote control.

- CD* Listen to the CD player.
- PHONO* Listen to a record.
- TAPE 1* Listen to the tape deck connected to the TAPE 1 jacks.
- VIDEO SOUND/ Listen to the tape deck connected to the TAPE 2 jacks.
- TAPE 2 Listen to the tape deck connected to the TAPE 2 jacks.
- FM* Listen to an FM broadcast.
- AM* Listen to an AM broadcast.

IMPORTANT! The VIDEO SOUND/TAPE 2 button has a different function from other source selector buttons, because it allows you to monitor the quality of the recording. For more details, see Monitoring below.

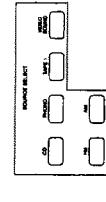

IMPORTANT! When recording from TAPE 2 to TAPE 1, press the VIDEO SOUND/ TAPE 2 button and another button other than TAPE 1.

The source being played is automatically selected as the source to be recorded. While recording, you can listen to the selected source at any desired volume and tone settings.

NOTE: Volume and Tone adjustments and the surround sound effect do not affect recording.



Using the Monitor feature, you can compare the sound quality of the source to the sound quality of the recording being made.

To use the Monitor feature while recording onto a cassette deck connected to the TAPE 2 jacks, follow these steps:

Step 1 Press the VIDEO SOUND/TAPE 2 button.

The "TAPE 2 MONITOR" light appears and you can listen to the sound of the cassette deck connected to the TAPE 2 jacks. You are now hearing the quality of the recording, not the quality of the source.

Step 2 Press the VIDEO SOUND/TAPE 2 button again.


This turns off the "TAPE 2 MONITOR" light, and the speakers play the previously selected source.

NOTE: If the cassette deck has three heads, you can hear the sound of the recording at the same time as it records on the tape.

Receiving an AM/FM Broadcast

To receive an AM/FM broadcast, select either AM or FM using the AM button or FM button. Then tune to the precise frequency using the TUNING buttons.

Tuning

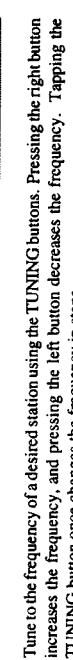

Tune to the frequency of a desired station using the TUNING buttons. Pressing the right button increases the frequency, and pressing the left button decreases the frequency. Tapping the TUNING button once changes the frequency in steps.

On the model that can receive LW (Long Wave) broadcasts, AM tuning will skip to the lower limit of the MW (Middle Wave) frequencies when it reaches the upper limit of the LW frequencies, and vice versa.

NOTE: LW is not provided for countries outside Europe.

There are two tuning modes: Manual and Automatic.

If you know the frequency of a desired station, hold down the TUNING button to start the frequency changing quickly. Release the TUNING button near the desired station and tap it repeatedly until you arrive at the correct frequency.

If you want to scan frequencies for a desired station, hold down the TUNING button to start the frequency changing quickly. When you release the TUNING button, the frequency continues to change until it reaches a station.

When a station is correctly tuned, the "TUNED" light appears on the display window. Once a tuned frequency is preset, it can be directly recalled using the TUNER buttons. For details, see page 14.

NOTE: When you use automatic tuning, weak stations are ignored. To pick up weak stations, use manual tuning.

IMPORTANT! If the receiver is tuned to a station but the "TUNED" light does not appear, try rotating the antenna for better reception.

Selecting an FM Reception Mode



Pressing the FM MODE/MUTE switch switches between these modes.

The "MUTE-AUTO" light appears in the display window. You hear either stereo sound or monaural sound, depending on the broadcast. If it is a stereo broadcast, the "STEREO" light appears. This mode is also useful for suppressing static "noise" between stations.


The "MUTE-AUTO" light disappears. You hear monaural sound even if a broadcast is in stereo. This mode is also useful when a stereo broadcast is noisy because of a weak signal.

NOTE: Using the Automatic Tuning mode, the sound of a broadcast with a weak signal may be muted. In this case, select the monaural mode.

Presetting Tuned Frequencies

You can preset up to total 40 FM/AM radio stations by assigning channel numbers (1 through 40) to them. Once a station is preset, you can listen to it by entering the preset number using the TUNER buttons on the receiver, or the PRESET buttons of the remote. There are two ways to preset: manual or automatic.

Assigning Channel Numbers
To choose numbers from 1 through 10, press the appropriate TUNER buttons. To choose numbers from 11 through 40, press the +10 key and one other button. For example:

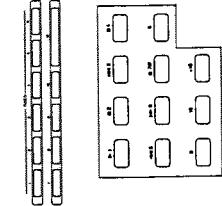

To choose 17
Press +10, then 7.
To choose 20
Press +10, then 10.
To choose 25
Press +10 twice, then 5.
To choose 40
Press +10 three times, then 10.

NOTE: You can also tune using the remote control. First press the AM or FM button on the remote, then enter the channel number using the numeric buttons on the remote.

Automatic Presetting

To use automatic presetting to preset up to 40 stations automatically, follow these steps:

- Step 1 Press the SOURCE selector button to select AM or FM.
 - Step 2 Using the TUNING buttons, move to the lowest frequency on the dial.
 - Step 3 Press the AUTO MEMORY button.
 - The "MEMORY" light flashes in the display window.
 - Step 4 Using the TUNER buttons, enter a channel number (1 through 40) to the first tuned station. From that point, scanning starts and stations are assigned channel numbers in ascending order.
- IMPORTANT!** You must enter the channel number while the "MEMORY" light flashes. If this light disappears before you enter the channel number, press the AUTO MEMORY button again.

Excluding a Station From Automatic Presetting

To use manual presetting to assign channel numbers to your favorite stations, follow these steps:

- Step 1 Tune to a station. If necessary, follow the procedure on Page 13.
 - Step 2 Press the MEMORY button.
 - The "MEMORY" light appears in the display window.
 - Step 3 Using the TUNER buttons, enter a number (1 through 40). This number is the channel number you are assigning to the station.
- IMPORTANT!** You must enter the channel number while the "MEMORY" light is on. You have about 5 seconds to do this. If the light disappears before you enter the channel number, press the MEMORY button again.
- Step 4 When the MEMORY light disappears and the channel number is displayed, presetting is completed.

Manual Presetting

Frequencies are scanned in ascending order. When a station is tuned in, scanning stops and the "TUNED" light appears. The station is preset about 4 seconds later and the "MEMORY" light flashes again. If you do not want to preset this station, press the AUTO MEMORY button within 4 seconds. Scanning restarts without presetting that station.

When the "MEMORY" light flashes again, scanning continues until one of the following occurs:

- Another station is tuned in
 - The upper limit of the tuning range is reached
 - All 40 channel numbers have been assigned


When Auto Presetting is completed, the last preset station is received.

NOTE: To stop scanning at any time, press either TUNING button once.

Adjusting the Volume and Tone

Adjusting the Volume

Using the MASTER VOLUME Control

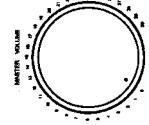

Use the MASTER VOLUME control to adjust the volume from the left and right speakers. Rotating the dial to the right increases the volume. The volume from the speakers and the headphones increases simultaneously.

NOTE: Volume can also be adjusted using the remote control. Press the VOLUME button marked + to increase the volume, or the VOLUME button marked - to decrease the volume.

CAUTION! Listening to extremely loud sound may damage your hearing. Be especially careful when using headphones.

Press the FADE MUTE button on the remote control to decrease the volume easily when you receive a phone call or a visitor.

IMPORTANT! If you are listening at very high volume, you may need to press FADE MUTE a second or third time to reduce volume completely.

Selecting the Speakers



Pushing in SPEAKER button 1 or 2 activates that pair of speakers. Pressing either button again deactivates that pair of speakers. When the button is in, that pair is activated. You can listen to both pairs, pair 1, pair 2, or neither pair.

IMPORTANT! If only one set of speakers is connected, pressing "in" both speaker buttons will produce no sound.


Listening to Headphones



Insert the headphone plug into the PHONES jack. To limit sound to the headphones (no sound from the speakers), press SPEAKER buttons 1 and 2 to deactivate all speakers.

CAUTION! To avoid hearing damage, turn the volume down before plugging in the headphones, then gradually increase the volume.

Adjusting the Left-Right Balance

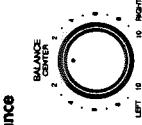

Use the BALANCE control to adjust the balance between the left and right channels. Rotating the dial to the right increases the right-channel volume, and rotating it to the left increases the left-channel volume. The BALANCE control affects both sets of speakers and the headphones.

Adjusting the Tone

Adjusting Bass and Treble



Use the BASS control to adjust low pitches and the TREBLE control to adjust high pitches. Turn either control to the right for intensified pitch. Set both controls at the FLAT position for normal listening.

Enjoying the Surround Sound Effect



When you are using four speakers, you can put them in different corners of the room and use the Surround feature. Press the SURROUND button to create this movie-theater effect. The SURROUND indicator lights on the display window. Press the SURROUND button again to deactivate the surround feature. The SURROUND indicator turns off.

IMPORTANT! The Surround feature has no effect on monaural (non-stereo) sources.

NOTE: Two sets of speakers are recommended to produce an ideal surround effect, but you can use the feature with only one set of speakers connected.

Operating Audio Components

COMPU LINK Remote Control System

The COMPU LINK remote control system lets you operate the receiver and JVC components from the remote supplied with this receiver. Control signals for JVC audio components are present in the receiver's remote control.

Connecting the COMPU LINK-1 SYNCHRO jacks on the back of the receiver will allow you to use the four functions below.

Automatic Source Selection You can control all equipment via the REMOTE SENSOR on the receiver using the receiver's remote control. For details, see page 19.

IMPORTANT! Point the remote control directly at the REMOTE SENSOR on the receiver.

When you press play on a component or the remote, the component begins playing immediately. On the other hand, if you select a new source on the receiver or the remote, the component begins playing immediately, but the previously selected source continues playing without sound for a few seconds.

Synchronized Recording

To use synchronized recording, follow these steps:

- Step 1 Put a tape in the deck, and a disc in the CD player or on the turntable.
- Step 2 Press the REC and PAUSE button on the tape deck at the same time. This puts the tape deck in the REC/PAUSE state.

IMPORTANT! If you do not press the REC button and PAUSE button together, the synchronized recording feature will not operate.

Step 3 Press the PLAY button on the CD player or turntable.

As soon as the disc starts playing, the tape deck starts recording. When the disc ends, the tape deck switches back to the REC/PAUSE mode, and stops 4 seconds later.

NOTES:

- During synchronized recording, the CD or PHONO button is activated. Other SOURCE buttons are disabled to prevent recording failure.
- If your CD player is operated in the PROGRAM mode, a 4-second mute is recorded between tracks to enable the music scan feature of your tape deck to work.
- If the power of any component is shut off during synchronized recording, the system will not operate properly. In this case, you must start again with step 1.

Using the Remote Control

By connecting the COMPU LINK jack to this receiver, you can operate the audio stereo component with this receiver's remote control. In addition, if your VCR is a JVC product, you can operate it with this receiver's remote control.


NOTE: The VCR does not work with the COMPU LINK remote control system. When you operate the VCR, you must aim the remote control at the VCR instead of the receiver.

Select a source with the SOURCE SELECT buttons on the remote control. Operate that source using the buttons below the SOURCE SELECT buttons.


IMPORTANT! If you choose a source on the receiver directly, the remote control will not operate that source. To operate a source with the remote control, the source must be selected using the remote control.

IMPORTANT! When you select CD or TAPE 1 on the remote control, the component will turn on and start playing automatically.


Operating the Component Already Selected

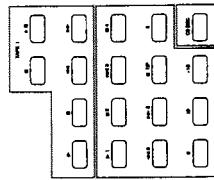



Turntable

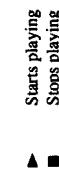



After pressing the PHONO button, you can perform the following operations on the remote:

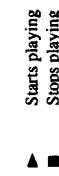



After pressing the CD button, you can perform the following operations on the remote:

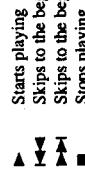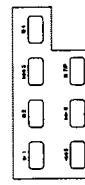

After pressing the CD button, you can perform the following operations on the remote:

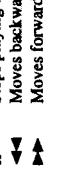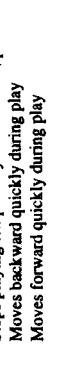


After pressing the TAPE 1 button, you can perform the following operations on the remote:

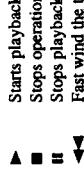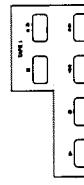

Troubleshooting

Operating the Component Not Currently Selected

When you want to operate one component while listening to another component (e.g., recording from a CD), use the buttons in the CONTROL section of the remote control. The CONTROL buttons allow you to use the operation buttons for the new component without affecting the component already playing.

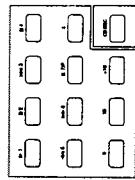


CD Player-Changer

After pressing the CD DISC button in the CONTROL section of the remote, you can perform the following operations on its remote:



1-6. P Select the number of the disk installed in the CD player-changer. Then continue to operate the CD player as shown on page 19.

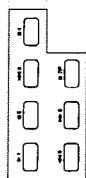

Use this chart to help you solve everyday operational problems. If there is any problem you cannot solve, contact your JVC service center.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Display window does not light up	Power cord not plugged in	Plug power cord into AC socket
No sound from speakers	Speaker wires not connected correctly	Check speaker wiring and reconnect if necessary
	SPEAKERS buttons not set correctly	Push the SPEAKERS buttons in or out as desired
	Incorrect SOURCE SELECT button was pressed	Select the correct audio source
Sound from one speaker only	Speaker wires not connected properly	Check speaker wiring and reconnect if necessary
	Balance control is set to one extreme	Adjust BALANCE control so that both speakers have sound
Continuous hiss or buzzing during FM reception	Incoming signal is too weak	Adjust antenna
Station is too far away	Select a new station	
Incorrect antenna used	Check with your dealer to be sure you have the correct antenna	
Antenna not connected properly	Check connections	
Occasional crackling noise during FM reception	Ignition noise from automobiles	Move the antenna further from automobile traffic
Howling during record playing	Turntable too close to speaker	Move speakers away from turntable
Remote control does not work	There is an obstruction in front of the REMOTE SENSOR on the receiver	Remove the obstruction
Batteries are weak		Replace batteries

RX-212BK

Specifications

Amplifier

Output Power
UK and Continental Europe
50 watts per channel, min. RMS,
both channels driven into 4 ohms
at 1 kHz with no more than 0.9%
total harmonic distortion.
(IEC 268-3/DIN)

40 watts per channel, min. RMS,
both channels driven into 8 ohms at
1 kHz with no more than 0.9% total
harmonic distortion (IEC 268-3/DIN)

40 watts, 8 ohms, 40 Hz to 20 kHz
with 0.8% total harmonic distortion.

50 watts per channel, min. RMS,
both channels driven into 8 ohms
at 1 kHz with no more than 0.9%
total harmonic distortion.
(IEC 268-3/DIN)

Total Harmonic Distortion (8 ohms, 1 kHz)

UK and Continental Europe
Other Countries

0.08%* at 30 watts output
0.08%* at 50 watts output

Frequency Response (8 ohms)

CD / TAPE 1 / TAPE 2

20 Hz to 20 kHz (±1 dB)
20 Hz to 20 kHz (±1 dB)

PHONO

CD / TAPE 1 / TAPE 2

20 Hz to 20 kHz (±1 dB)
20 Hz to 20 kHz (±1 dB)

RIAA Phono Equalization

CD / TAPE 1 / TAPE 2

±1 dB (20 Hz to 20 kHz)

Input Sensitivity / Impedance (1 kHz)

PHONO

CD / TAPE 1 / TAPE 2

2.5 mV / 47 k ohms
200 mV / 47 k ohms

Tone Control Range

BASS (at 100 Hz) ±8 dB
TREBLE (at 10 kHz) ±8 dB

FM Tuner (IHF)

Tuning Range
87.5 MHz to 108.0 MHz

Usable Sensitivity

10.8 dBf (0.95 µV / 75 ohms)

50 dB Quieting Sensitivity

Monaural
Stereo

16.3 dBf (1.8 µV / 75 ohms)
38.3 dBf (22.5 µV / 75 ohms)

Signal-to-Noise Ratio (IHF-A weighted/DIN)

Monaural
Stereo

80 dB at 85 dBf / 73 dB at 85 dBf
73 dB at 85 dBf / 64 dB at 85 dBf

Total Harmonic Distortion (IHF/DIN)	Monaural Stereo	0.15% at 1 kHz / 0.1% at 1 kHz 0.2% at 1 kHz / 0.3% at 1 kHz
Stereo Separation at REC OUT		40 dB at 1 kHz
Capture Ratio (IHF)		1.5 dB (10 mV / 300 ohms)
Alternate Channel Selectivity (IHF/DIN)		60 dB (±400 kHz) / 55 dB (±300 kHz)
Frequency Response		30 Hz to 15 kHz (-0.5 dB, -3 dB)
'Tuning Range	U.K. and Continental Europe Other Countries	522 kHz to 1,629 kHz (MW) 144 kHz to 353 kHz (LW) 531 kHz to 1,602 kHz / 530 kHz to 1,600 kHz (selectable)
Usable Sensitivity (MW/LW)	Loop antenna External antenna	300 µV/m / 600 µV/m ** 30 µV / 100 µV **
Signal-to-Noise Ratio (MW/LW)		50 dB ** (100 mV / m)
Power Requirements	Continental Europe Other Countries	AC 230V ∙, 50 Hz AC 240V ∙, 50 Hz AC 110V/127V/220V/240V ∙,
Power Consumption	Europe (except U.K.) U.K. Other Countries	180 watts 470 watts 160 watts 50/60 Hz
Dimensions (W x H x D)		17 3/16 x 5 x 13 7/16 inches 435 x 126 x 341 mm
Weight		14.4 lbs 6.5 kg

* Measured by JVC Audio Analysis System.
** Measured at 1000 kHz or 999 kHz (MW), at 245 kHz (LW)

Designs and specifications subject to change without notice.

Description of Major ICs

■ MN71202JPY1 (IC401) : System Controller

1. Terminal Layout

V _{DD}	1	64	OSC
KIN 0	2	63	OSC
KIN 1	3	62	GND
KIN 2	4	61	NC
KIN 3	5	60	GND
KOUT 0	6	59	T.MUTE
KOUT 1	7	58	S.MUTE
KOUT 2	8	57	AC
KOUT 3	9	56	SURR.
KOUT 4	10	55	BAND1
KOUT 5	11	54	BAND0
KOUT 6	12	53	LW.9k/10k
D1	13	52	TEST
D2	14	51	VOL.UP
D3	15	50	VOL.DOWN
D4	16	49	C.LINK OUT
D5	17	48	C.LINK IN
V _{PP}	18	47	TUNED
S1	19	46	STEREO
S2	20	45	INH
S3	21	44	REM
S4	22	43	RESET
S5	23	42	DO
S6	24	41	DI
S7	25	40	CK
S8	26	39	CE
S9	27	38	DATA
S10	28	37	STB
S11	29	36	CLK
S12	30	35	
VOL IND	31	34	GND
STANDBY/RECEIVED	32	33	SURROUND

MN71202JPY1

2. Key matrix

	KEY IN 0 (pin2)	KEY IN 1 (pin3)	KEY IN 2 (pin4)	KEY IN 3 (pin5)
KEY OUT 0 (pin6)	TAPE 1	TAPE2 MONITOR	F.UP	F.DOWN
KEY OUT 1 (pin7)	MEMORY	SURROUND	4	5
KEY OUT 2 (pin8)	6	10	+ 10	—
KEY OUT 3 (pin9)	CD	PHONO	FM	AM
KEY OUT 4 (pin10)	FM MODE	AUTO MEMORY	1	2
KEY OUT 5 (pin11)	3	7	8	9

3. Pin Function Description

Pin NO.	symbol	I/O	Function and Operations	Pin NO.	symbol	I/O	Function and Operations
1	VDD	--	Power supply	33	SURROUND	O	Surround indication output
2	KIN 0	I	Key matrix input	34	GND	--	Connected to GND
3	KIN 1	I	Key matrix input	35			
4	KIN 2	I	Key matrix input	36	CLK	O	Clock to the source selector(IC321)
5	KIN 3	I	Key matrix input	37	STB	O	Strobe signal for DATA
6	KOUT 0	O	Key matrix output	38	DATA	O	Selector control data output
7	KOUT 1	O	Key matrix output	39	CE	O	Chip select signal
8	KOUT 2	O	Key matrix output	40	CK	O	Clock to transmit data for PLL Synthesizer
9	KOUT 3	O	Key matrix output	41	DI	I	Data from PLL synthesizer
10	KOUT 4	O	Key matrix output	42	DO	O	Data to PLL synthesizer
11	KOUT 5	O	Key matrix output	43	RESET	I	Reset signal input
12	KOUT 6	O	Key matrix output	44	REM	I	Remote signal input
13	D1	O	FL grid control output	45	INH	I	Inhibit input
14	D2	O	FL grid control output	46	STEREO	I	Detect the signal for 'STEREO' indication
15	D3	O	FL grid control output	47	TUNED	I	Detect the signal for 'TUNED' indication
16	D4	O	FL grid control output	48	C.LINK IN	I	DCS signal input
17	D5	O	FL grid control output	49	C.LINK OUT	O	DCS signal output
18	V _{PP}	--	Power supply for FL display	50	VOL.DOWN	O	Volume control signal
19	S1	O	FL segment output	51	VOL.UP	O	Volume control signal
20	S2	O	FL segment output	52	TEST	--	For TEST
21	S3	O	FL segment output	53	LW.9k/10k	--	9k/10k controller
22	S4	O	FL segment output	54	BAND 0	--	BAND 0
23	S5	O	FL segment output	55	BAND 1	--	BAND 1
24	S6	O	FL segment output	56	SURR.	O	Surround control signal
25	S7	O	FL segment output	57	AC	--	Non connection
26	S8	O	FL segment output	58	S.MUTE	O	Source mute control signal
27	S9	O	FL segment output	59	T.MUTE	O	Tuner muting signal
28	S10	O	FL segment output	60	GND	--	Connected to GND
29	S11	O	FL segment output	61	NC	--	Non connection
30	S12	O	FL segment output	62	GND	--	GND
31	VOL.IND	O	Volume indication signal output	63	osc	--	Oscillation terminal
32	STA./RECEI.	O	STANDBY/RECEIVED indication output	64	osc	--	Oscillation terminal

■ LC7210 (IC102) : PLL Synthesizer


1. The main function descriptions

- (1) It makes the local oscillation frequency by the control data from IC401.
- (2) Decode the control signal and transmit the signal for receiving conditions.
- (3) For the best tuning, count the internal-frequency and transmit the data to IC401.

2. Terminal Layout

X IN	1	X OUT	24
CE	2	VSS	23
DI	3	PD2	22
CK	4	PD1	21
DO	5	VDD	20
SYC	6	FM-OSC	19
TUNED	7	AM-OSC	18
STOP IN	8	IFreq	17
POWER	9	FMIIF	16
QSC	10	AMIF	15
MONO	11	LW	14
FM	12	MW	13

3. Block Diagram

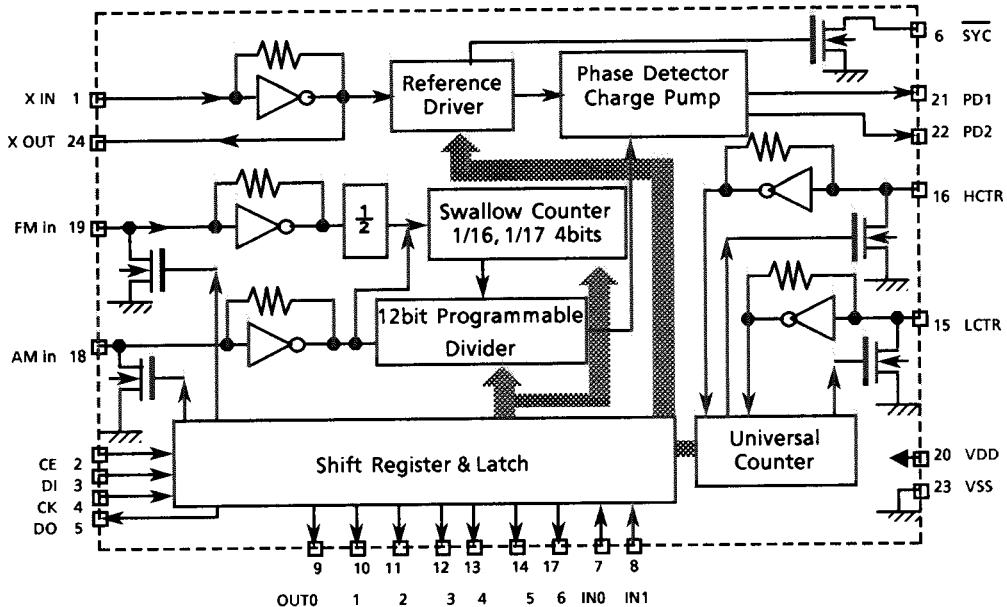

4. Pin Function Description

Pin No.	Symbol	I/O	Functions and Operations
1,24	X in, X out	I/O	Crystal oscillator (7.2MHz).
2	CE	I	Fix the chip enable to "H" when inputting (DI) and outputting (DO) the serial data.
3	DI	I	Receive the control data from the controller (IC401).
4	CK	I	This clock is used to synchronize data when transmitting the data of DI and DO.
5	DO	O	Transmit the data from LC7218 to the controller which is synchronized with CL.
6	SYC	-	Not used.
7	Tuned	I	Receive the tuned signal from IC104 (LA1266A).
8	Stop in	-	Connect to GND.
9	POWER	-	Connect to GND.
10	QSC	-	Not used.
11	MONO	O	It is "H" on FM-monaural, "L" on FM-Stereo.
12	FM	O	It is "L" on FM mode.
13	MW	O	It is "L" on MW mode.
14	LW	O	It is "L" on LW mode.
15	AM-IF	I	Universal counter input for AM-IF from IC104 (LA1266A).
16	FM-IF	I	Universal counter input for FM-IF from IC104(LA1266A).
17	IF REQ	O	Output the "IF-signal request" to IC104 when the pin-7 (tuned in) goes to "H".
18	AM OSC	I	Input the local oscillator signal of AM.
19	FM OSC	I	Input the local oscillator signal of FM.
20	V _{DD}	-	This is a terminal of power supply.
21	PD1	O	PLL charge pump output: When the local oscillator signal frequency is higher than the reference frequency high level signals will output. When it is lower than the reference frequency, low level signals will output. When it is same as reference frequency signals, it will be floating.
22	PD2	-	Not used.
23	Vss	-	Connect to GND.

■ LA1266A (IC104) : FM AM IF AMP & detector


1. The main function descriptions

- (1) Amplify and detect of FM intermodulation frequencies.
- (2) It has local oscillator and mixer for AM, and amplify the AM-IF signal.

2. Terminal Layout

FM-in	1	24	AM-OSC out
Bypass	2	23	AM-OSC
Bypass	3	22	V.ref
GND	4	21	AM-in
FM-DET	5	20	AM-Mix
FM-DET	6	19	AM-AGC
Vcc	7	18	AM-IF
SIG	8	17	AM Adj.
FM-AFC	9	16	FM Adj
FM-IF	10	15	AM out
AM-IF	11	14	NAR SM
FM-out	12	13	STRQ

3. Block Diagram

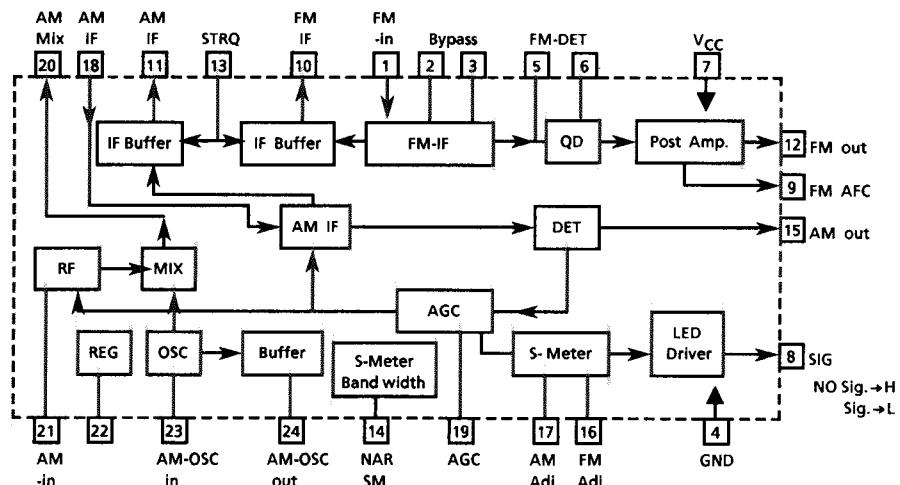

4. Pin Function Description

Pin No.	Symbol	I/O	Functions and Operations
1	FM in	I	This is an input terminal of FM IF Signal.
2,3	Bypass	--	Bypass of FM IF Amp.
4	GND	--	This is the device ground terminal.
5,6	FM DET	--	FM detect transformer.
7	Vcc	--	This is the power supply terminal.
8	SIG	O	When the set is tuning ,this terminal becomes "L".
9	FM AFC	O	This is an output terminal of voltage for FM - AFC.
10	FM IF	O	When the signal of IF REQ of IC102(LC7218) appear, the signal of FM IF output.
11	AM IF	O	When the signal of IF REQ of IC102(LC7218) appear, the signal of AM IF output.
12	FM out	O	FM detection output.
13	STRQ	I	The IF-signals come out from pin10 (FM-IF) or pin11 (AM-IF) while this terminal going to "High".
14	NAR SM	--	Control the Band-width of signal meter.
15	AM out	O	AM detection output.
16	FM Adj	--	For adjust the stop level (or mute level) of FM.
17	AM Adj	--	For adjust the stop level (or mute level) of AM.
18	AM-IF	I	Input of AM IF Signal.
19	AM-AGC	I	This is an AGC voltage Input terminal for AM.
20	AM-MIX	O	This is an output terminal for AM mixer.
21	AM-IN	I	This is an input terminal for AM RF Signal.
22	V.REF	--	Register value between pin9 and pin22 desides the frequency width of the input signal.
23	AM-OSC	--	This is a terminal of AM Local oscillation circuit.
24	AM-OSC out	O	AM Local Oscillation Signal output.

RX-212BK

■ LA3401 (IC105) : FM MPX Detector


1. The main function descriptions

- (1) Detect the FM multiplex signal (Stereo signal).
- (2) When receiving FM stereo signal, it outputs the signal for indication.
- (3) AM / FM audio amplifier.

2. Terminal Layout

AM in	1
FM in	2
Pilot	3
Sepa.	4
L out	5
L In	6
R In	7
R out	8
Mute	9
FM/AM	10
Mute out	11
VCC	22
VCO	21
LPF	20
LPF	19
PLLIN	18
LPF	17
LPF	16
Mute in	15
Mute Cont	14
STEREO	13
GND	12

3. Block Diagram


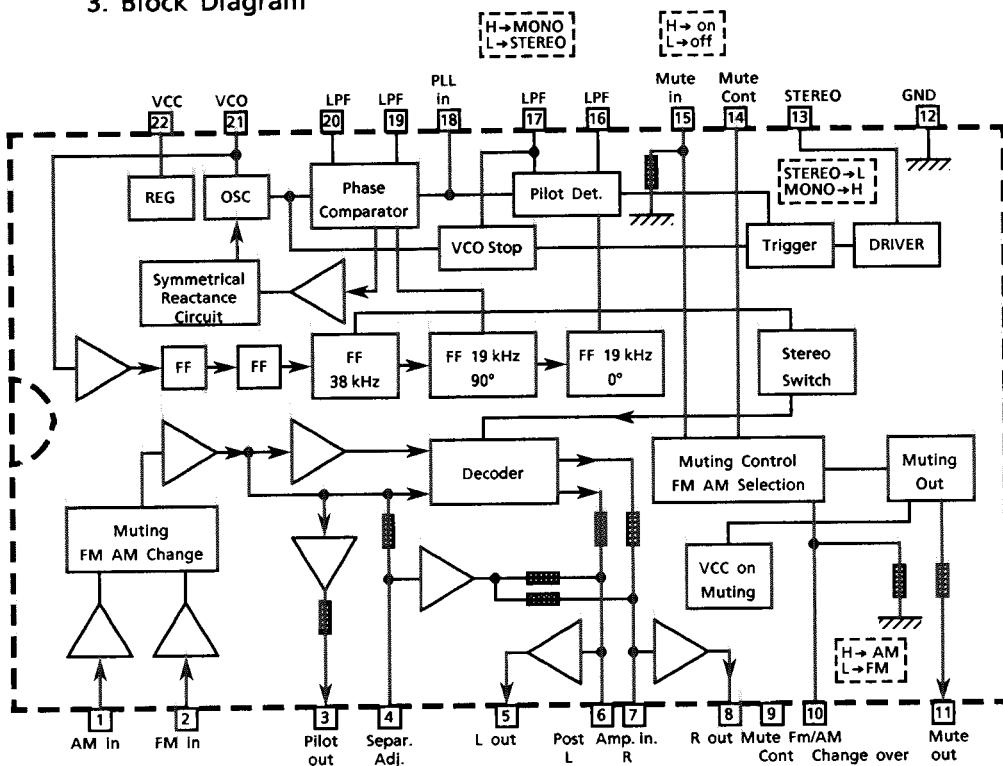


4. Pin Function Description


Pin No.	Symbol	I/O	Functions and Operations
1	AM in	I	This is an input terminal for AM detection signal.
2	FM in	I	This is an input terminal for FM detection signal.
3	Pilot out	O	Output of MPX pilot signal (Connect to Pin18).
4	Sepa. Adj.	--	Separation adjustment.
5	L. out	O	Left channel signal output.
6	L	I	Input terminal of the left channel post-amplifier
7	R	I	Input terminal of the right channel post-amplifier
8	R out	O	Right channel signal output
9	Mute Cont	--	The mute time is controlled by the connected capacitor when turning the power switch on.
10	FM / AM	I	Change over the FM / AM input. "H" : AM, "L" : FM
11	Mute out	--	Not used
12	GND	--	Ground terminal.
13	Stereo	O	Stereo indicator output. Stereo : "L", Mono : "H"
14	Mute Cont	--	The mute time is controlled by the connected capacitor when changing over the FM / AM .
15	Mute in	I	Mute signal input. "H" : Mute on, "L" : Mute off.
16	LPF	--	Low pass filter of pilot detector.
17	LPF	--	While this terminal goes to "H", the VCO stop.
18	Pilot in	I	Pilot signal input
19	LPF	--	Low-pass filter of PLL.
20	LPF	--	Low-pass filter of PLL.
21	VCO	I	Voltage controlled oscillator terminal.
22	V _{CC}	--	Power supply.

Internal Block Diagram of Other ICs

■ TA7317P (IC901) : Protector

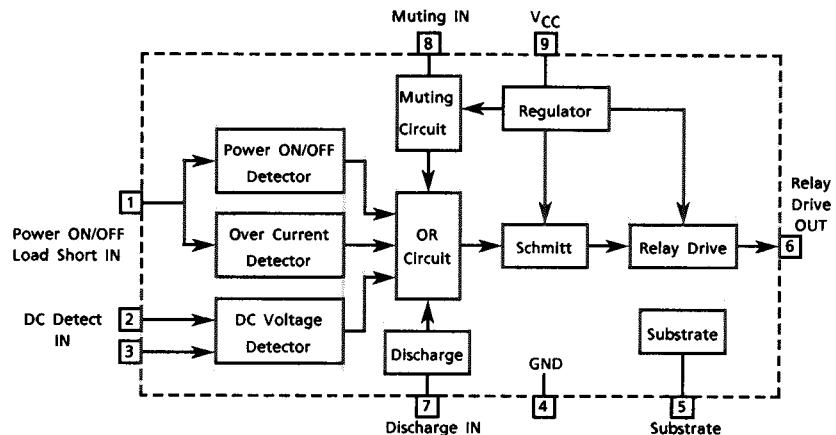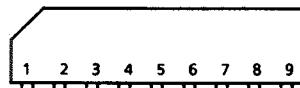


■ SPS-420-1 (IC402) : Receiver for remote controller

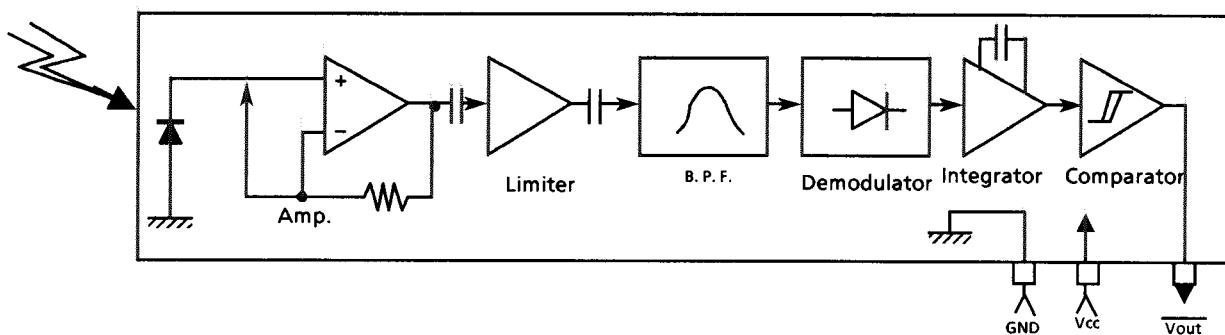


■ MN1280(P.Q) (IC491) : Reset IC

Block Diagram

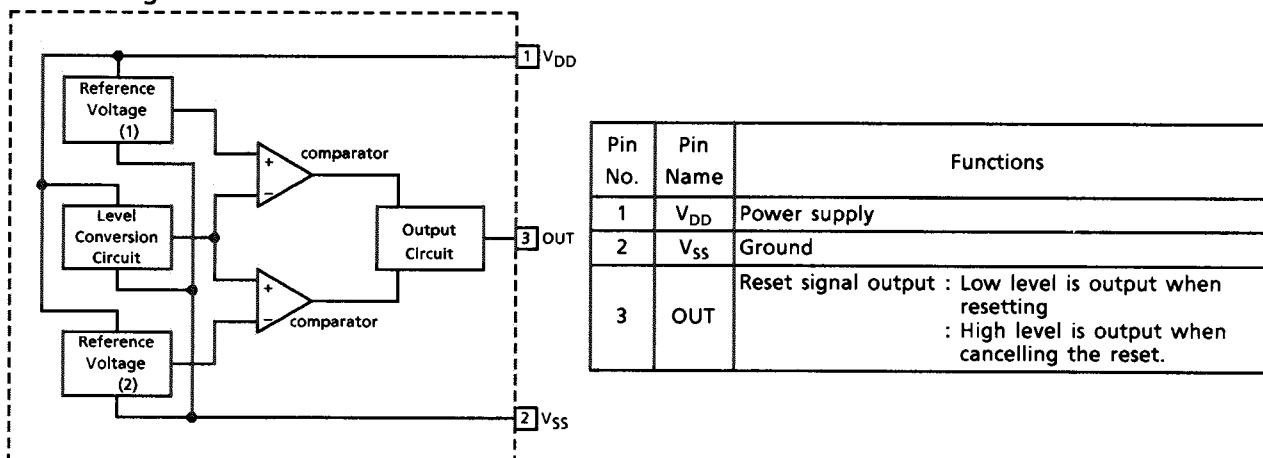


■ NJM4560DD(IC701): Dual OP amp.

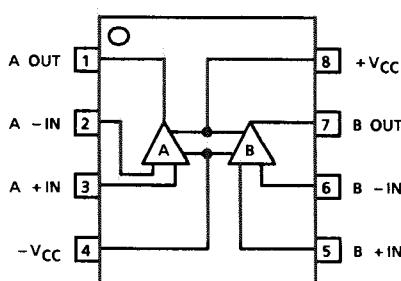


RX-212BK

■ LB1639-CV (IC361) : Motor Driver

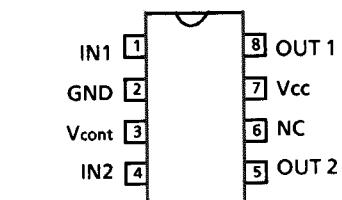


IN 1	IN 2	OUT 1	OUT 2	MOTOR
H	L	H	L	CLOCKWISE
L	H	L	H	COUNTER-CLOCKWISE
H	H	OFF	OFF	WAITING
L	L	OFF	OFF	WAITING

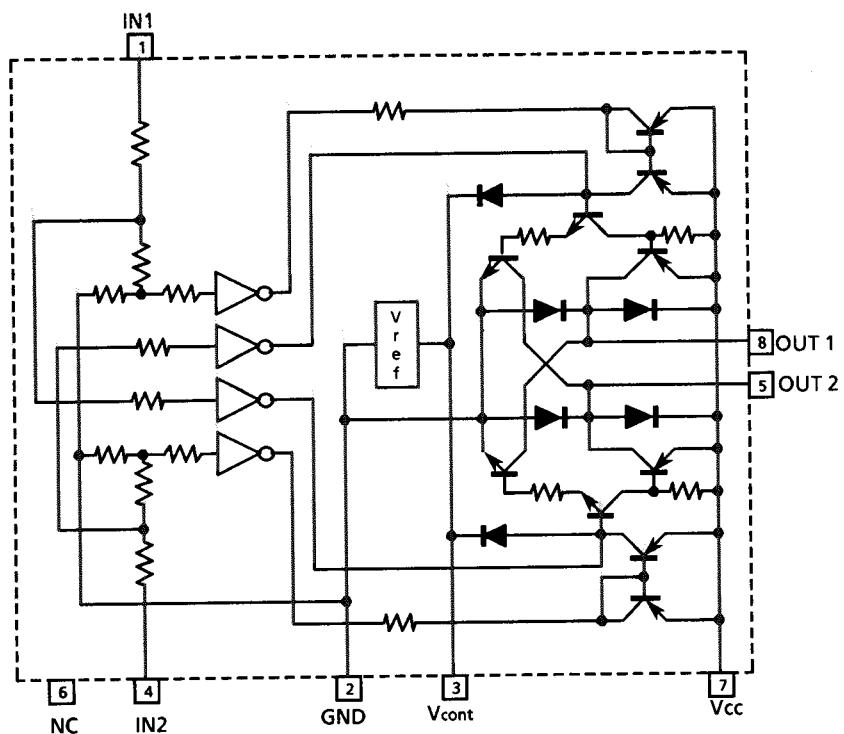

Internal Connections of the FL Display

■ ELU0001-143 : FL401

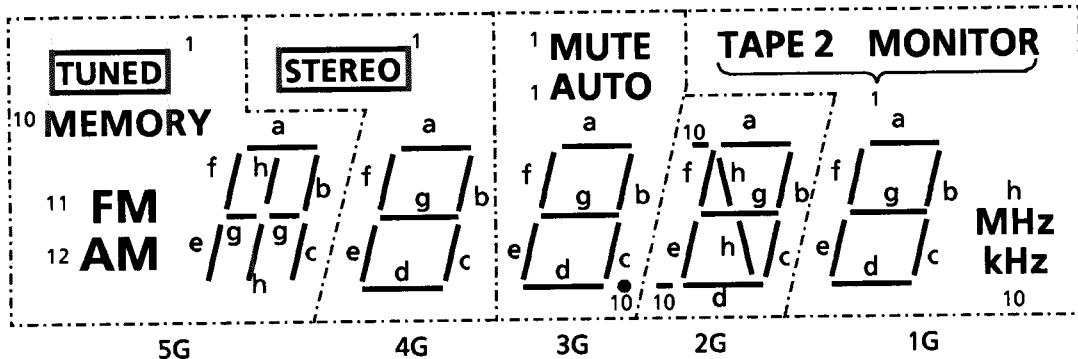

Pin Connection

PIN NUMBER	1	2	3	4	5	6	7	8	9	10	11	12	13	14									
ELECTRODE	F1	F1	NP	P12	P11	P10	Ph	Pg	Pf	Pe	Pd	Pc	Pb	Pa									
PIN NUMBER							15	16	17	18	19	20	21	22	23	24	25	26	27	28			
ELECTRODE							P1	NP	NP	NP	NP	NP	5G	4G	3G	2G	1G	NP	F2	F2			

Note F : Filament, G : Grid, P : Element, NP : No Pin,

Disassembly Procedures

■ Removing the top cover

1. Remove the 4 screws fastening both sides of the top cover, and the 2 screws fastening the rear sides.
2. Remove the top cover.

■ Removing the bottom cover

1. Remove the 17 screws ①, ②.
2. Remove the bottom cover.

■ Removing the front panel assembly

1. Remove the top cover.
2. Remove the 6 screws ③, ④ fastening top and bottom of the front panel.
3. Disconnect the connectors P101, P702, P807, P806 and P805.
4. Remove the master volume knob and its connectors.
5. Remove the front panel assembly.

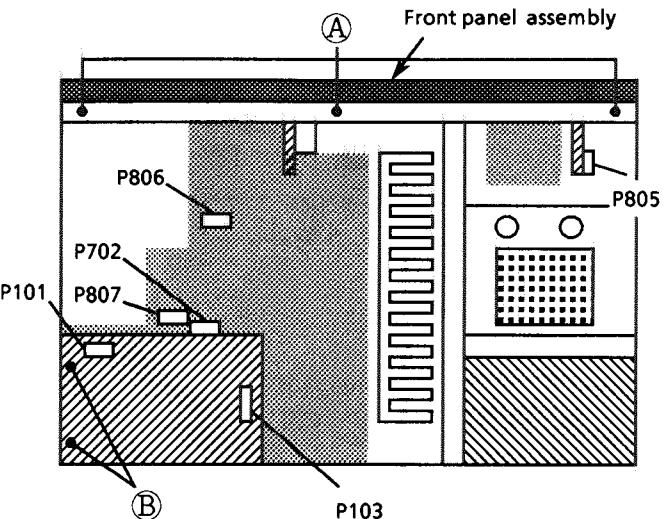


Fig 1. Top View

■ Removing the tuner p.c. board

1. Remove the top cover.
2. Disconnect the connectors P101 and P103.
3. Remove the 2 screws ⑤.
4. Remove the 4 screws ⑥ (Fig 2).

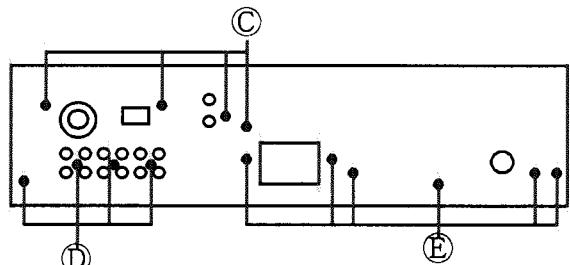


Fig 2. Rear View

■ Removing the power transistor

1. Remove the bottom cover.
2. Unsolder the broken transistor.
3. Remove the screw fastening it.
4. Remove it.

■ Removing the rear panel

1. Remove the top cover.
2. Remove the screws ⑦ (Fig 3).
3. Remove the screws ⑧, ⑨ and ⑩ (Fig 2).


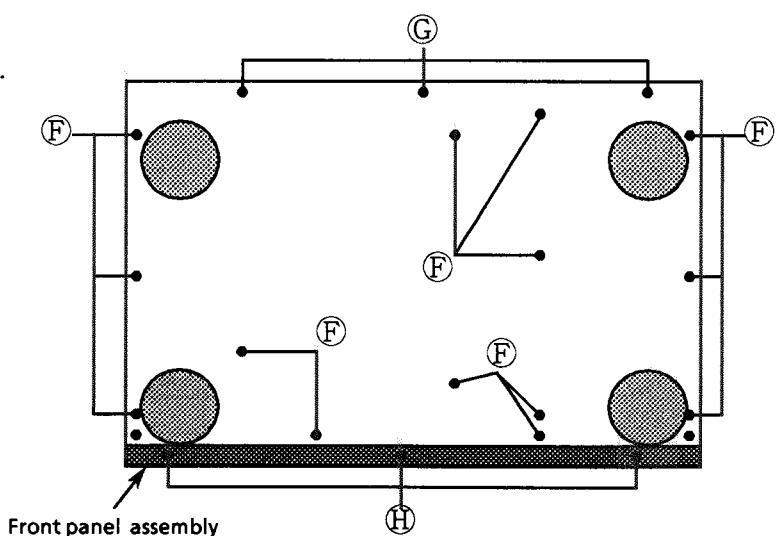


Fig 3. Bottom Cover

Adjustment Procedures

■ Tuner section

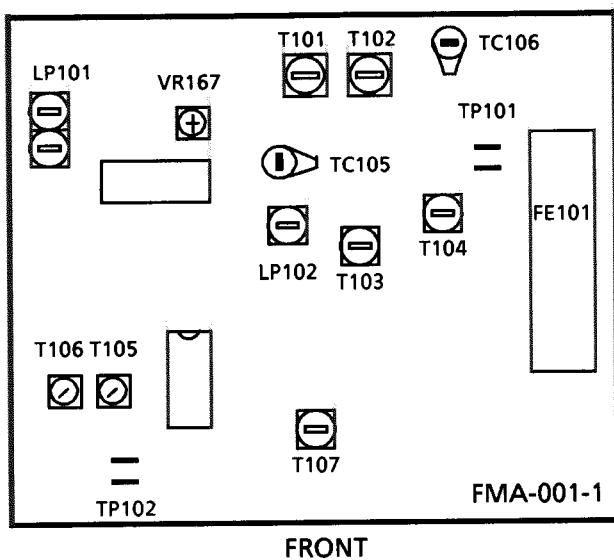

Tuning range

Area	Range		
	LW (kHz)	MW (kHz)	FM (MHz)
East Europe	144~353	522~1629	87.5MHz~108MHz
Continental Europe, the U.K.			
Australia	—		
Universal type (AM Channel space 9kHz)	—	531~1602	
Universal type (AM Channel space 10kHz)	—	530~1600	

(1) Tuning voltage

Confirm the voltages in the table below at TP101.

If the voltages are not satisfied, replace T103 for MW or T104 for LW or FE101 for FM.

FM Tuning voltage (Unit : V)

Area	Frequency			
	64.0MHz	74.0MHz	87.5MHz	108MHz
East Europe	—	—	—	—
the U.K., Continental Europe, Australia, Universal	—	—	1.6 ± 1.0 (V)	8.0 ± 1.0 (V)

AM Tuning voltage (Unit : V)

Area	Frequency (MW)						Frequency (LW)		
	522KHz	530KHz	531KHz	1600KHz	1602KHz	1629KHz	144kHz	290kHz	353kHz
East Europe	—	—	—	—	—	—	—	—	—
the U.K., Continental Europe	0.9 ± 0.2	—	—	—	—	7.5 ± 0.8	0.8 ± 0.2	—	7.7 ± 0.6
Australia	0.9 ± 0.2	—	—	—	—	7.5 ± 0.8	—	—	—
Universal (Chanel space9kHz)	—	—	0.9 ± 0.2	—	7.2 ± 0.7	—	—	—	—
Universal (Chanel space10kHz)	—	0.9 ± 0.2	—	7.2 ± 0.7	—	—	—	—	—

(2) FM center meter

Receive a broadcast by using the function of 'AUTO STOP'.

Adjust T105 (detector coil) so that the voltage at TP102 becomes $0 \pm 1.5\text{mV}$.
(T106 is used to minimize the distortion of output on the production line.)

(3) FM separation

Receive a stereo signal.

Adjust VR 167 so that channel separation becomes maximum.

(4) MW Tracking

Adjust T101 (antenna coil) to obtain the best receiving sensitivity on 603kHz.


Adjust TC105 (antenna trimmer) to obtain the best receiving sensitivity on 1404kHz.

(5) LW Tracking

Adjust T102 (antenna coil) to obtain the best receiving sensitivity on 164kHz.

Adjust TC106 (antenna trimmer) to obtain the best receiving sensitivity on 353kHz.


Power Amplifier Adjustment Procedures

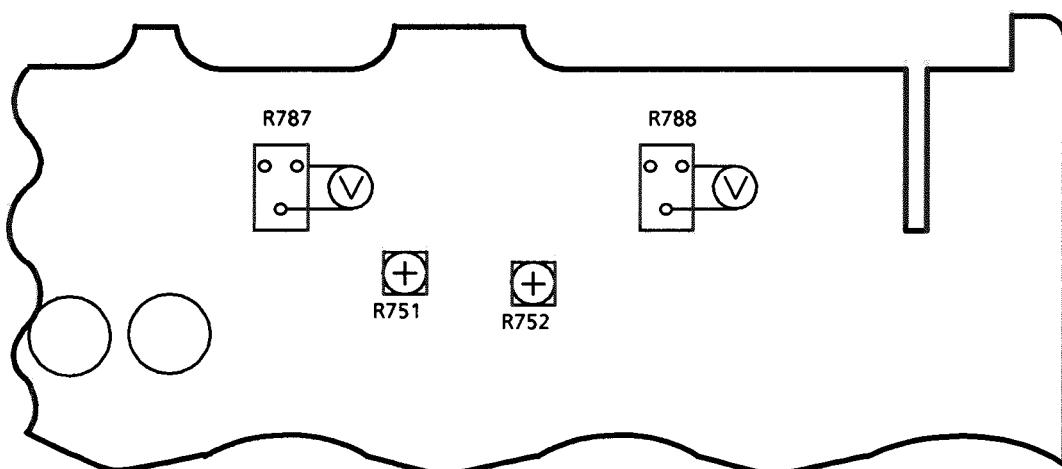


■ Idling Current

- (1) Set the volume control to minimum during this adjustment.
- (2) Turn R751 and R752 fully counterclockwise before the power switch on.
- (3) Always start from cold, and allow 10 minutes to warm up before adjustment.
If the heatsink is already warm from previous use, the correct adjustment can not be made.
- (4) Connect a DC voltmeter to R787 resistor's leads for left channel,
or to R788 for right channel.
- (5) Adjust R751 for left channel, or R752 for right channel,
so that the DC voltmeter becomes $2\text{mV} \sim 7\text{mV}$.

Block Diagram

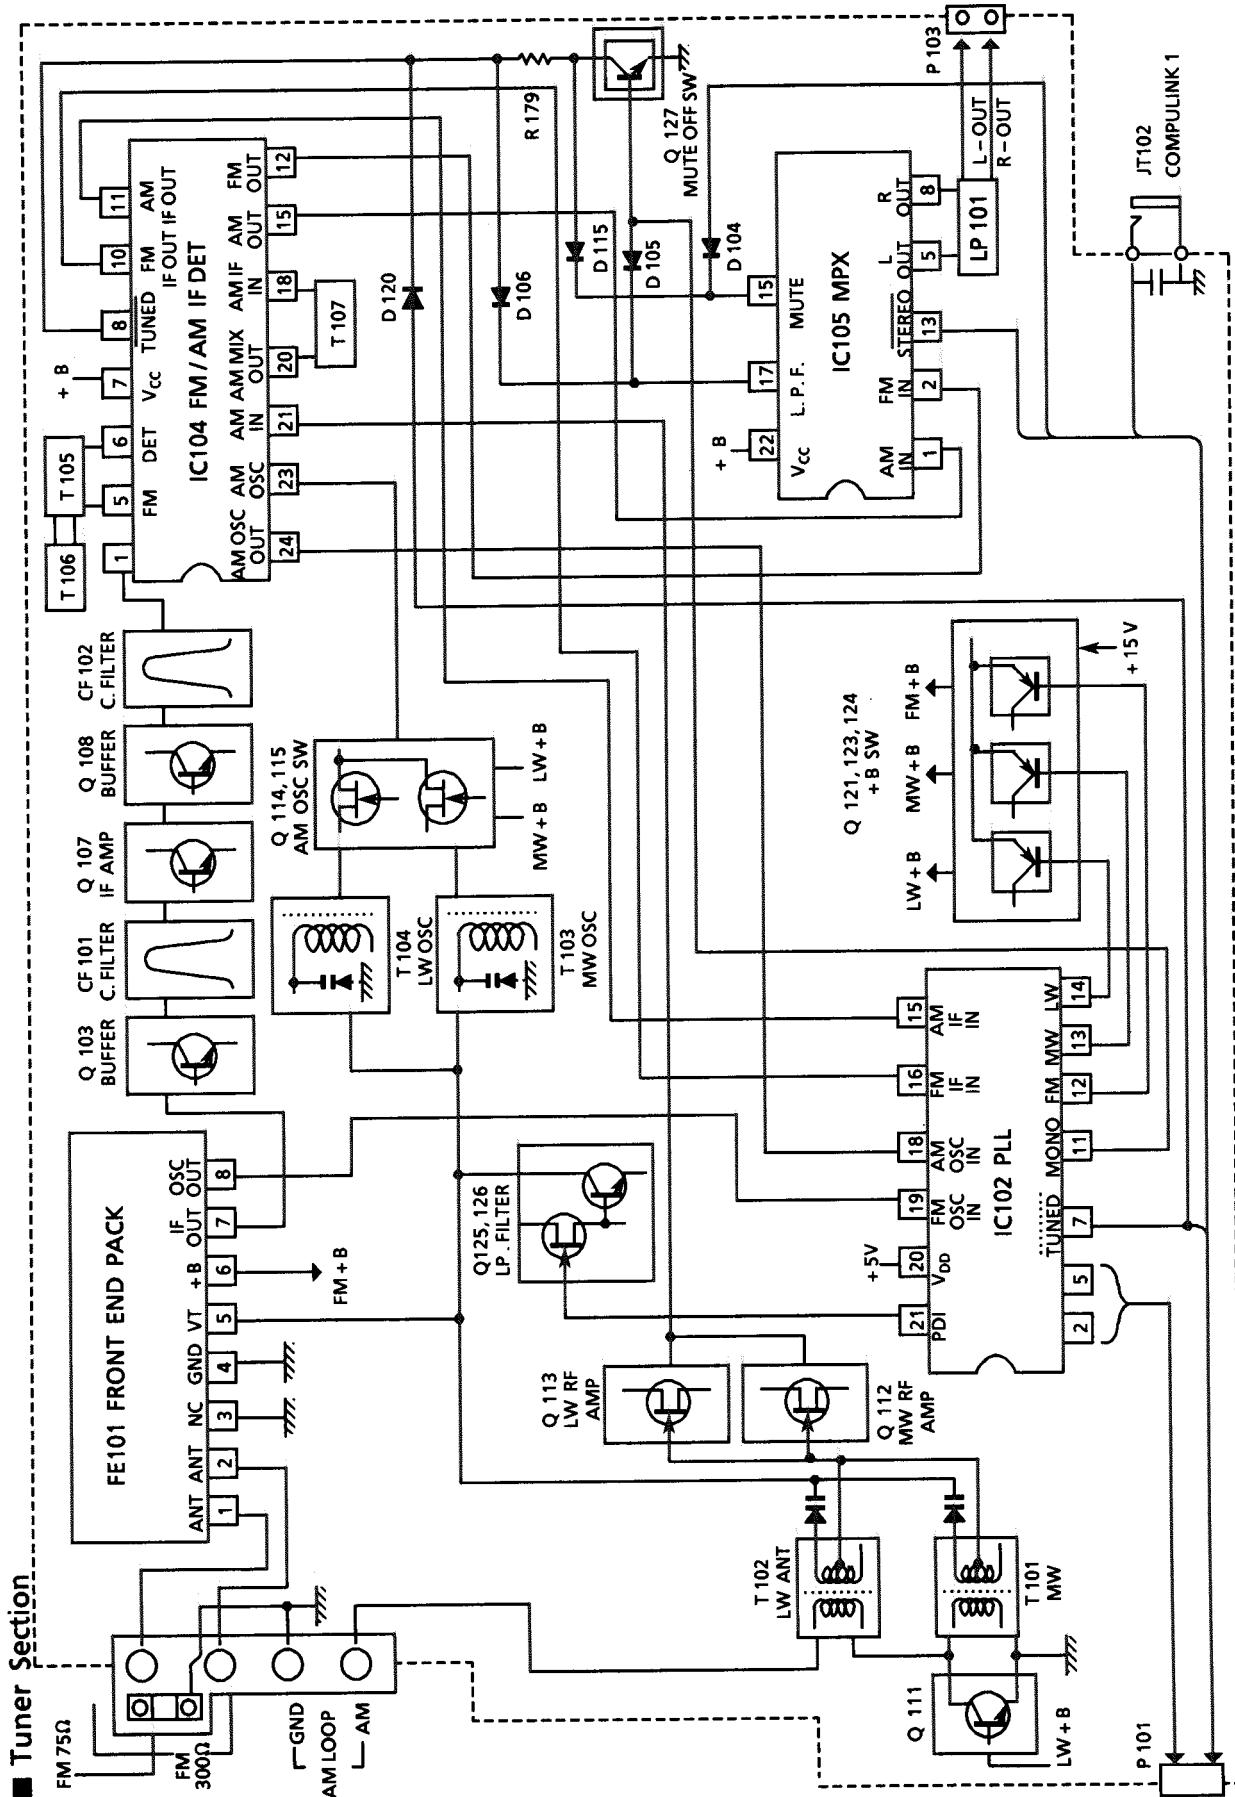


P-S.D(1)-a

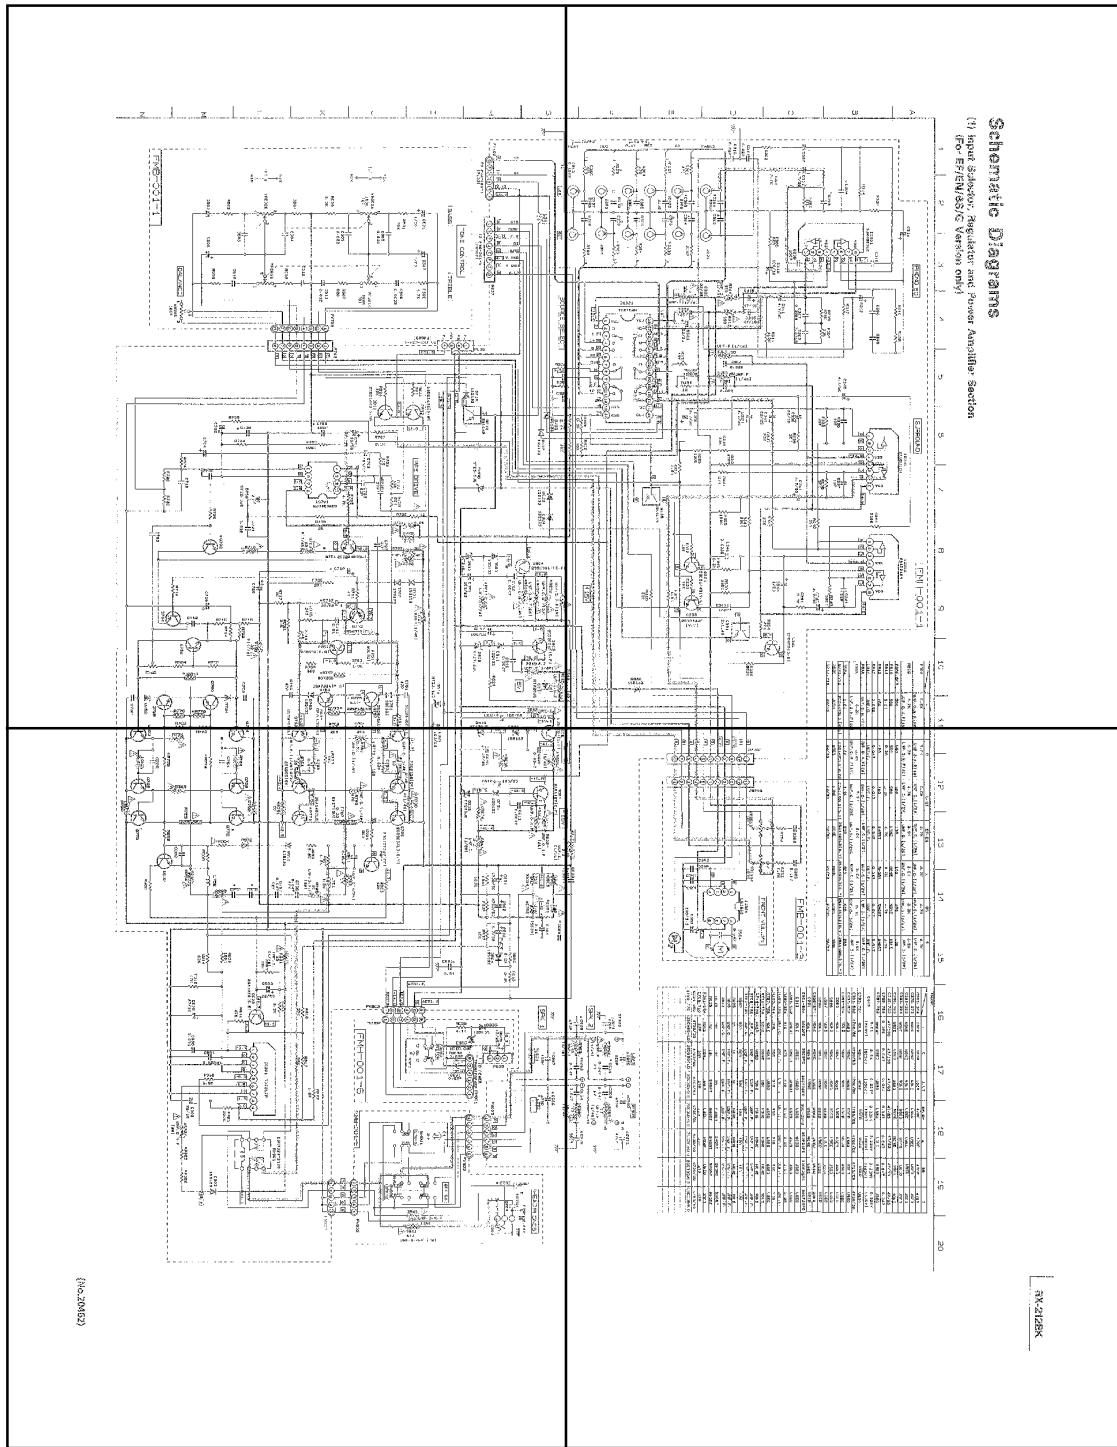


P-S.D(1)-c


P-S.D(1)-d

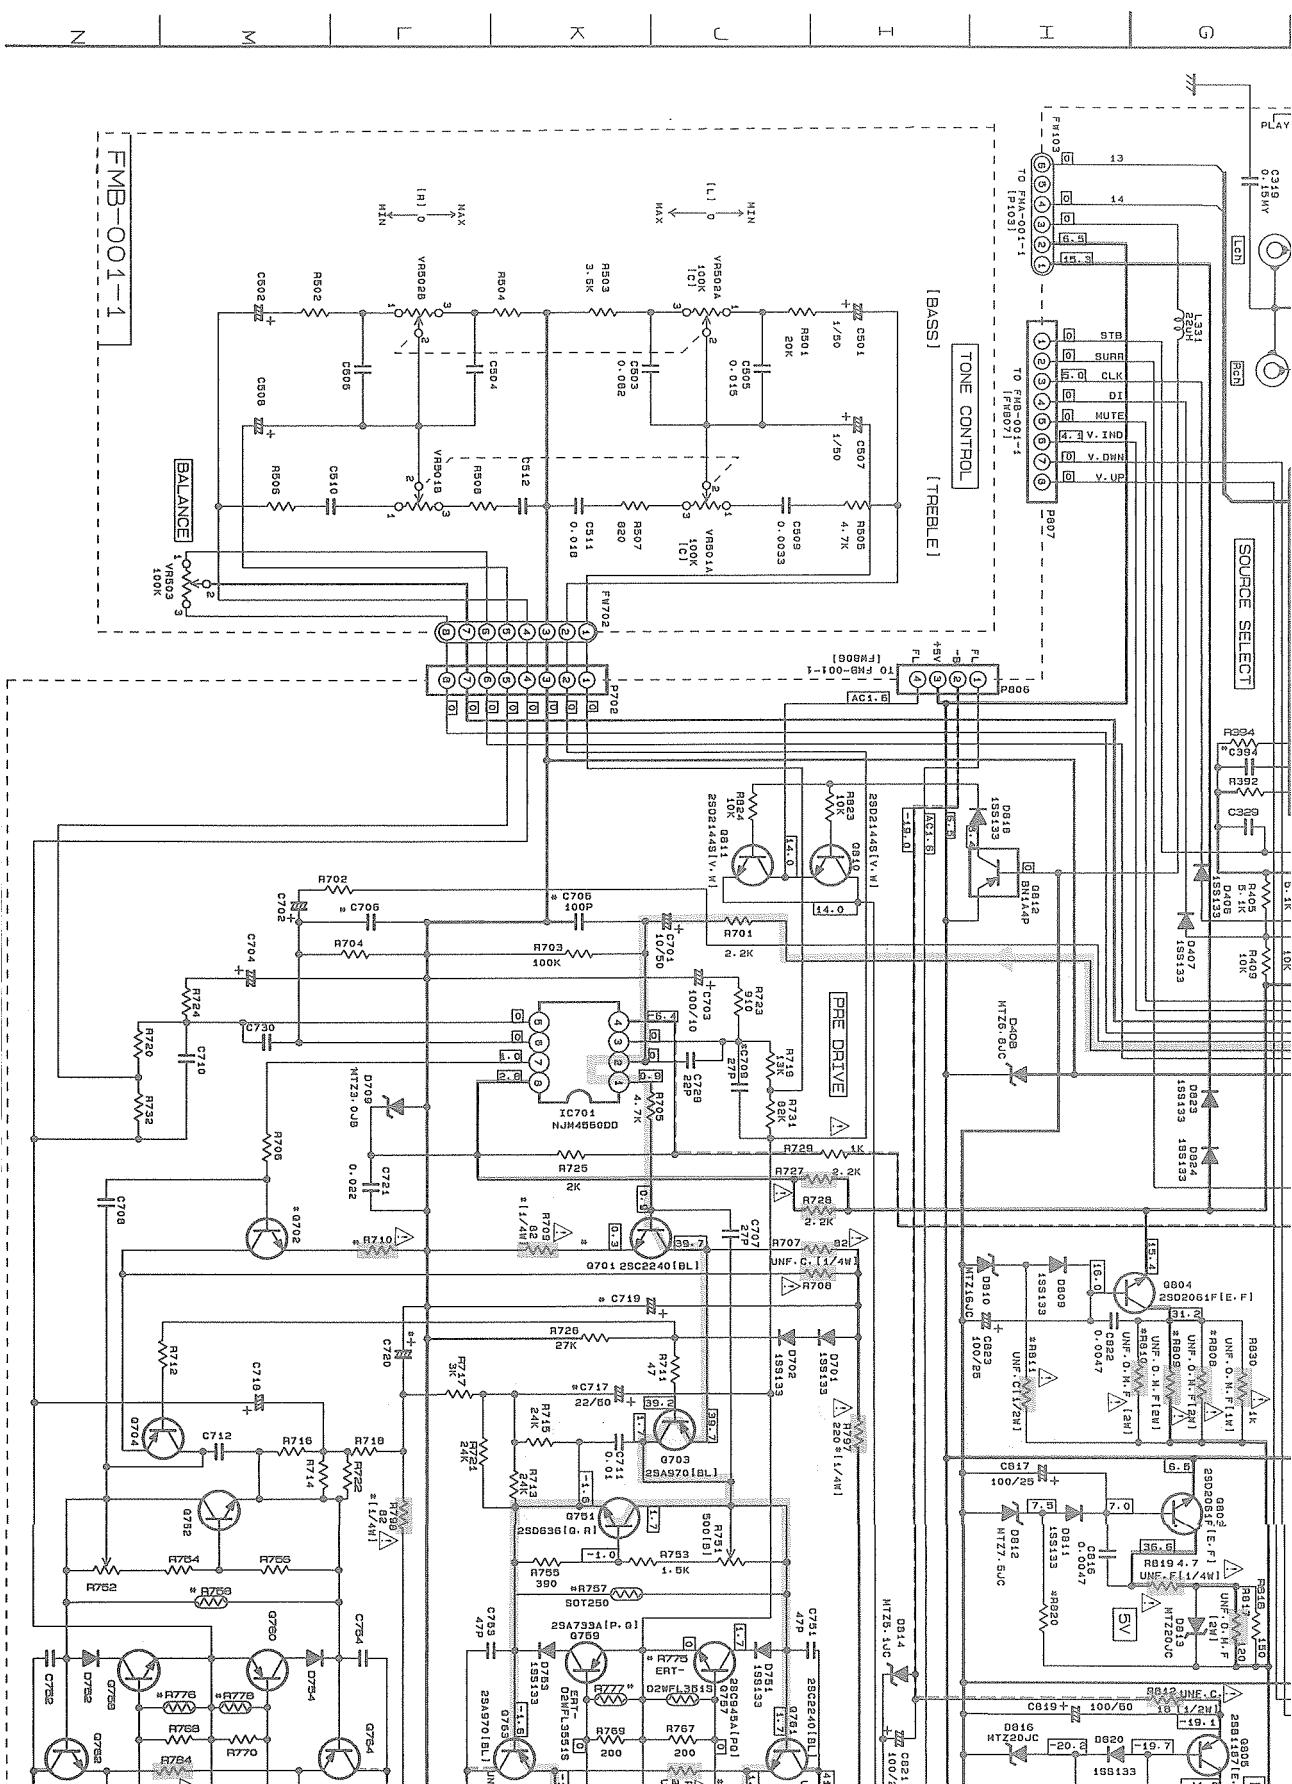


Schematic Diagrams

(1) Input Selector, Regulator and Power Amplifier Section (For EF/EN/BS/G Version only)

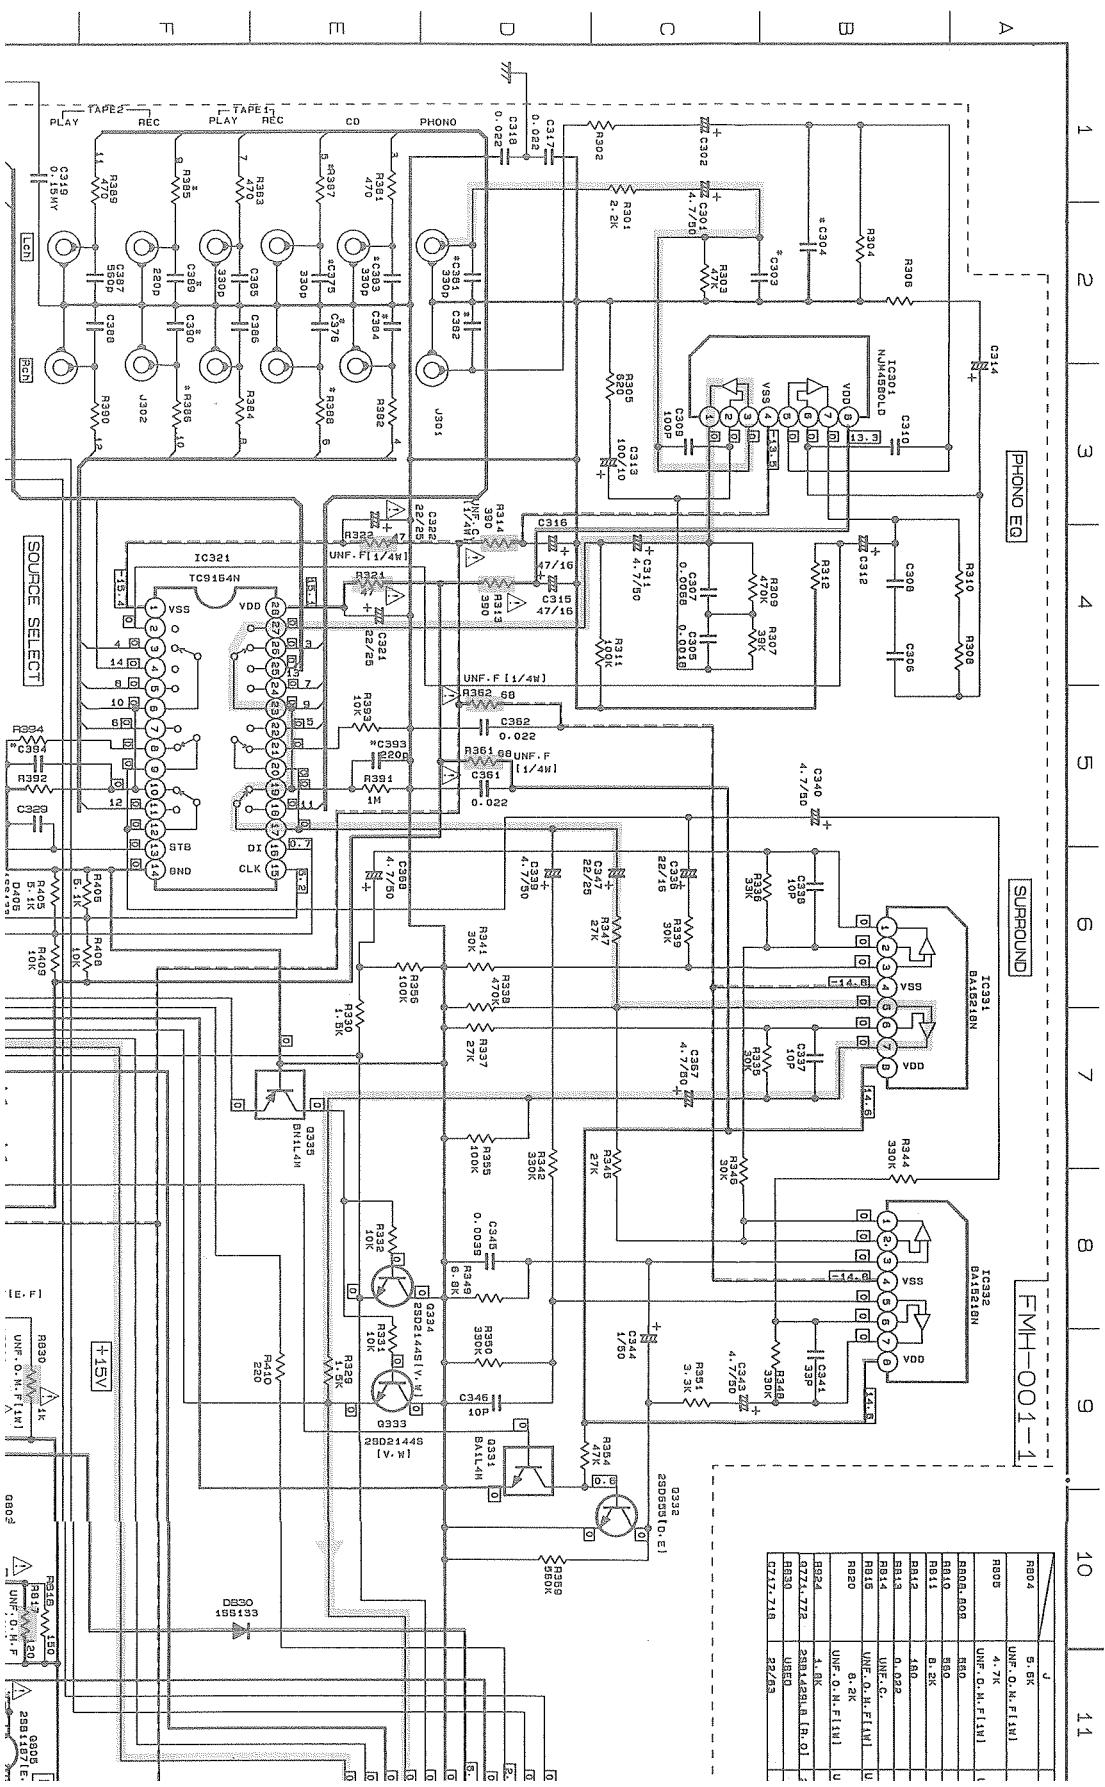


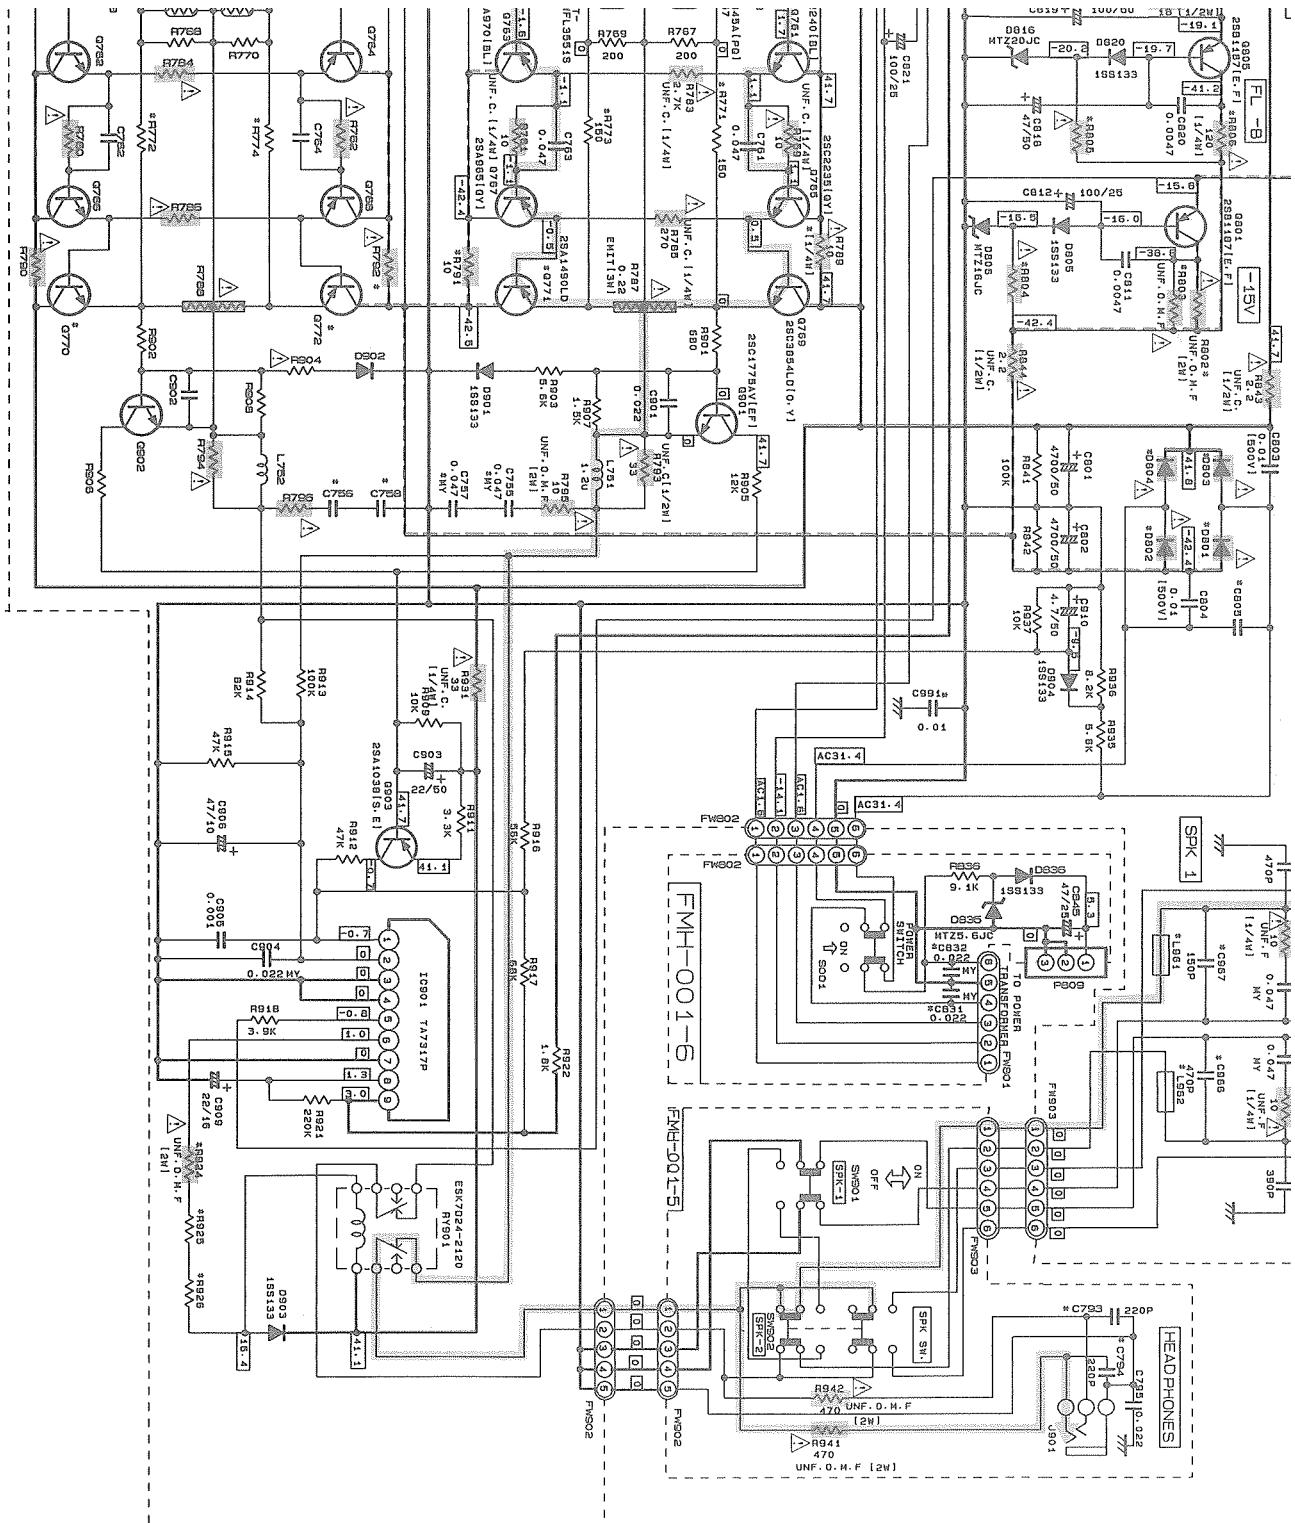

(No.20462)

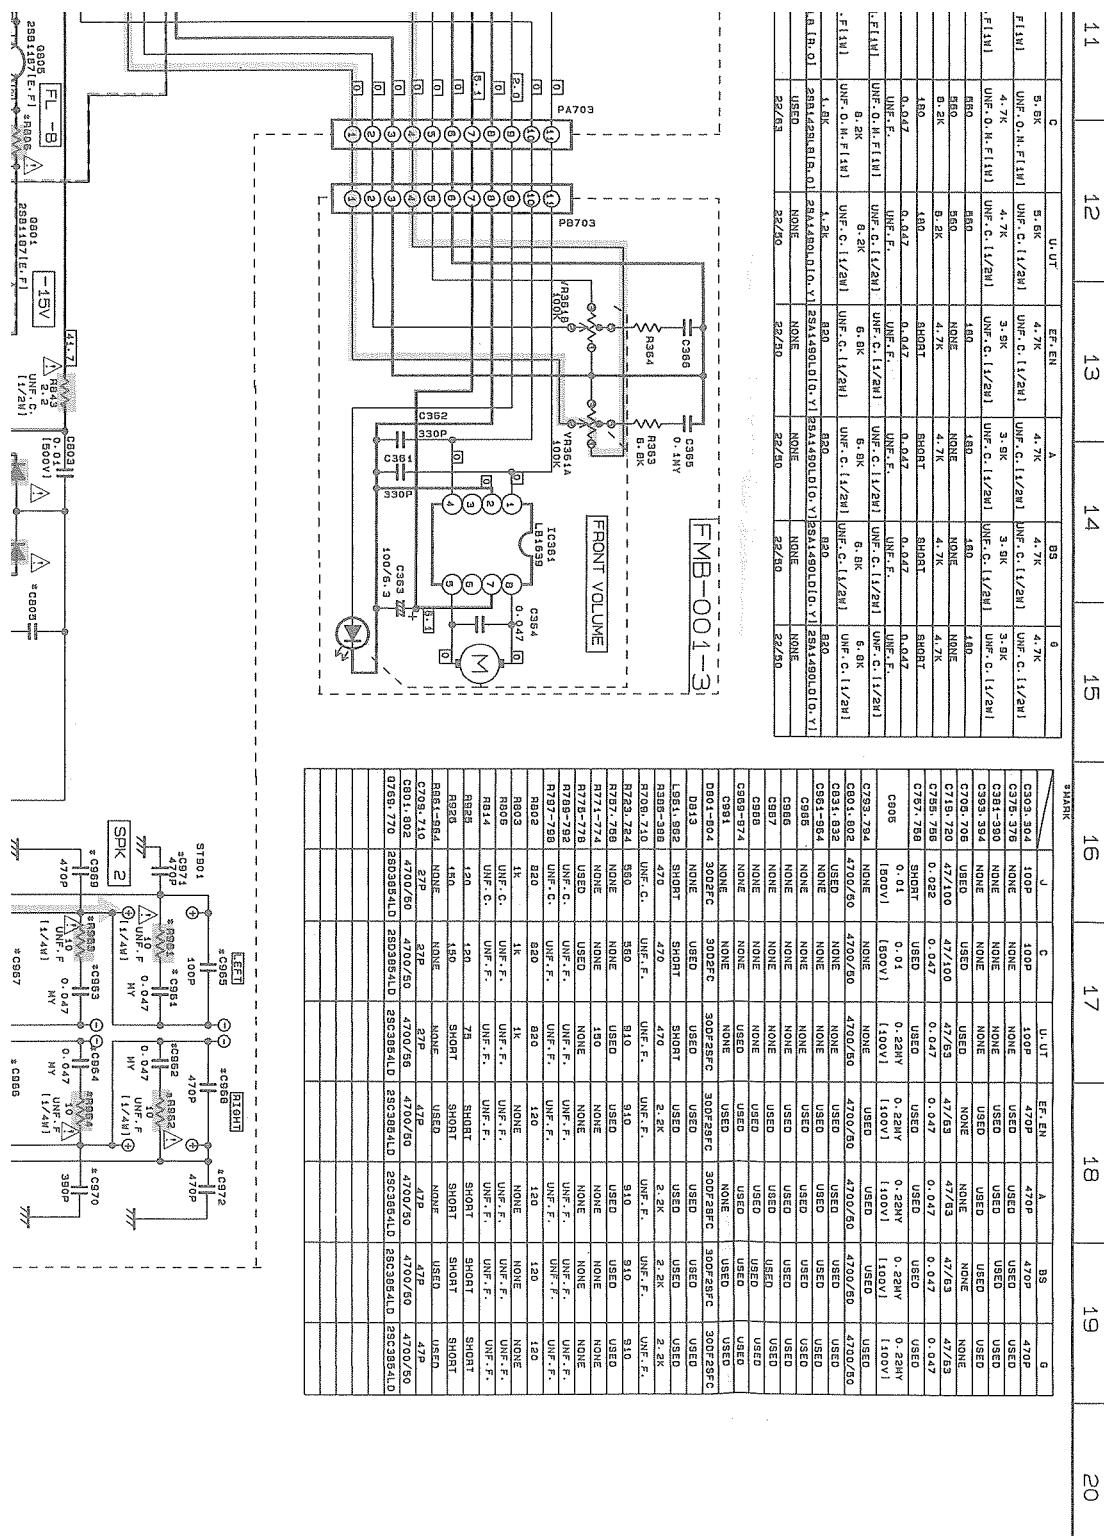

P-S.D(2)-a

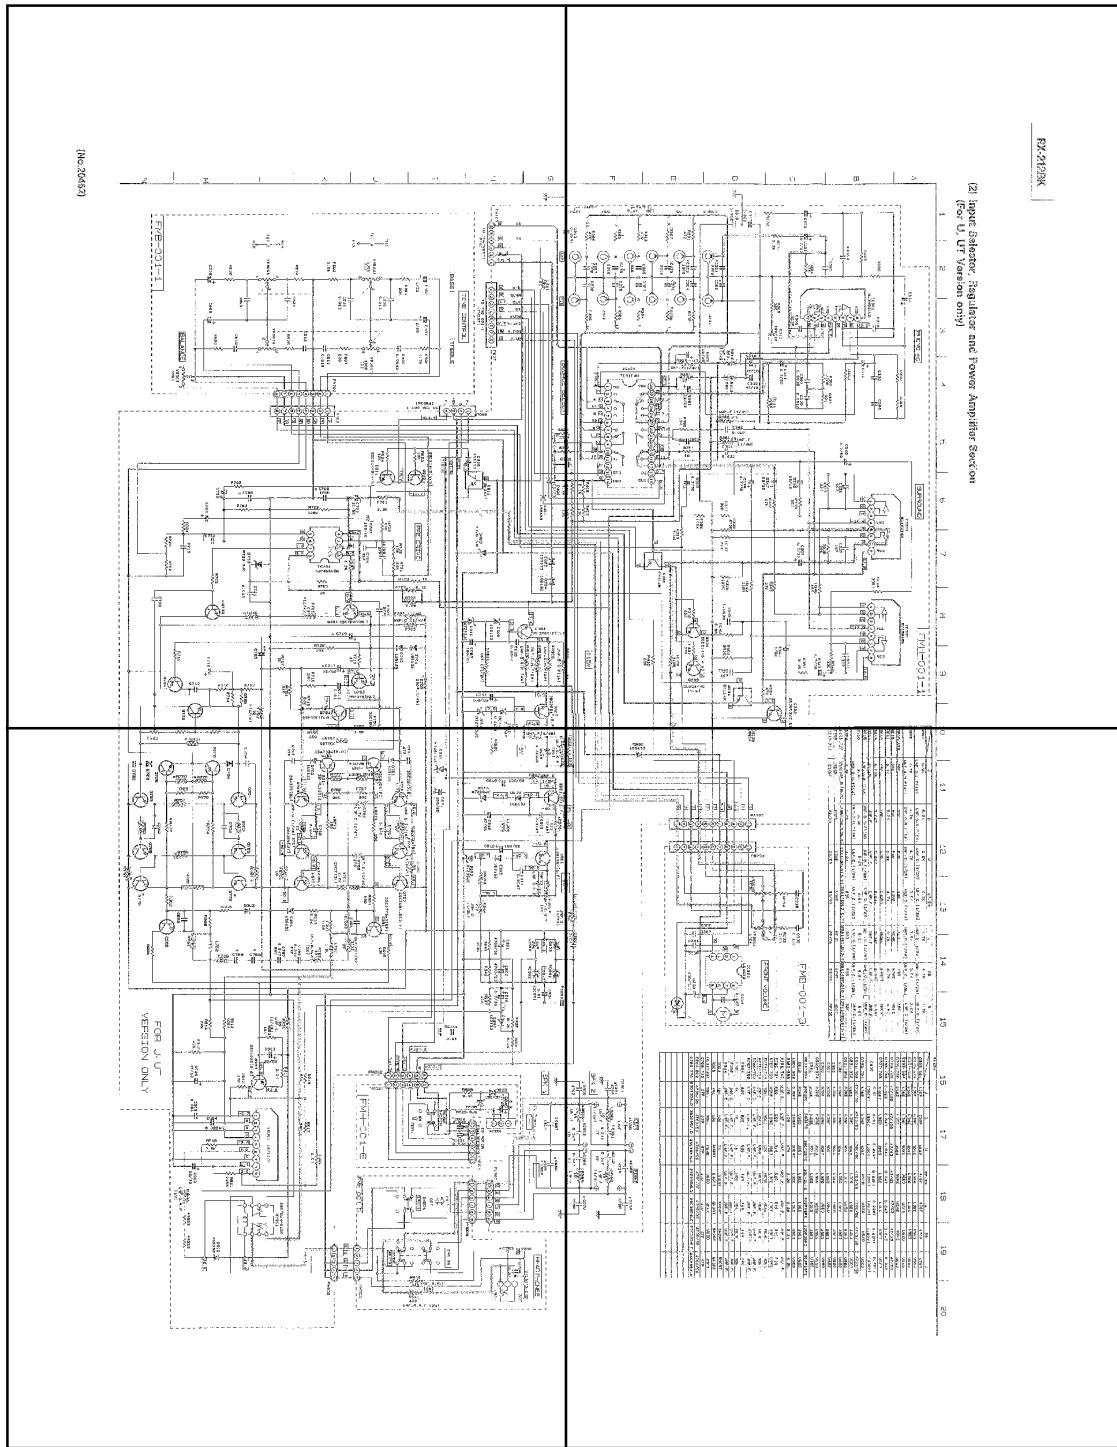

P-S.D(2)-b

20

19

18

17

16

15

14

13

12

11

10

9

8

7

6

5

4

3


2

1


0


P-S.D(2)-c


P-S.D(2)-d

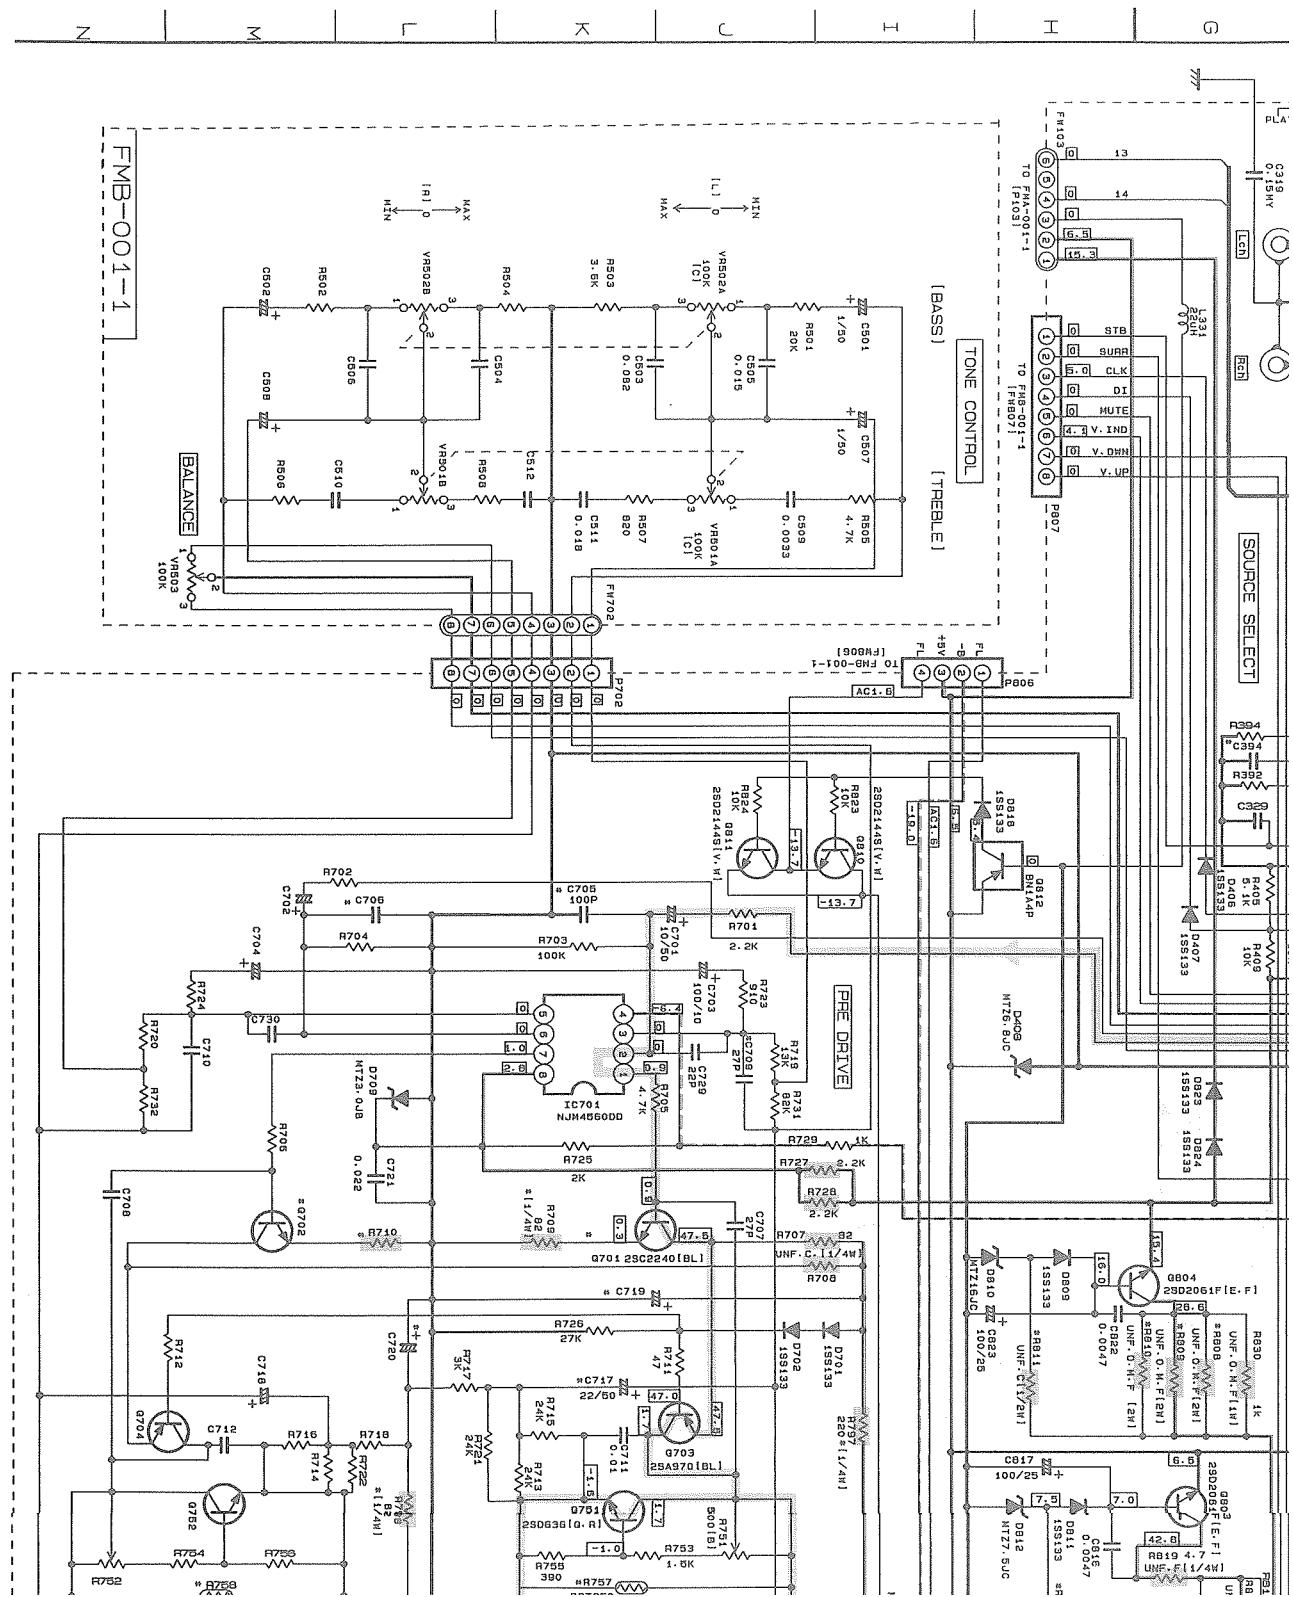


(2) Input Selector, Regulator and Power Amplifier Section (For U, UT Version only)

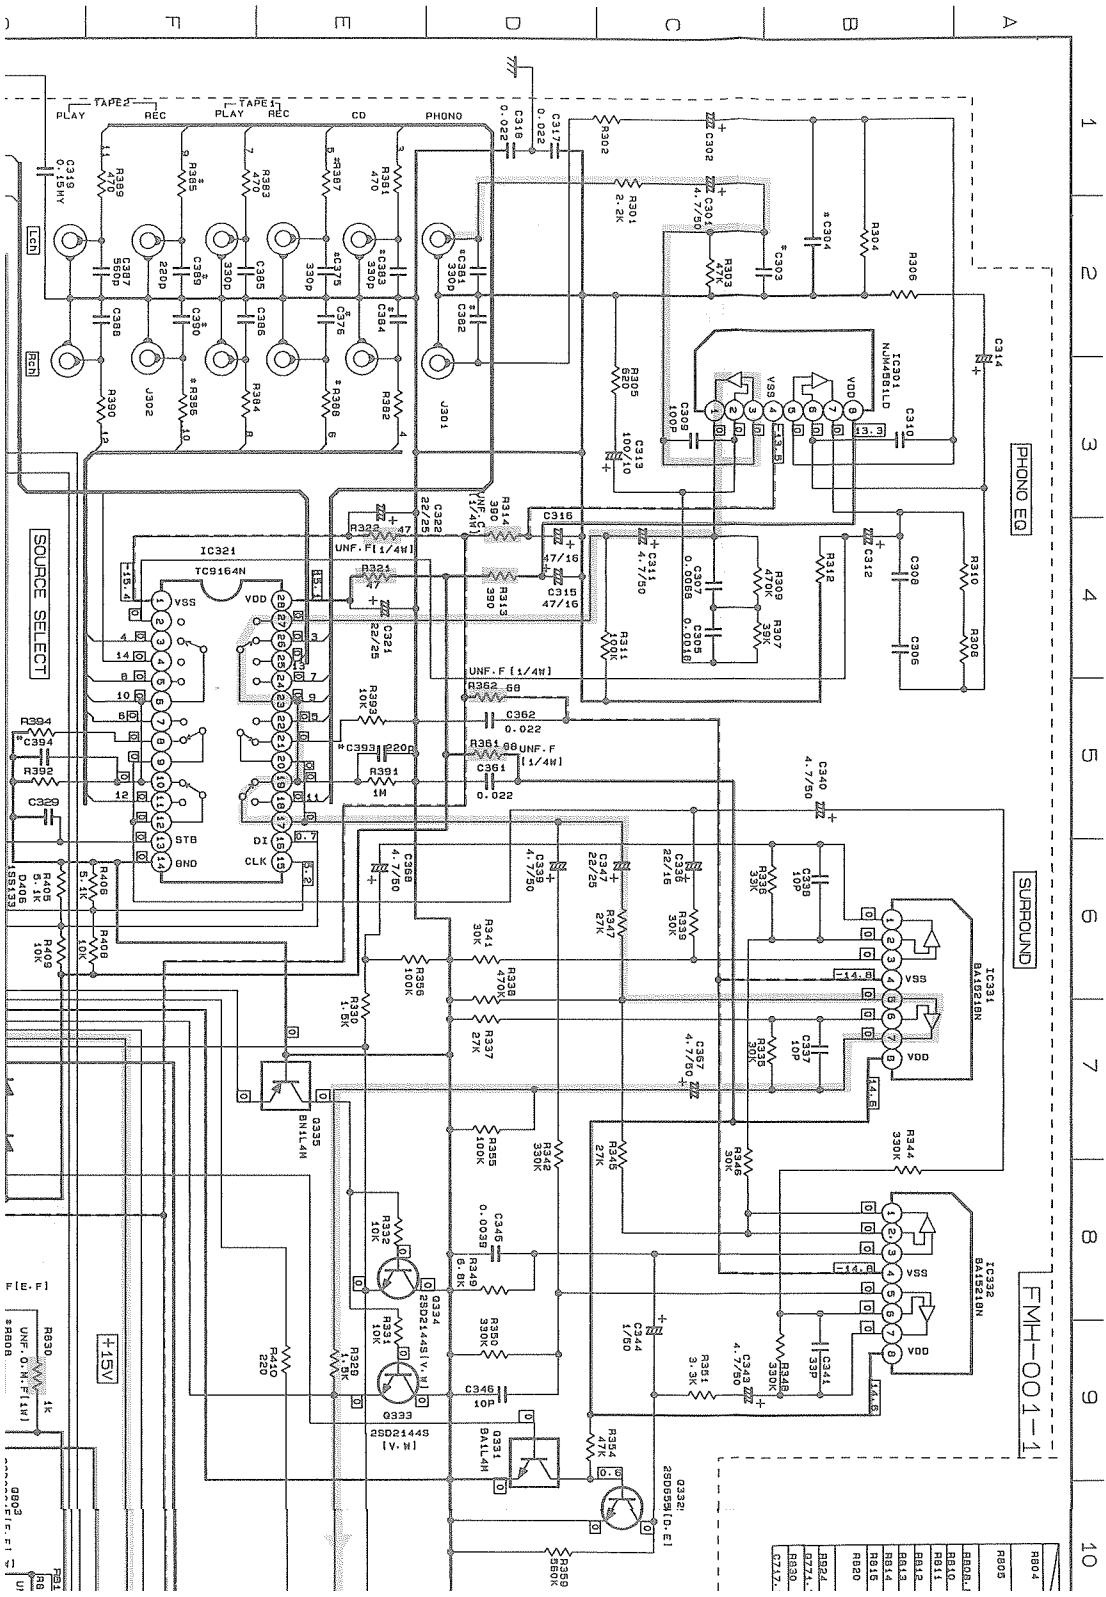

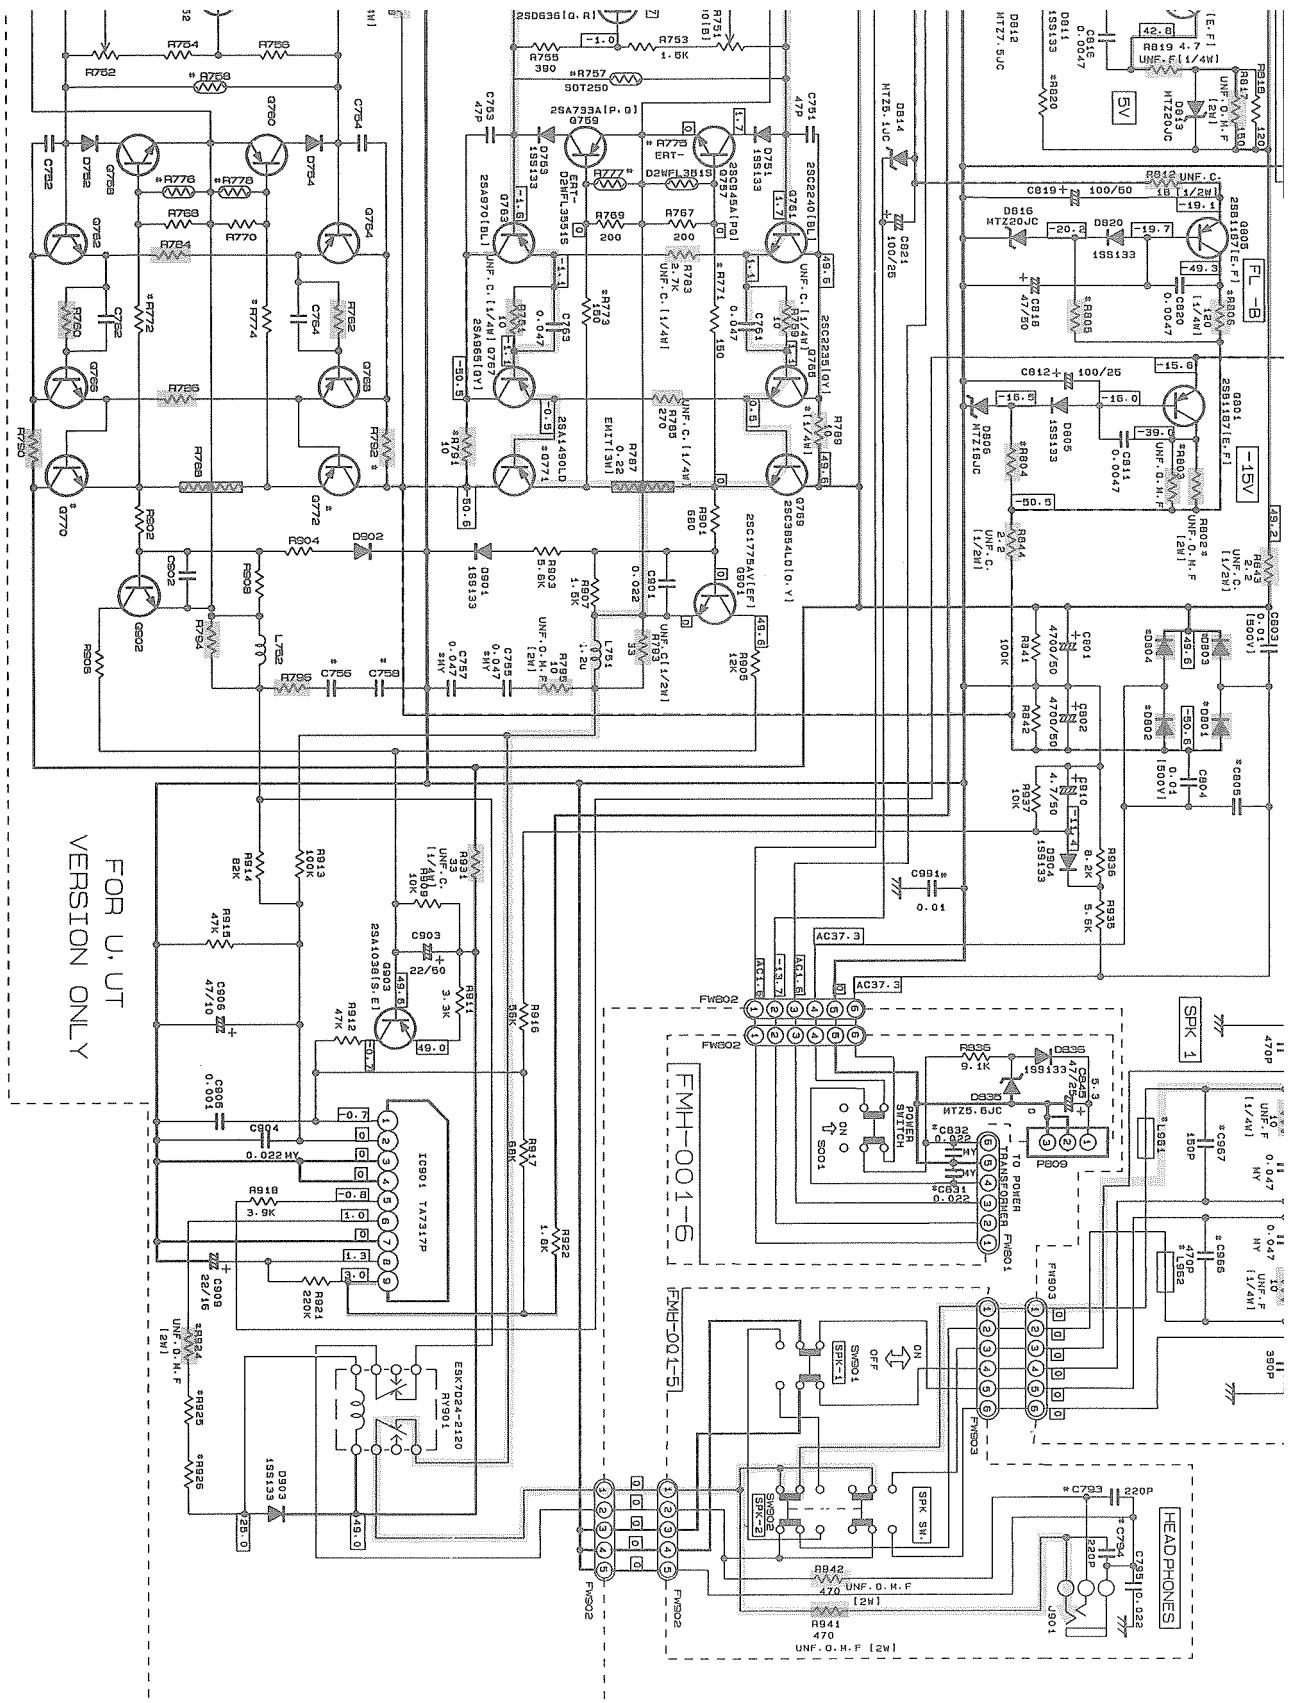

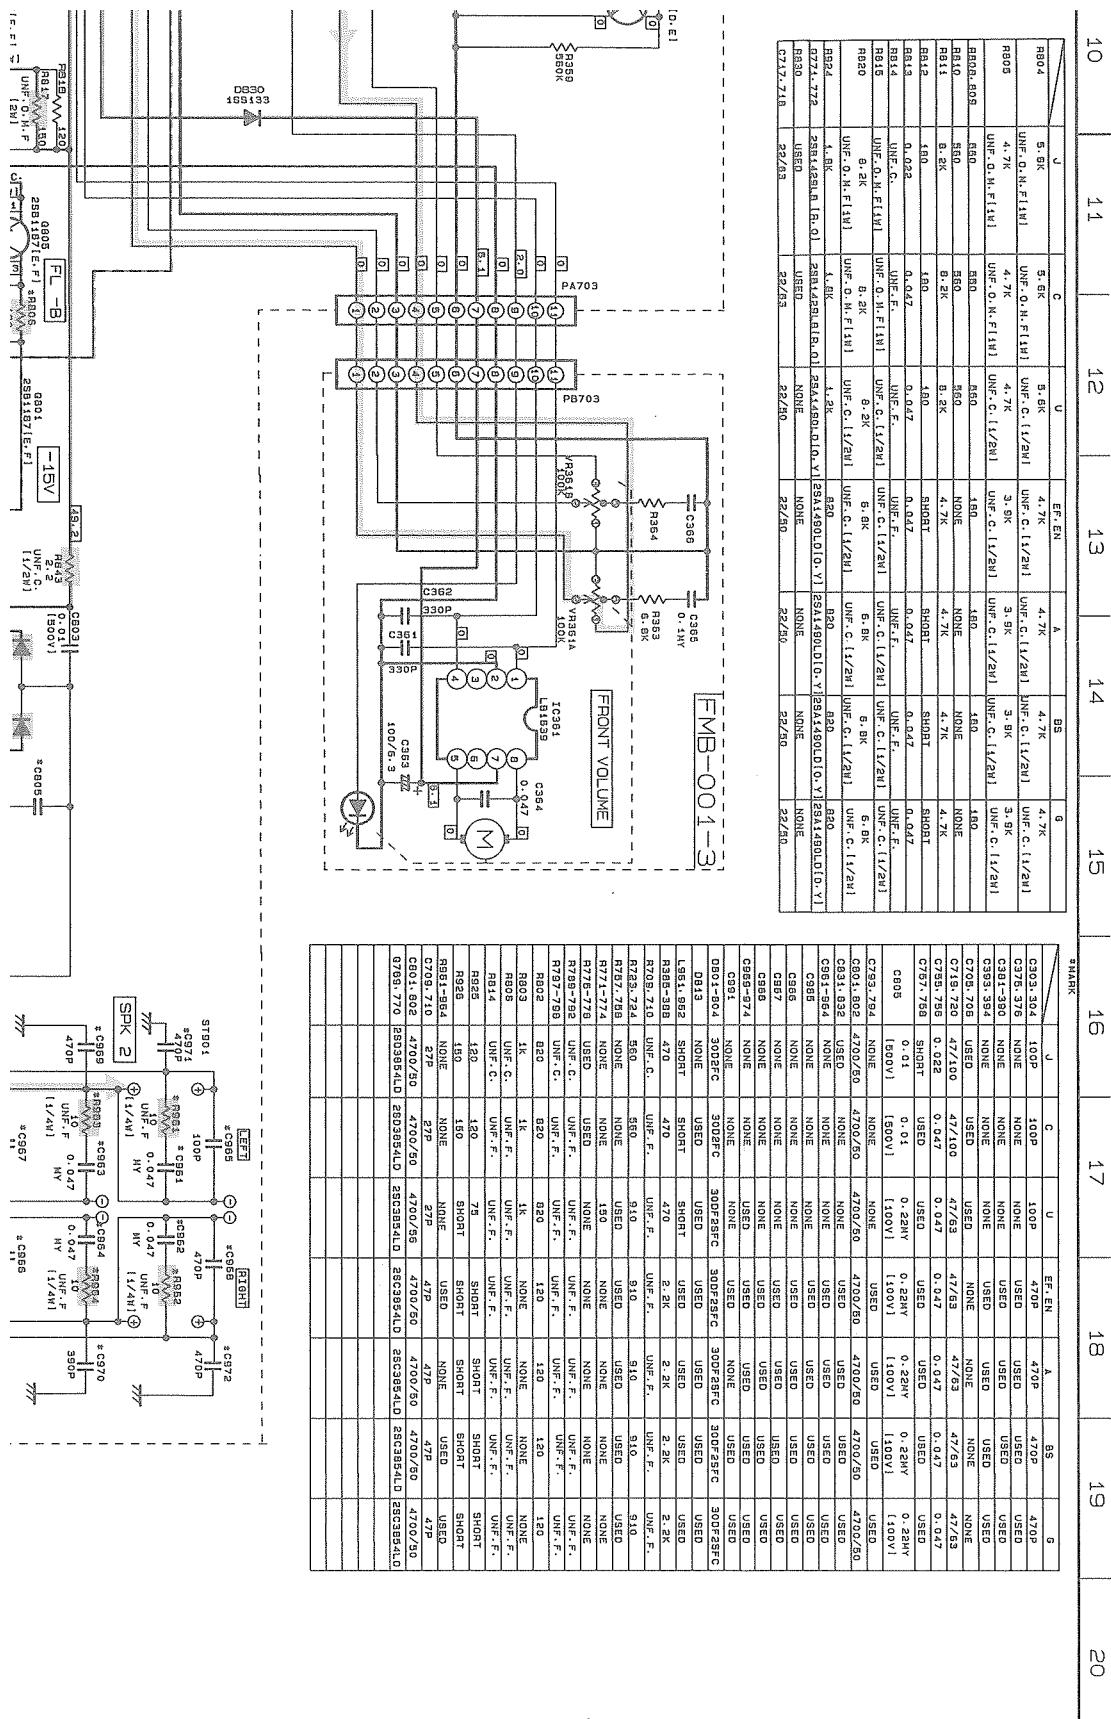


P-S.D(3)-a

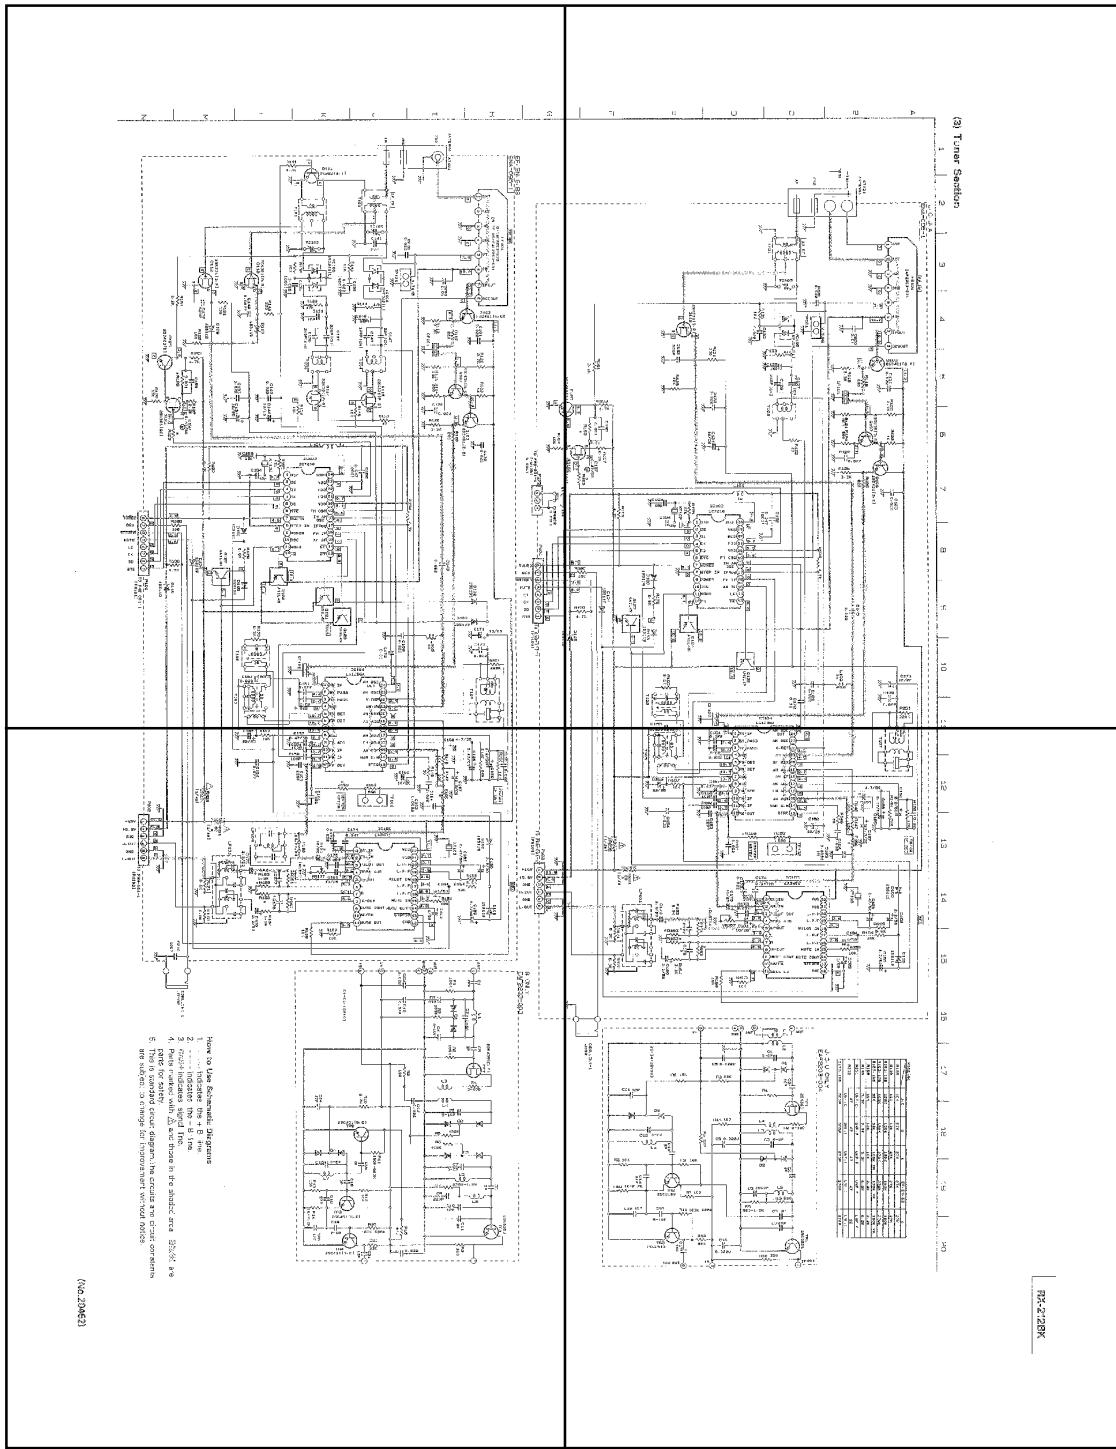



P-S.D(3)-b


P-S.D(3)-d

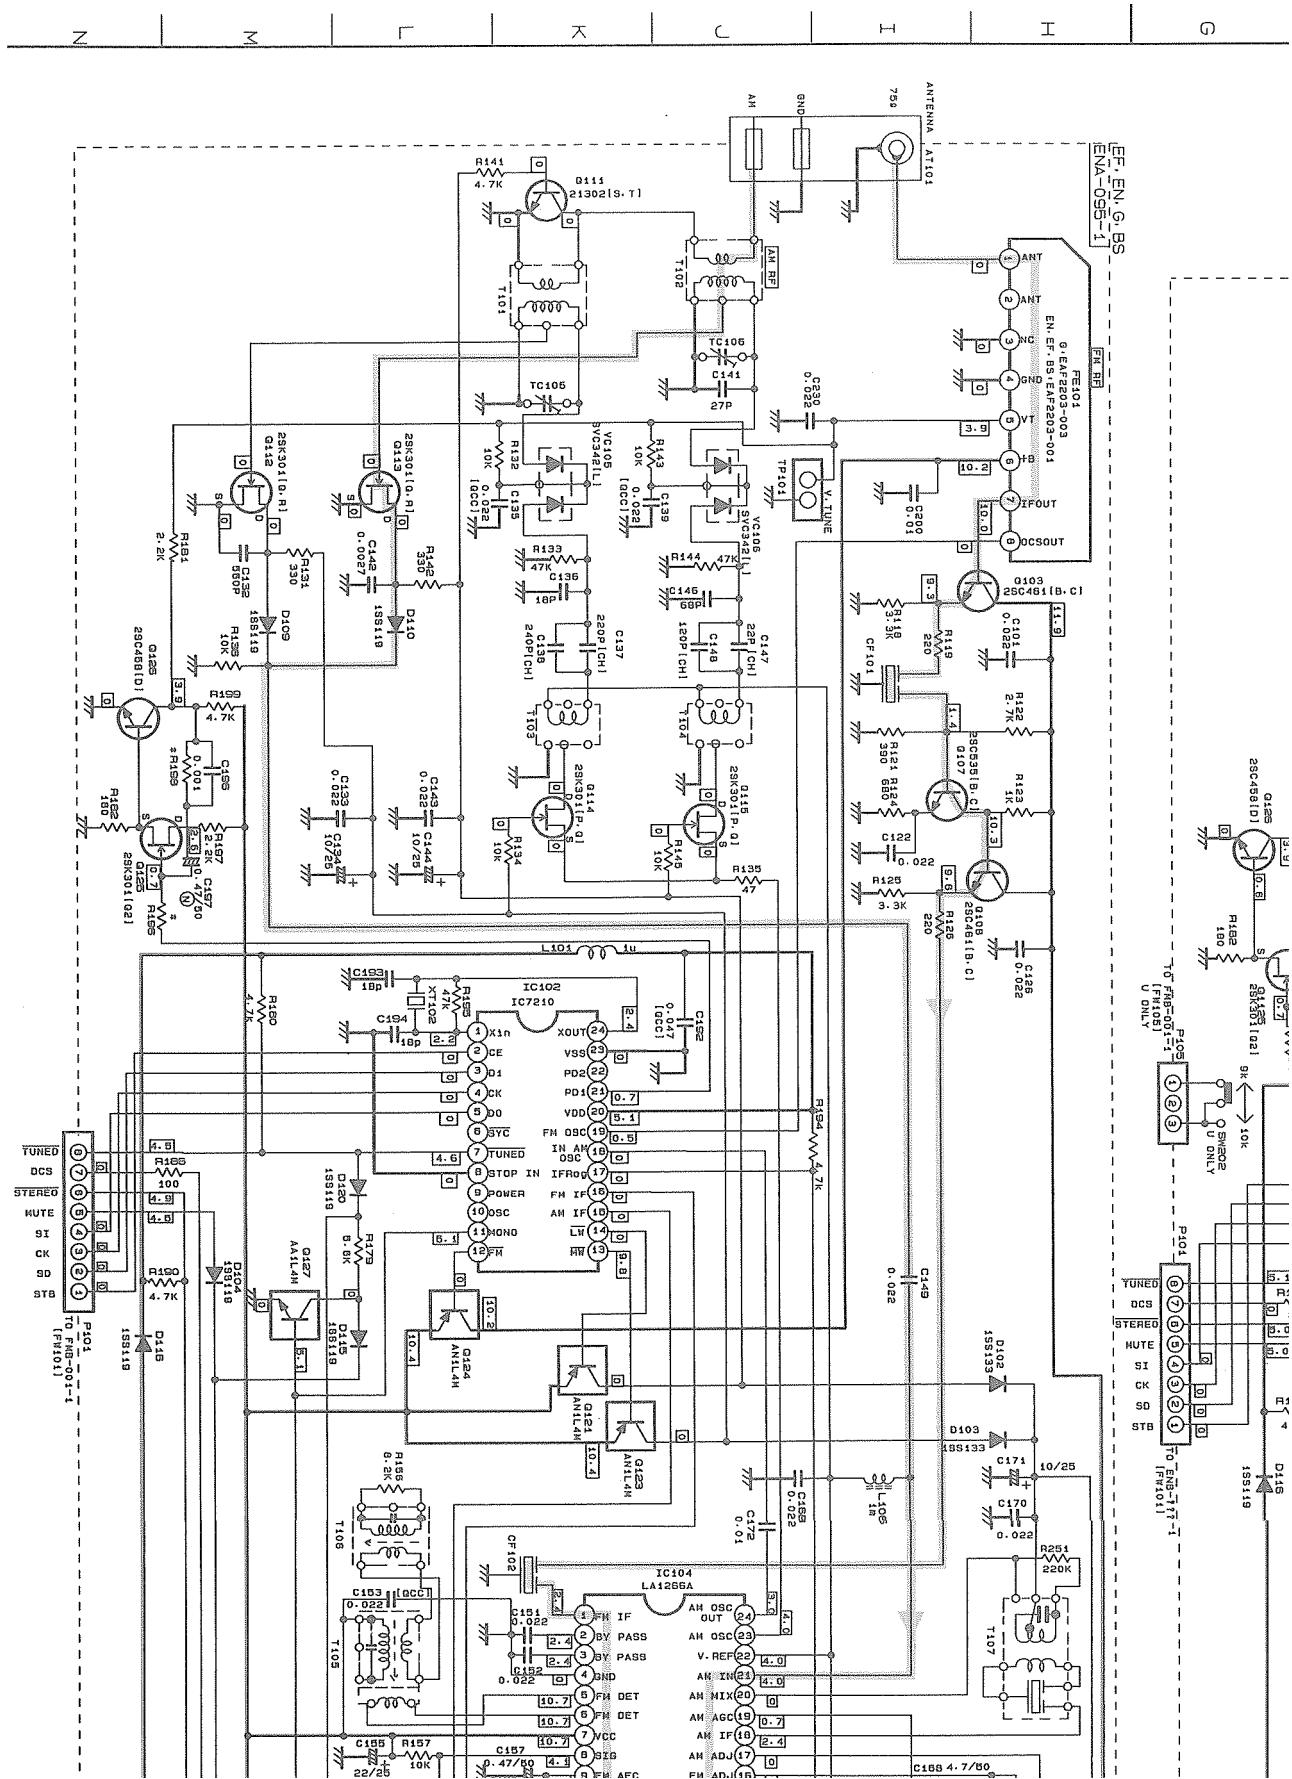

(3) Tuner Section

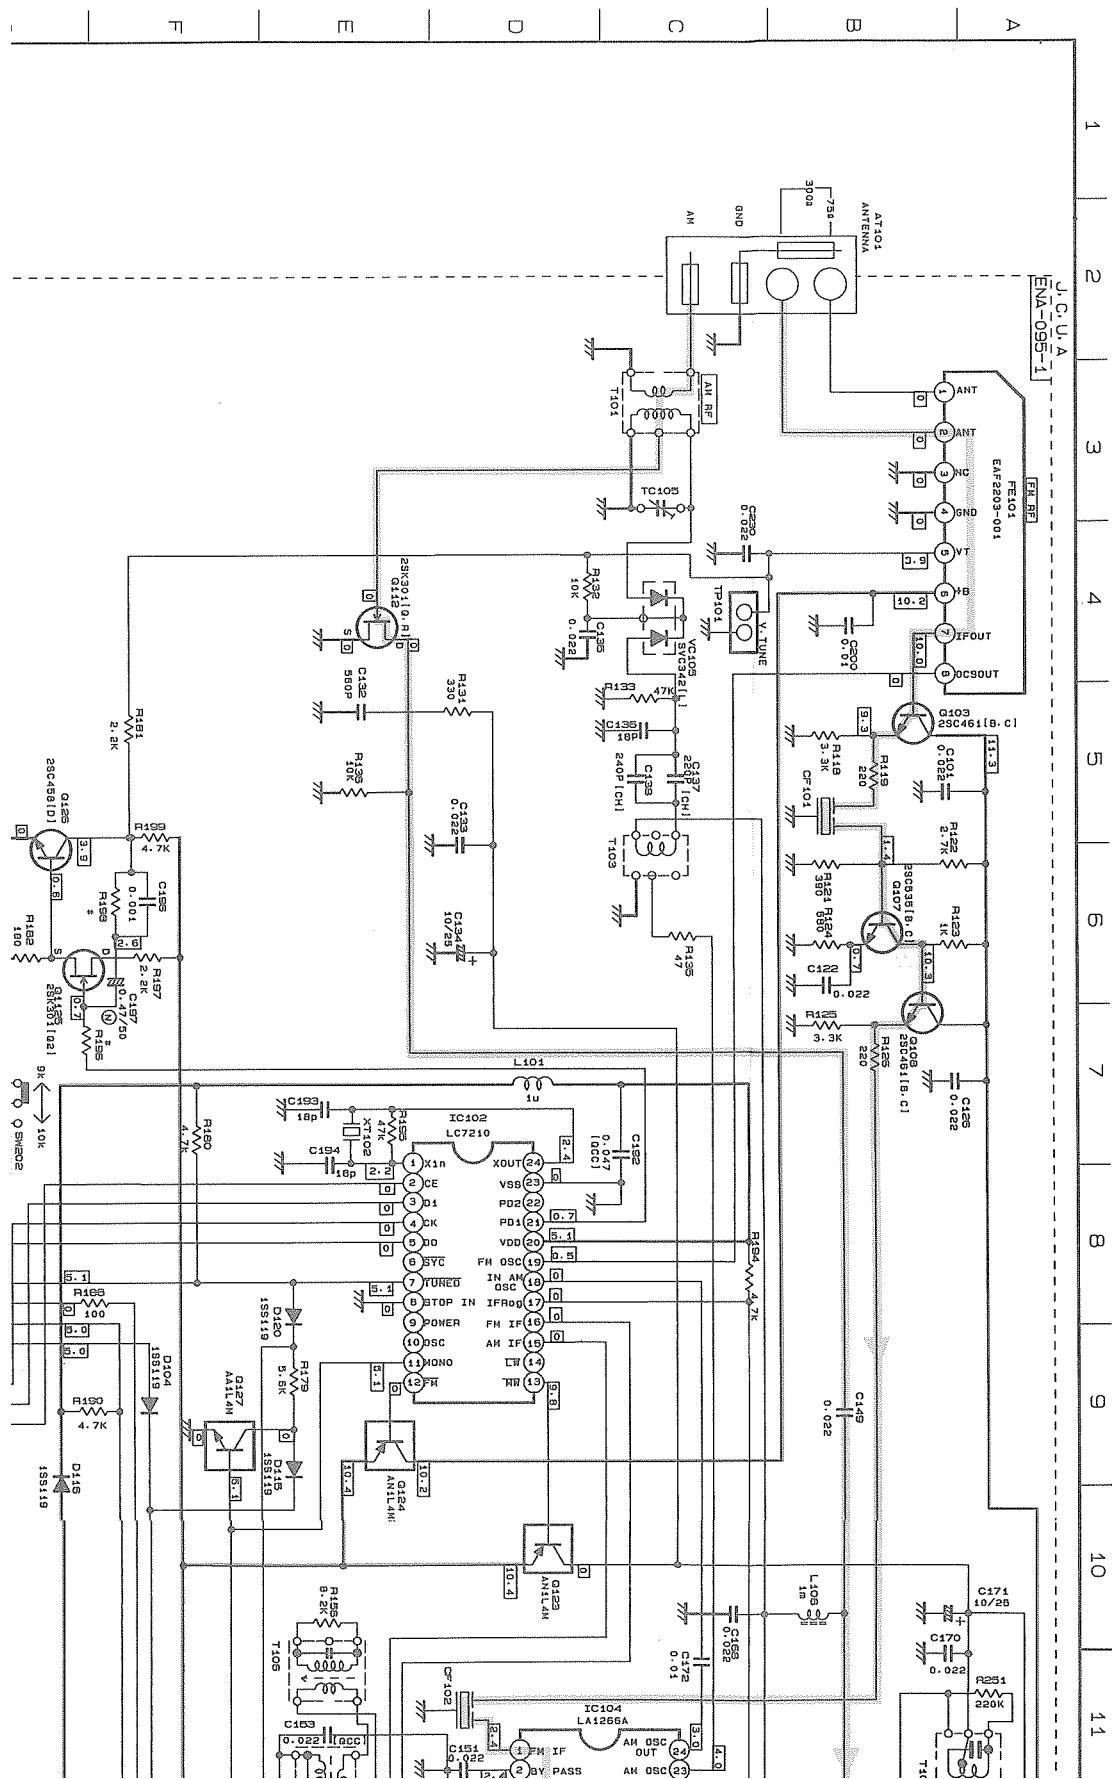


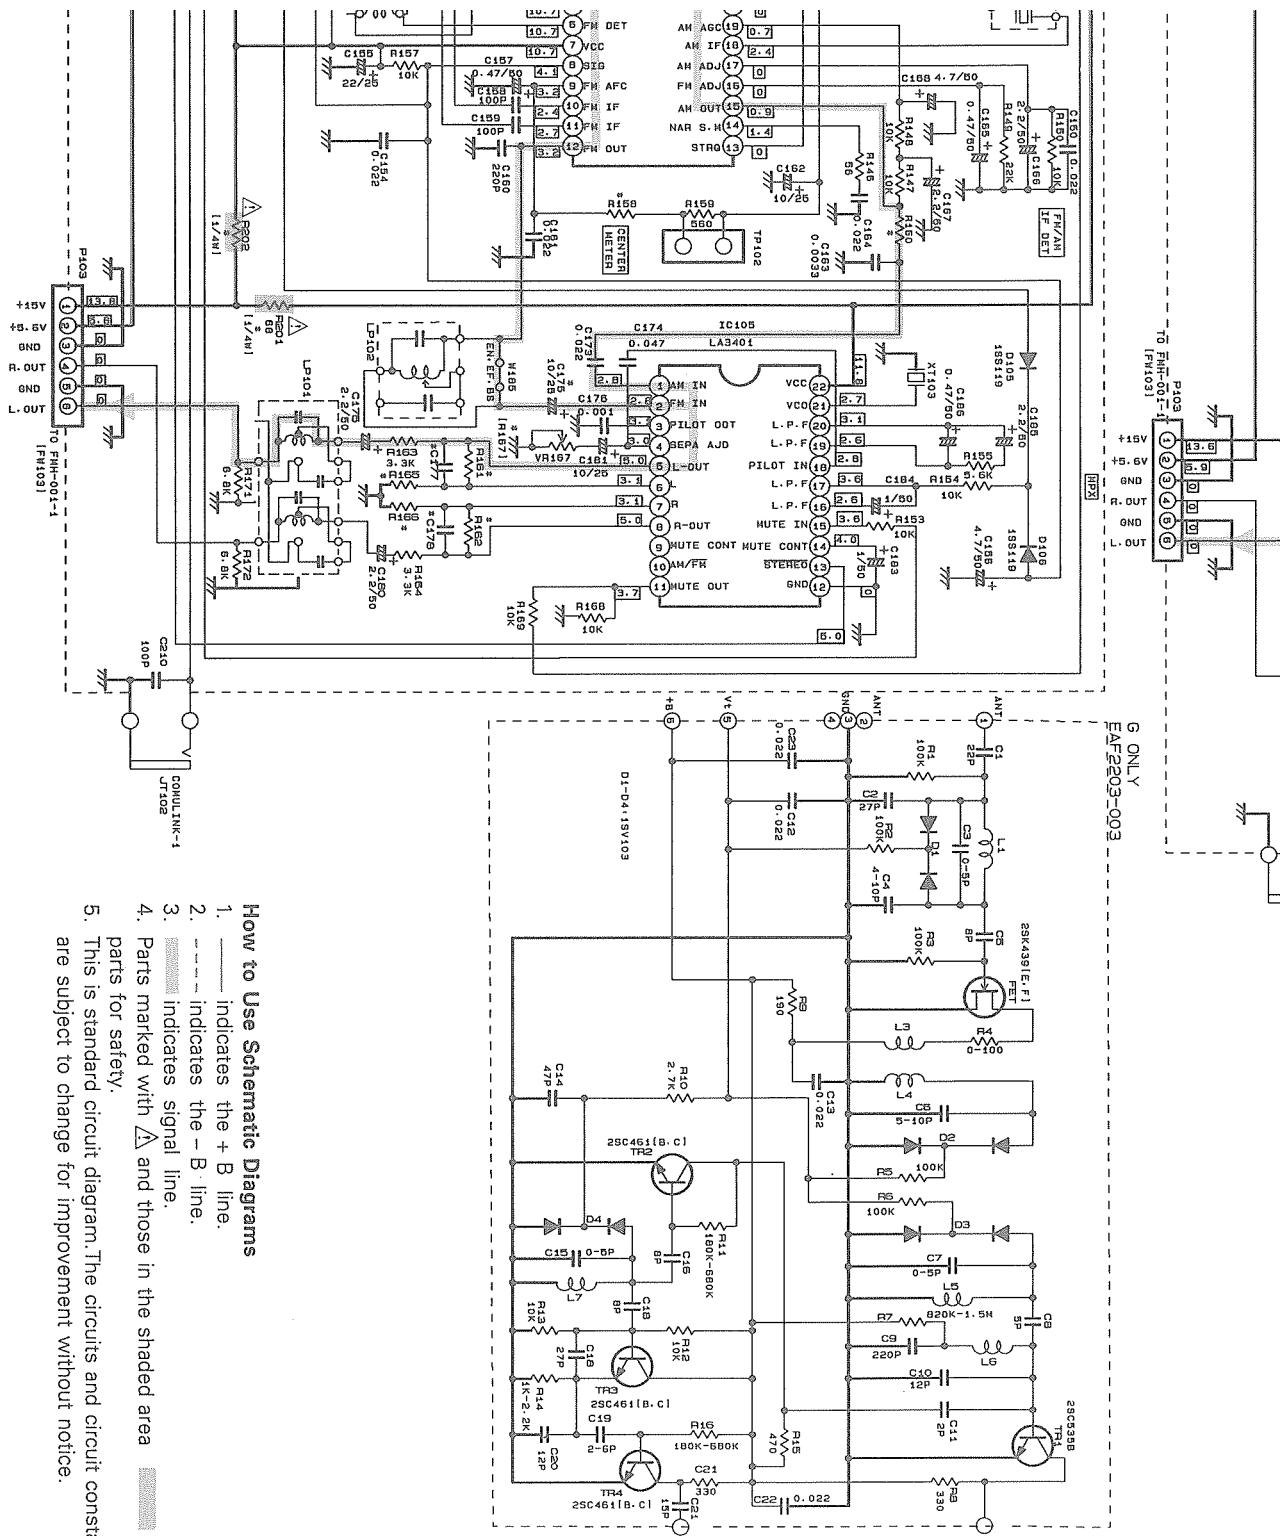

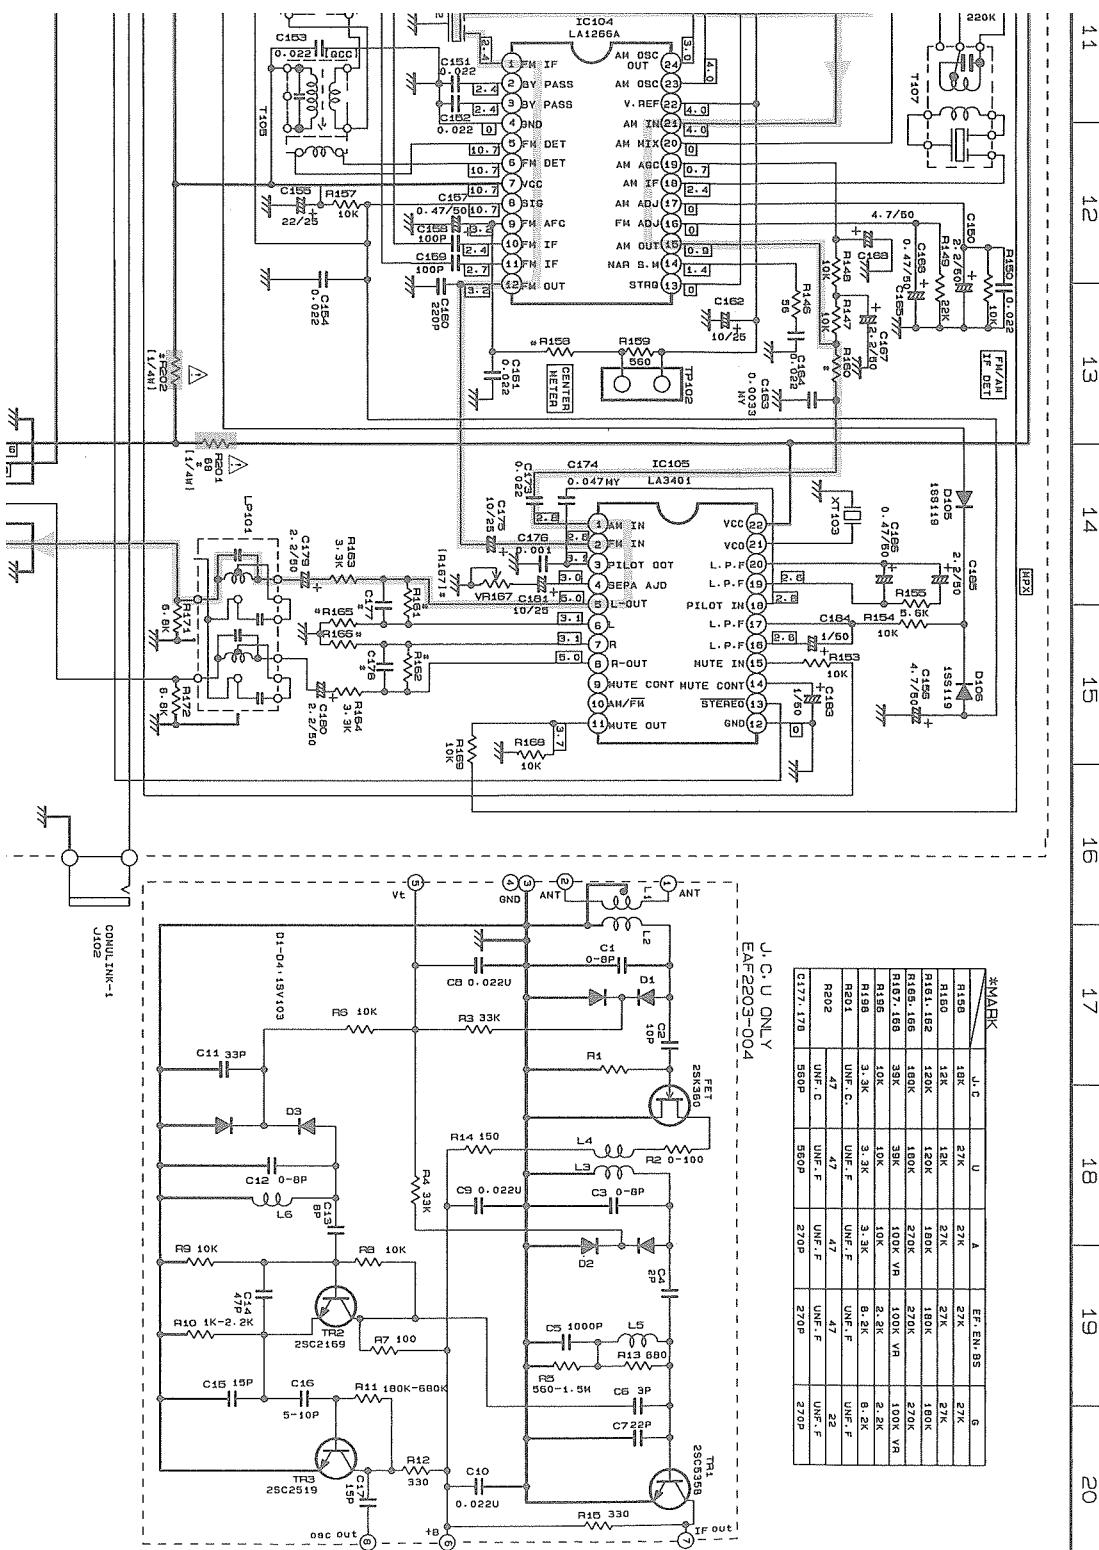


11 12 13 14 15 16 17 18 19 20

P-S.D(4)-a

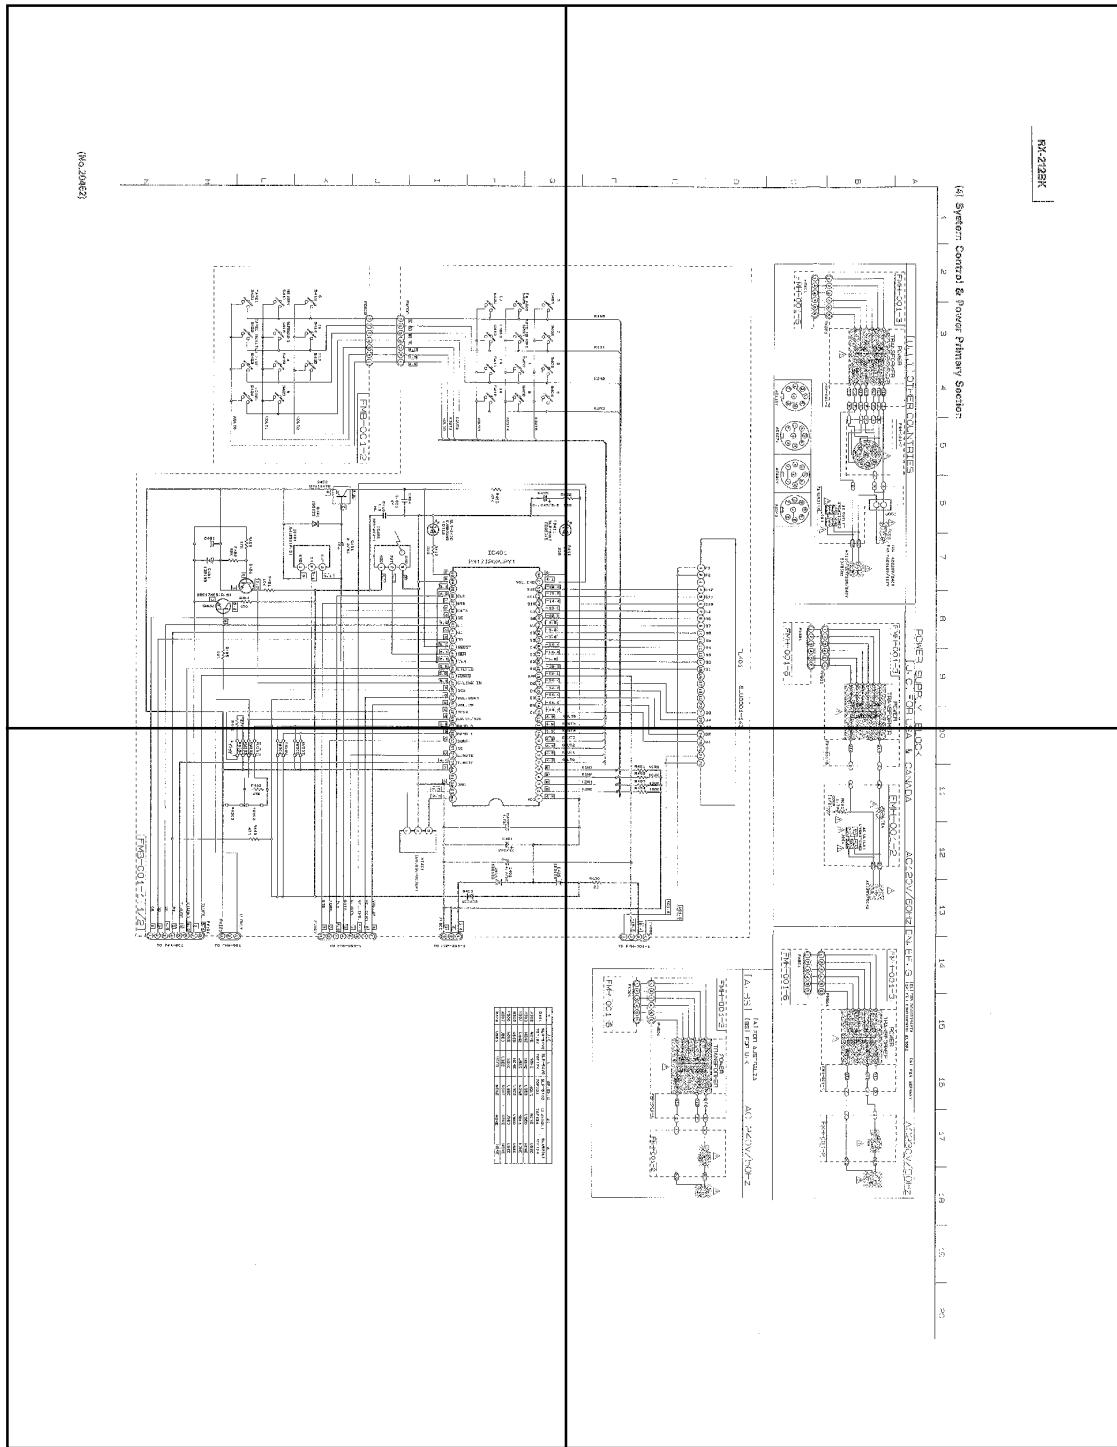


P-S.D(4)-b

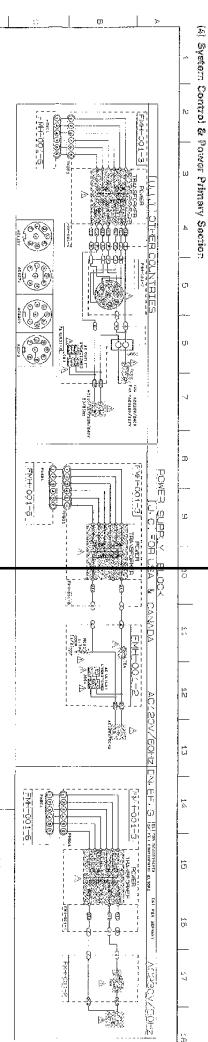


P-S.D(4)-d

P-S.D(4)-c

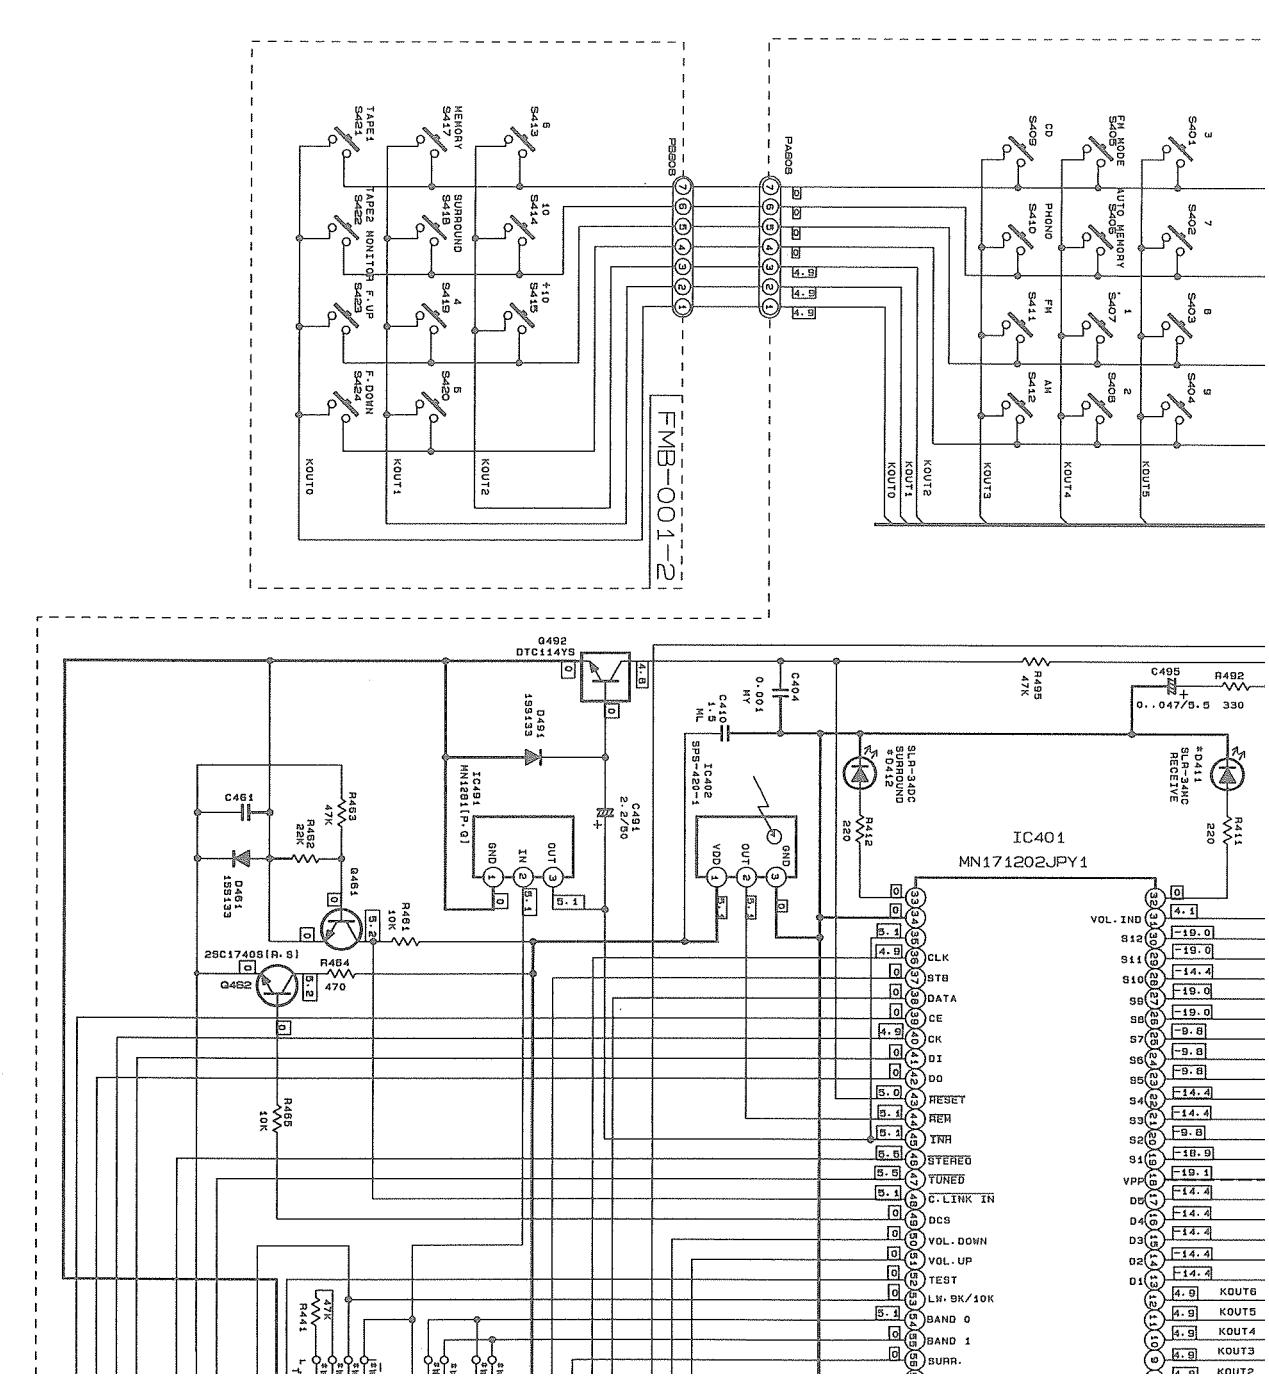



(4) System Control & Power Primary Section

1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10

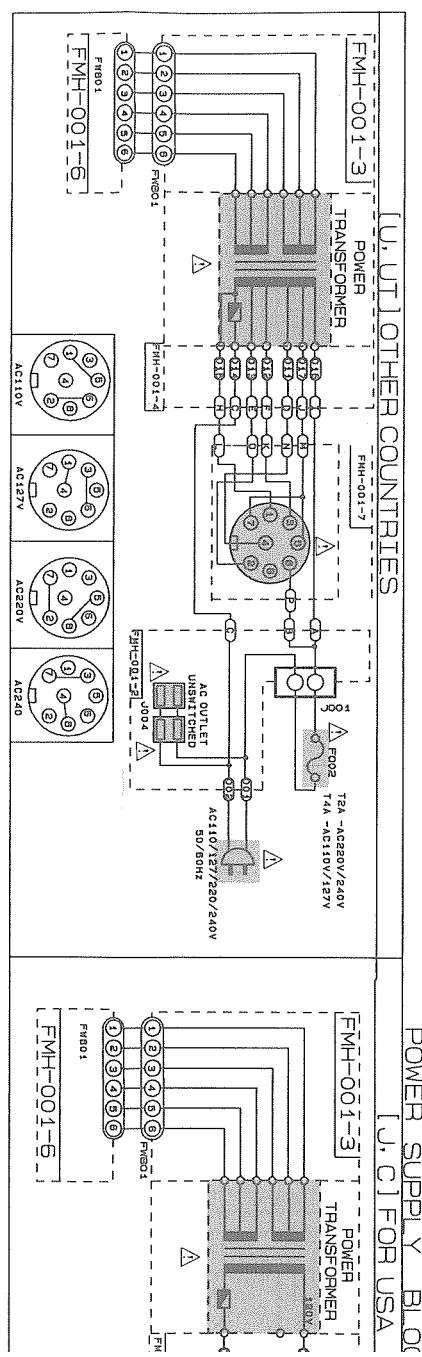

FLU001-143

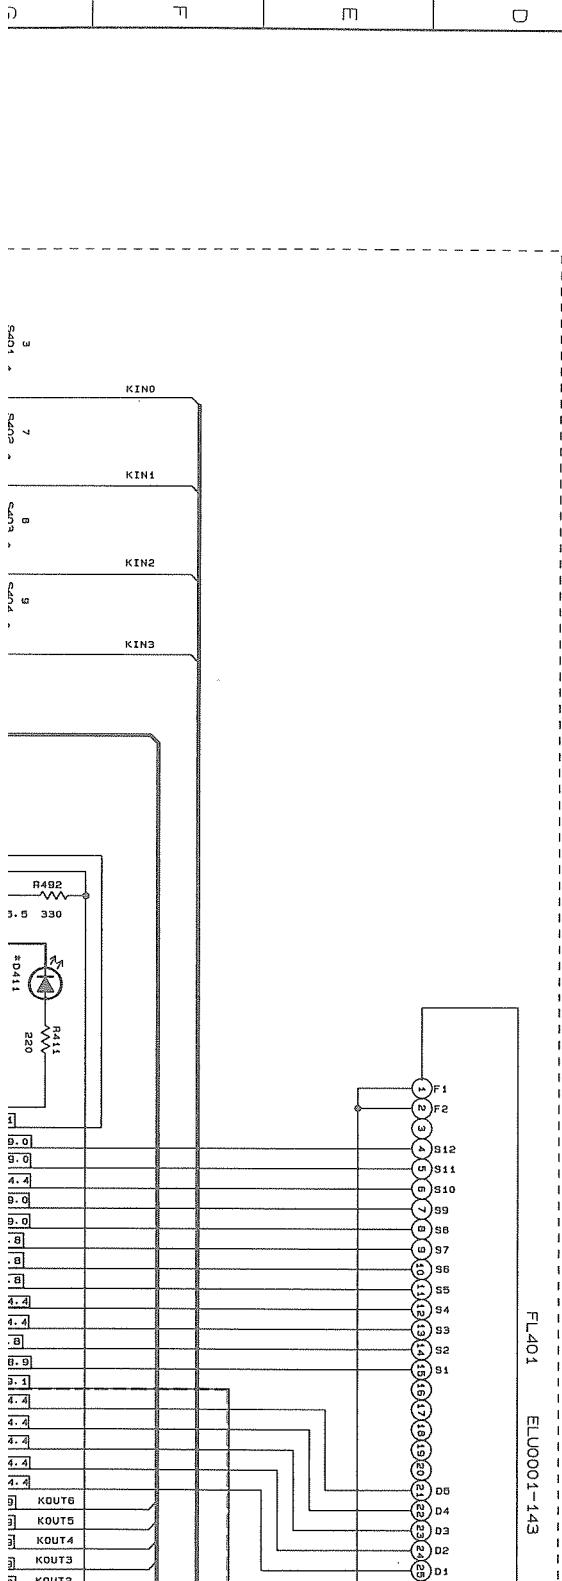

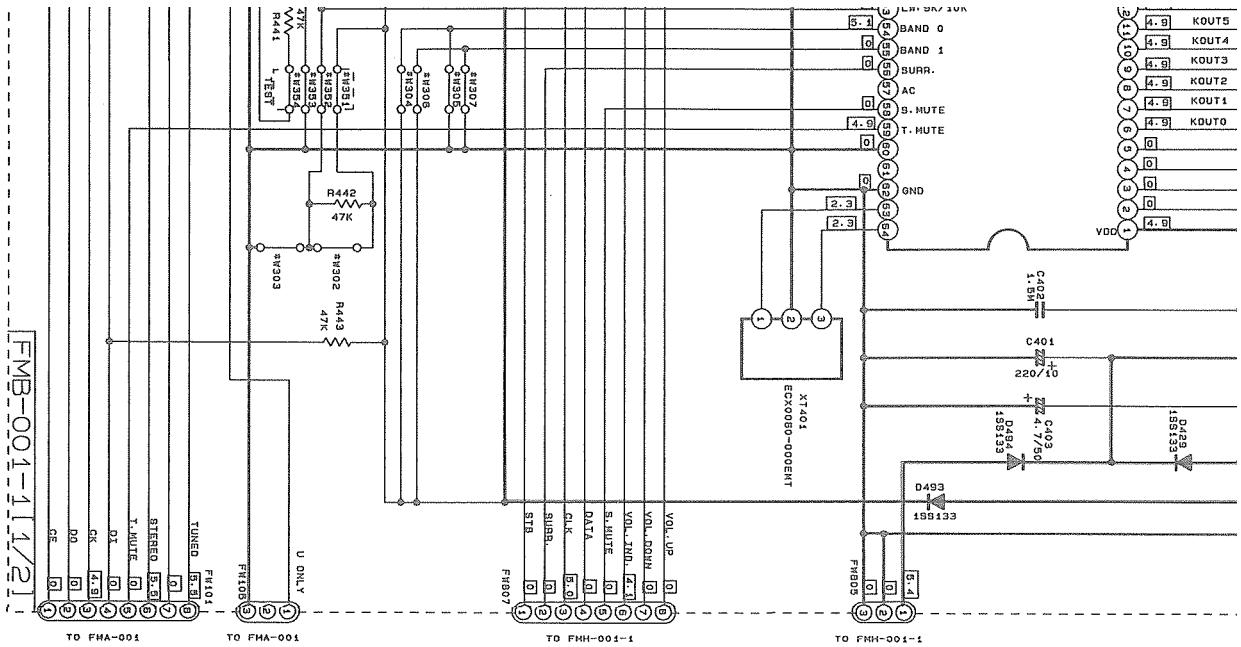

#	J-C	U	EF-EN-S	BS	A
D411	SIL-14V/C	SIL-14V/C	SIL-14V/C	SIL-14V/C	SIL-14V/C
M302	NONE	NONE	NONE	NONE	USED
M303	NONE	NONE	USED	USED	NONE
M304	NONE	NONE	NONE	NONE	NONE
M305	USED	NONE	USED	USED	USED
M306	USED	NONE	USED	USED	USED
M307	USED	USED	USED	None	NONE
R442	USED	USED	None	None	NONE


10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20

**BLOCK
USA & CANADA**

AC120V/60Hz EN, EF, G [EN] FOR SCANDINAVIA [G] FOR GERMANY AC230V/50Hz

[EN] FOR CONTINENTAL EUROPE [G] FOR GERMANY

AC230V/50Hz

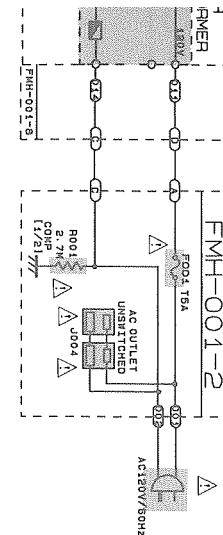


FMH-001-5

[A] FOR AUSTRALIA [BS] FOR U.K. AC 240V/50Hz

AC120V/60Hz EN, EF, G [EN] FOR SCANDINAVIA [G] FOR GERMANY AC230V/50Hz


[EN] FOR CONTINENTAL EUROPE [G] FOR GERMANY

AC230V/50Hz

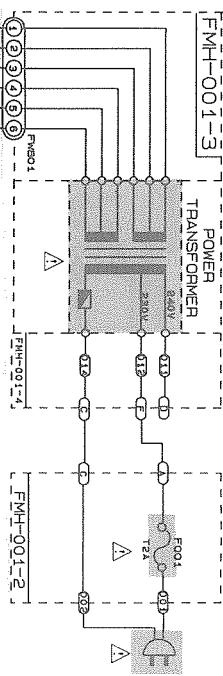


Printed Circuit Boards

(1) Power Supply Amplifier & Selector P.C. Board (FMH-0)

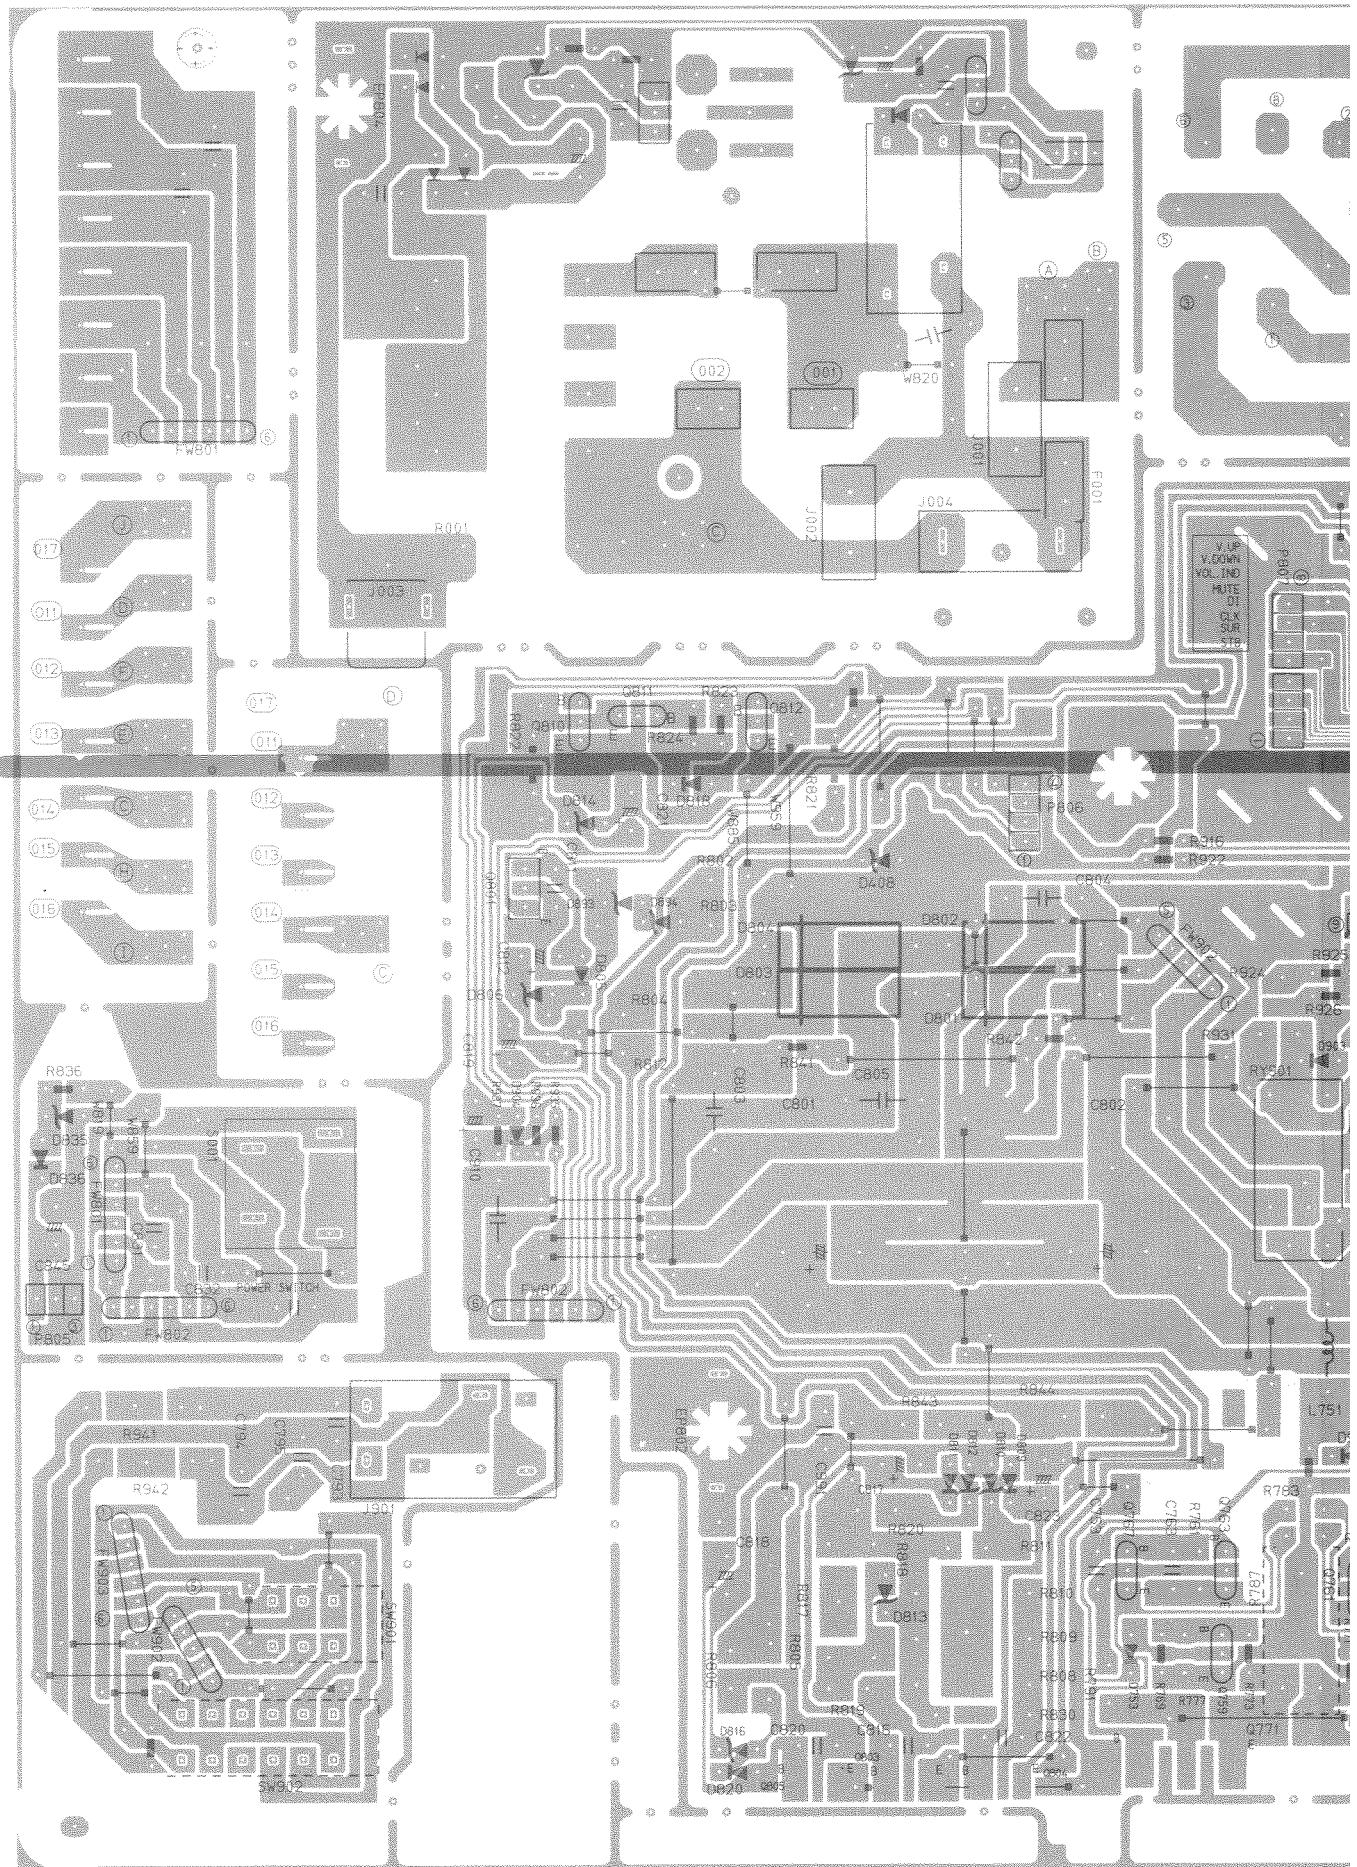



MH-001)

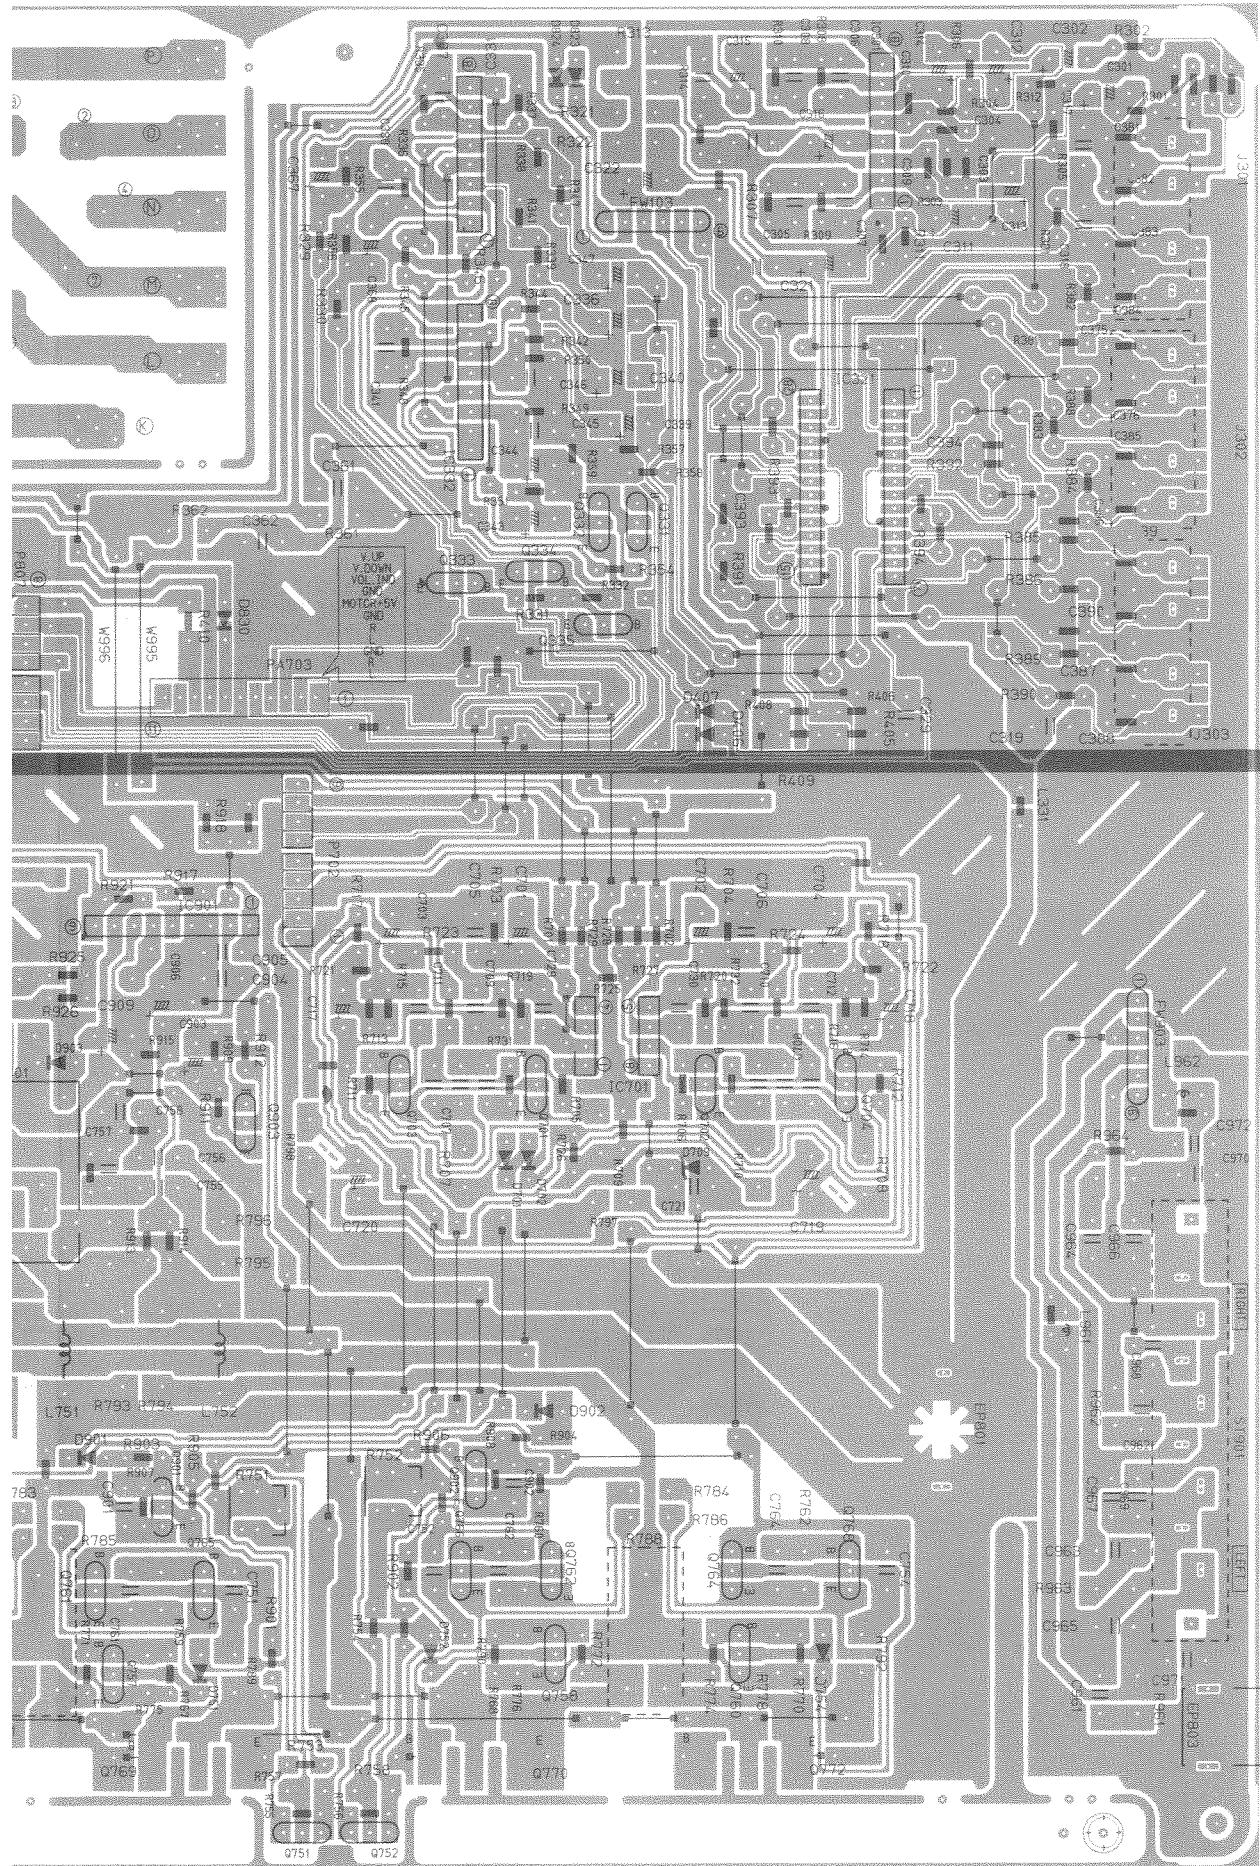


(No.20462)




(2) Tuner P.C. Board (FMA-001)

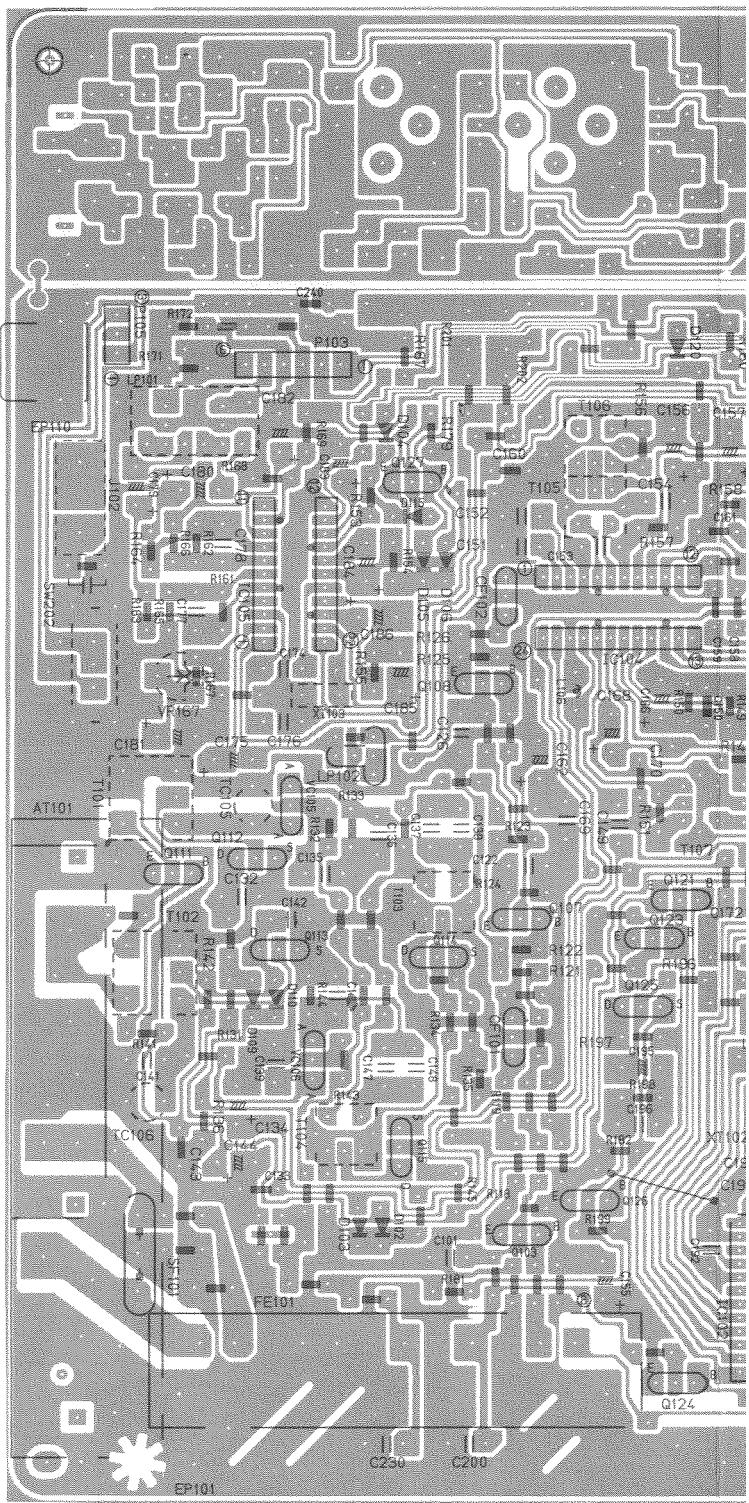

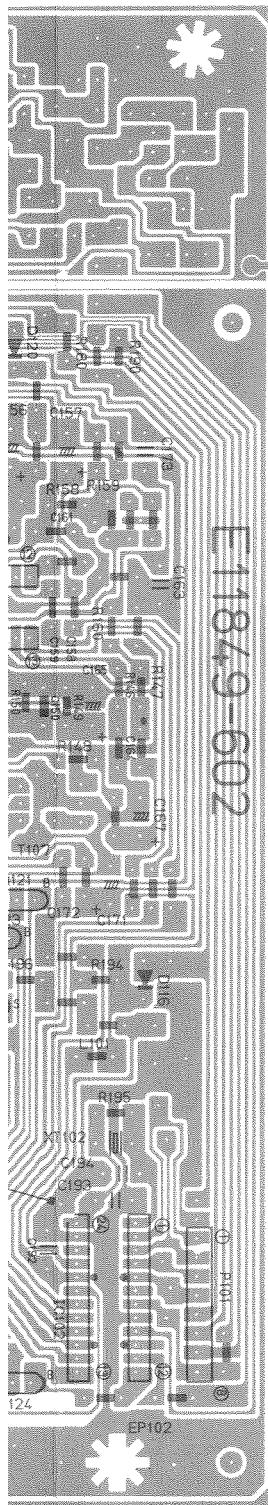

(3) Front, Tone Control & Volume P.C. Board (FMB-001)

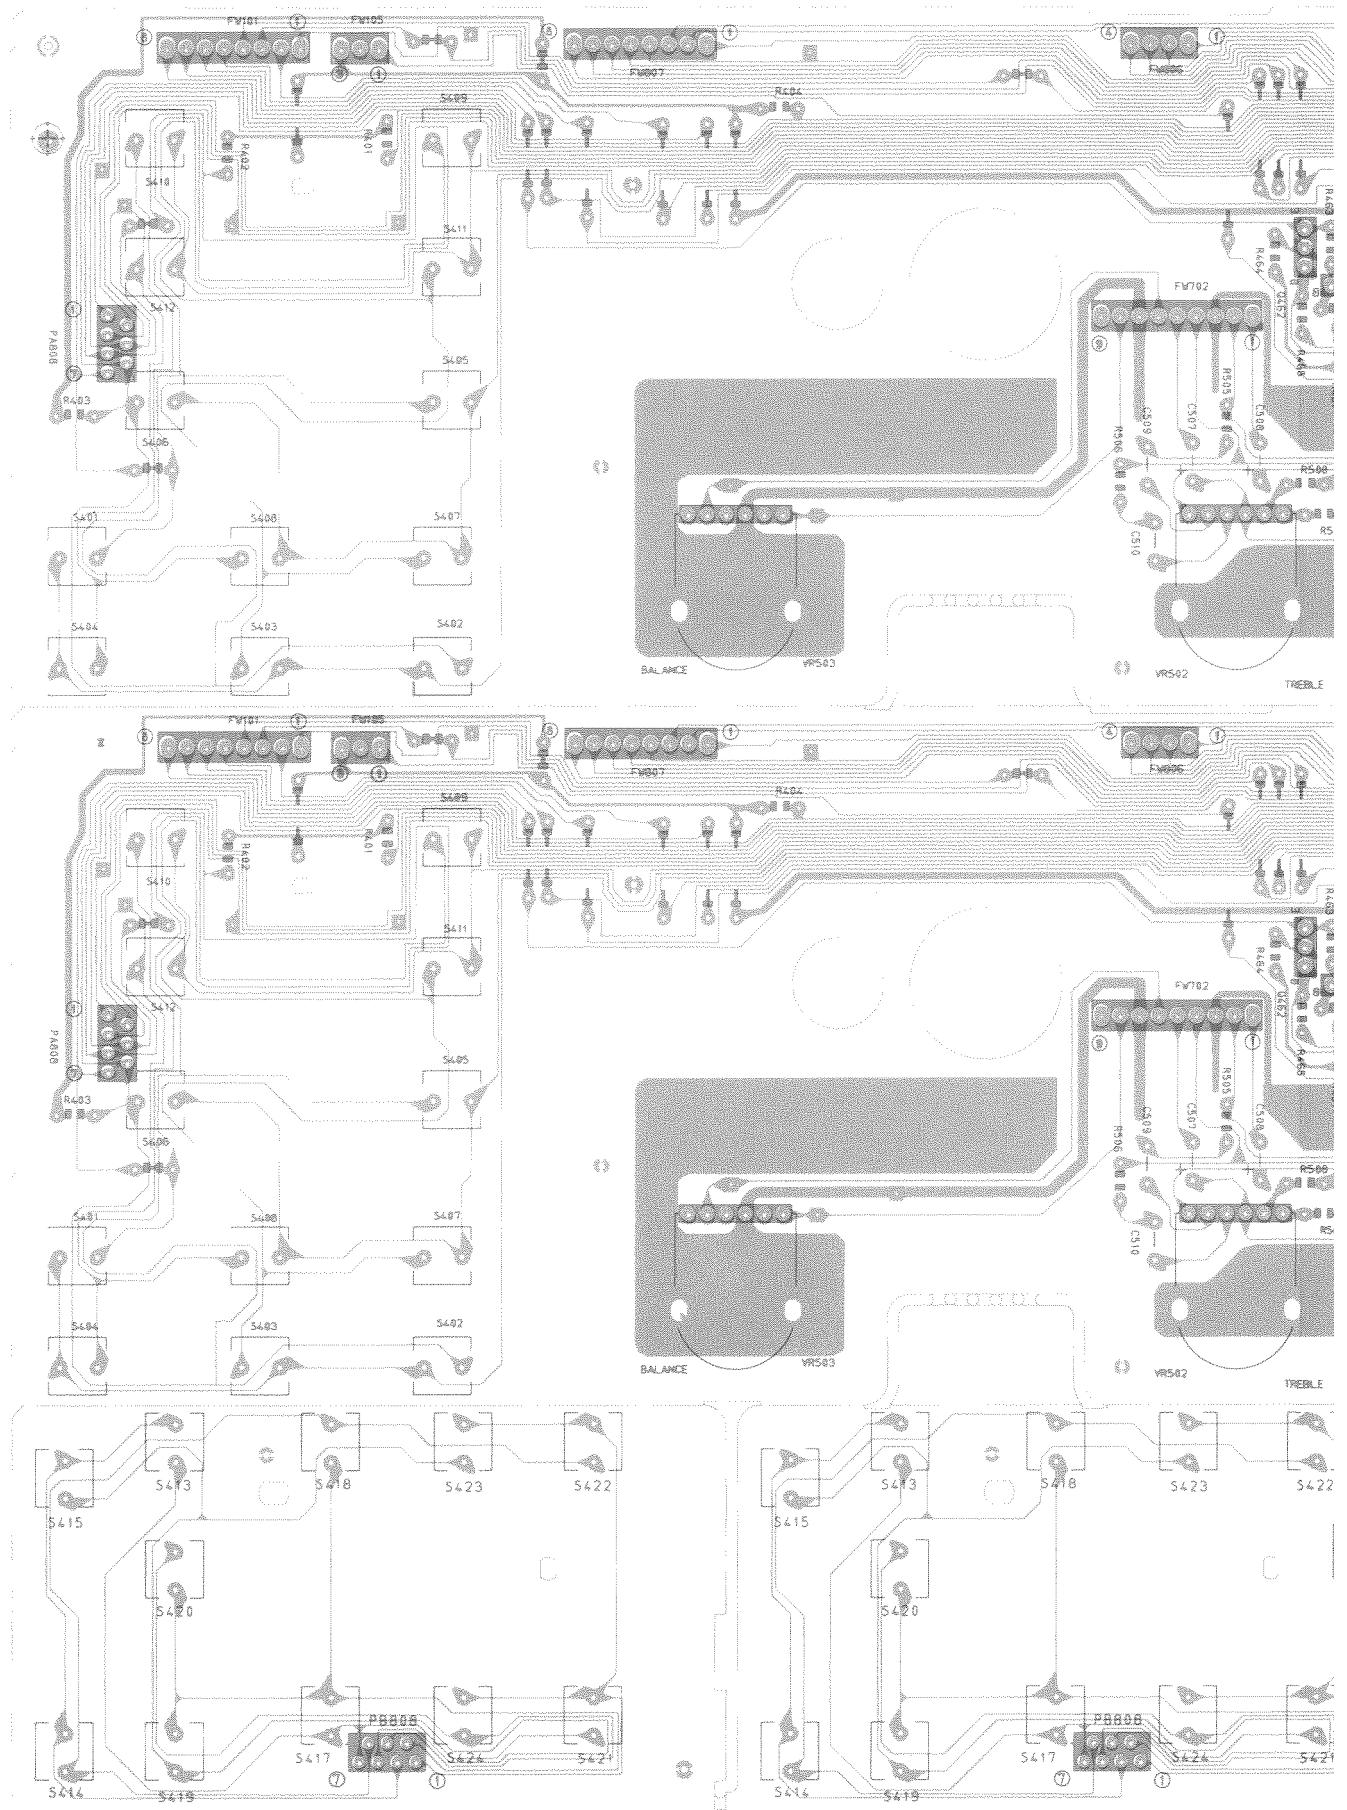

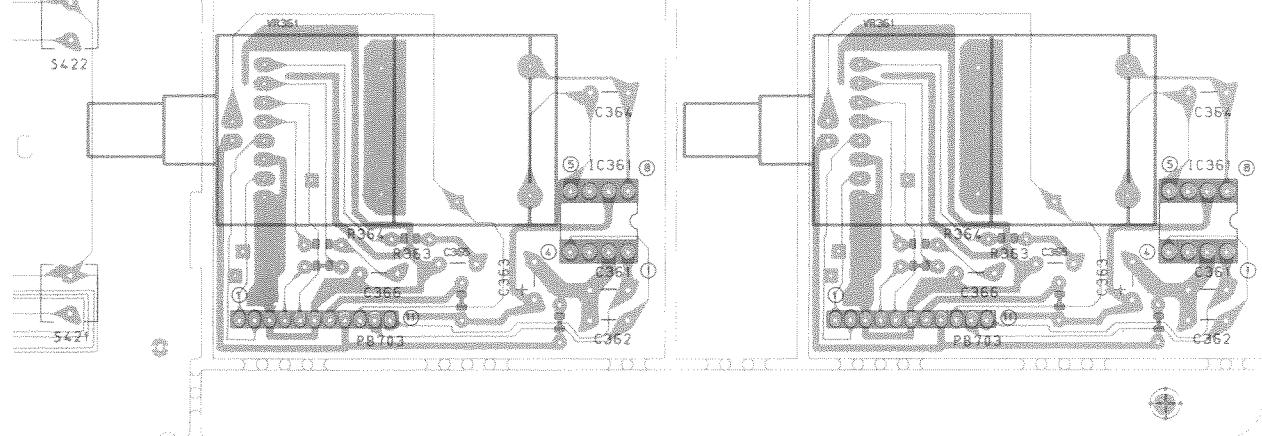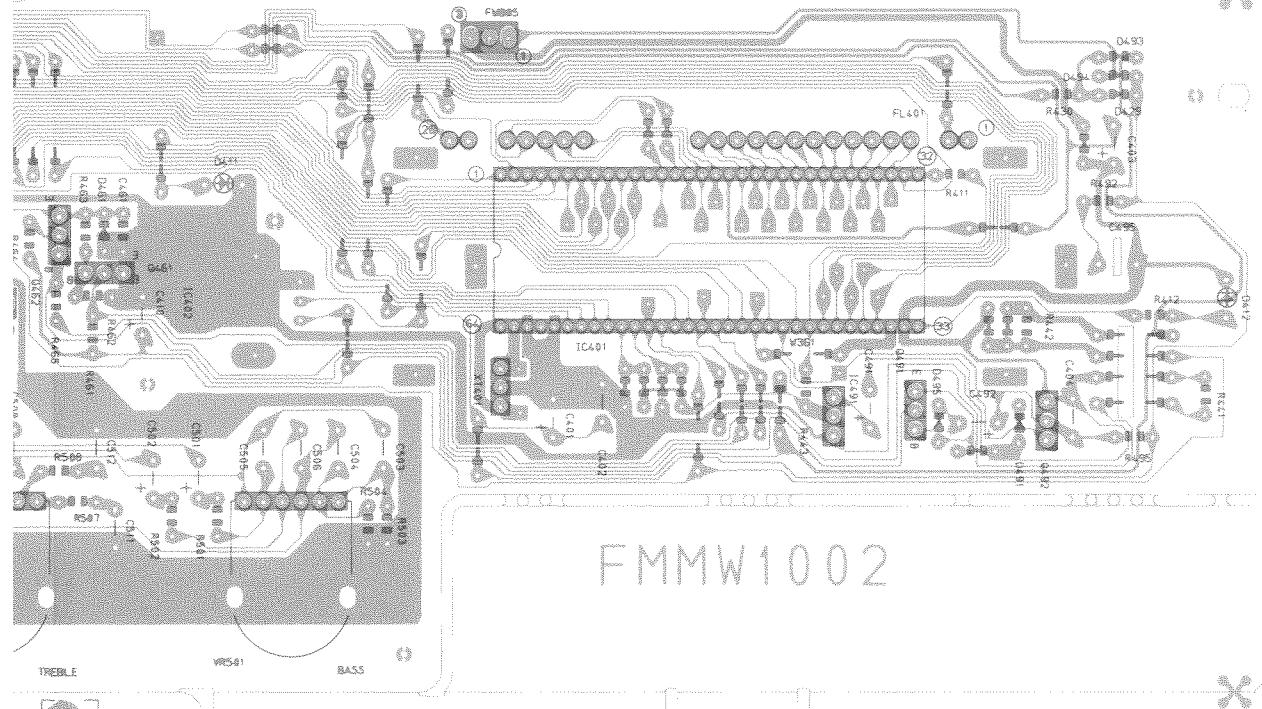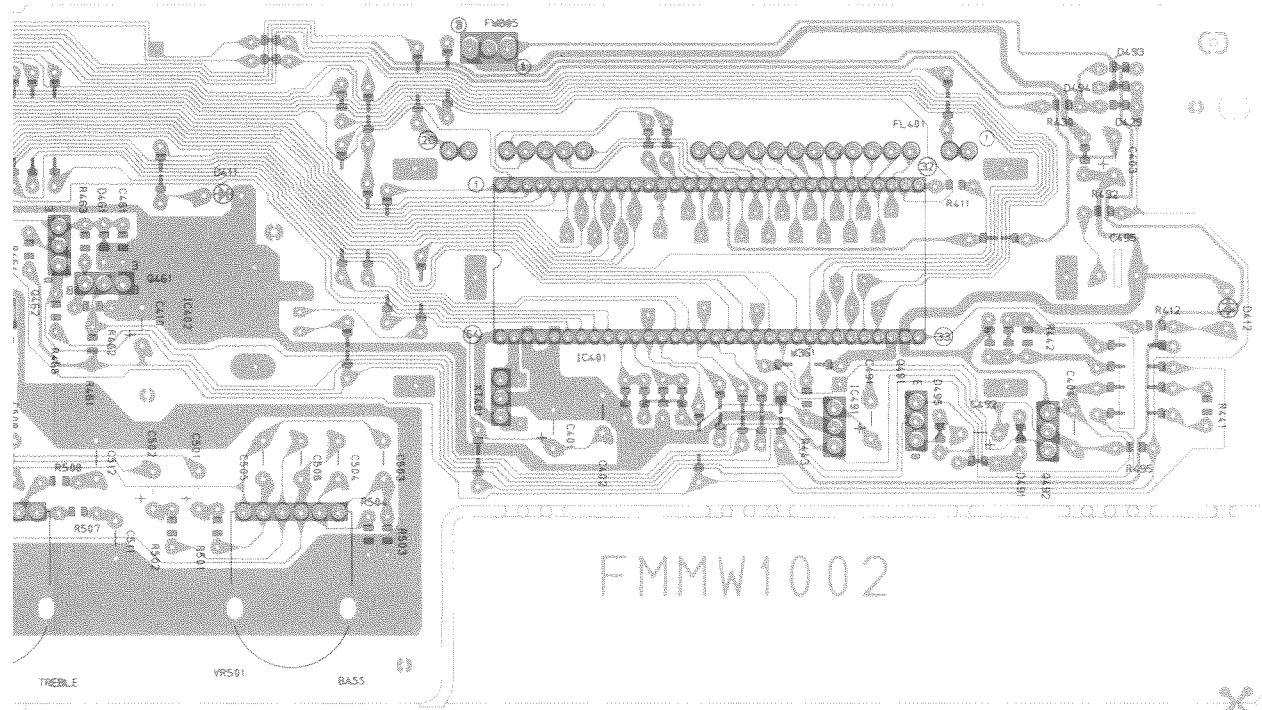

PARTS LIST


Note : All printed circuit boards and its assemblies are not available as service parts.

Contents

General Exploded View and Parts List	2-2
Printed Circuit Board Ass'y and Parts List	2-5
■ FMH-001 <input type="checkbox"/> Power Supply , Amplifier & Selector PC Board Ass'y	2-5
■ FMB-001 <input type="checkbox"/> Front , Tone Control & Volume PC Board Ass'y	2-10
■ FMA-001 <input type="checkbox"/> Tuner PC Board Ass'y	2-12
Accessories List	2-15
Packing Materials and Part Numbers	2-16

General Exploded View and Parts List

シンボルNo. M 1 M M

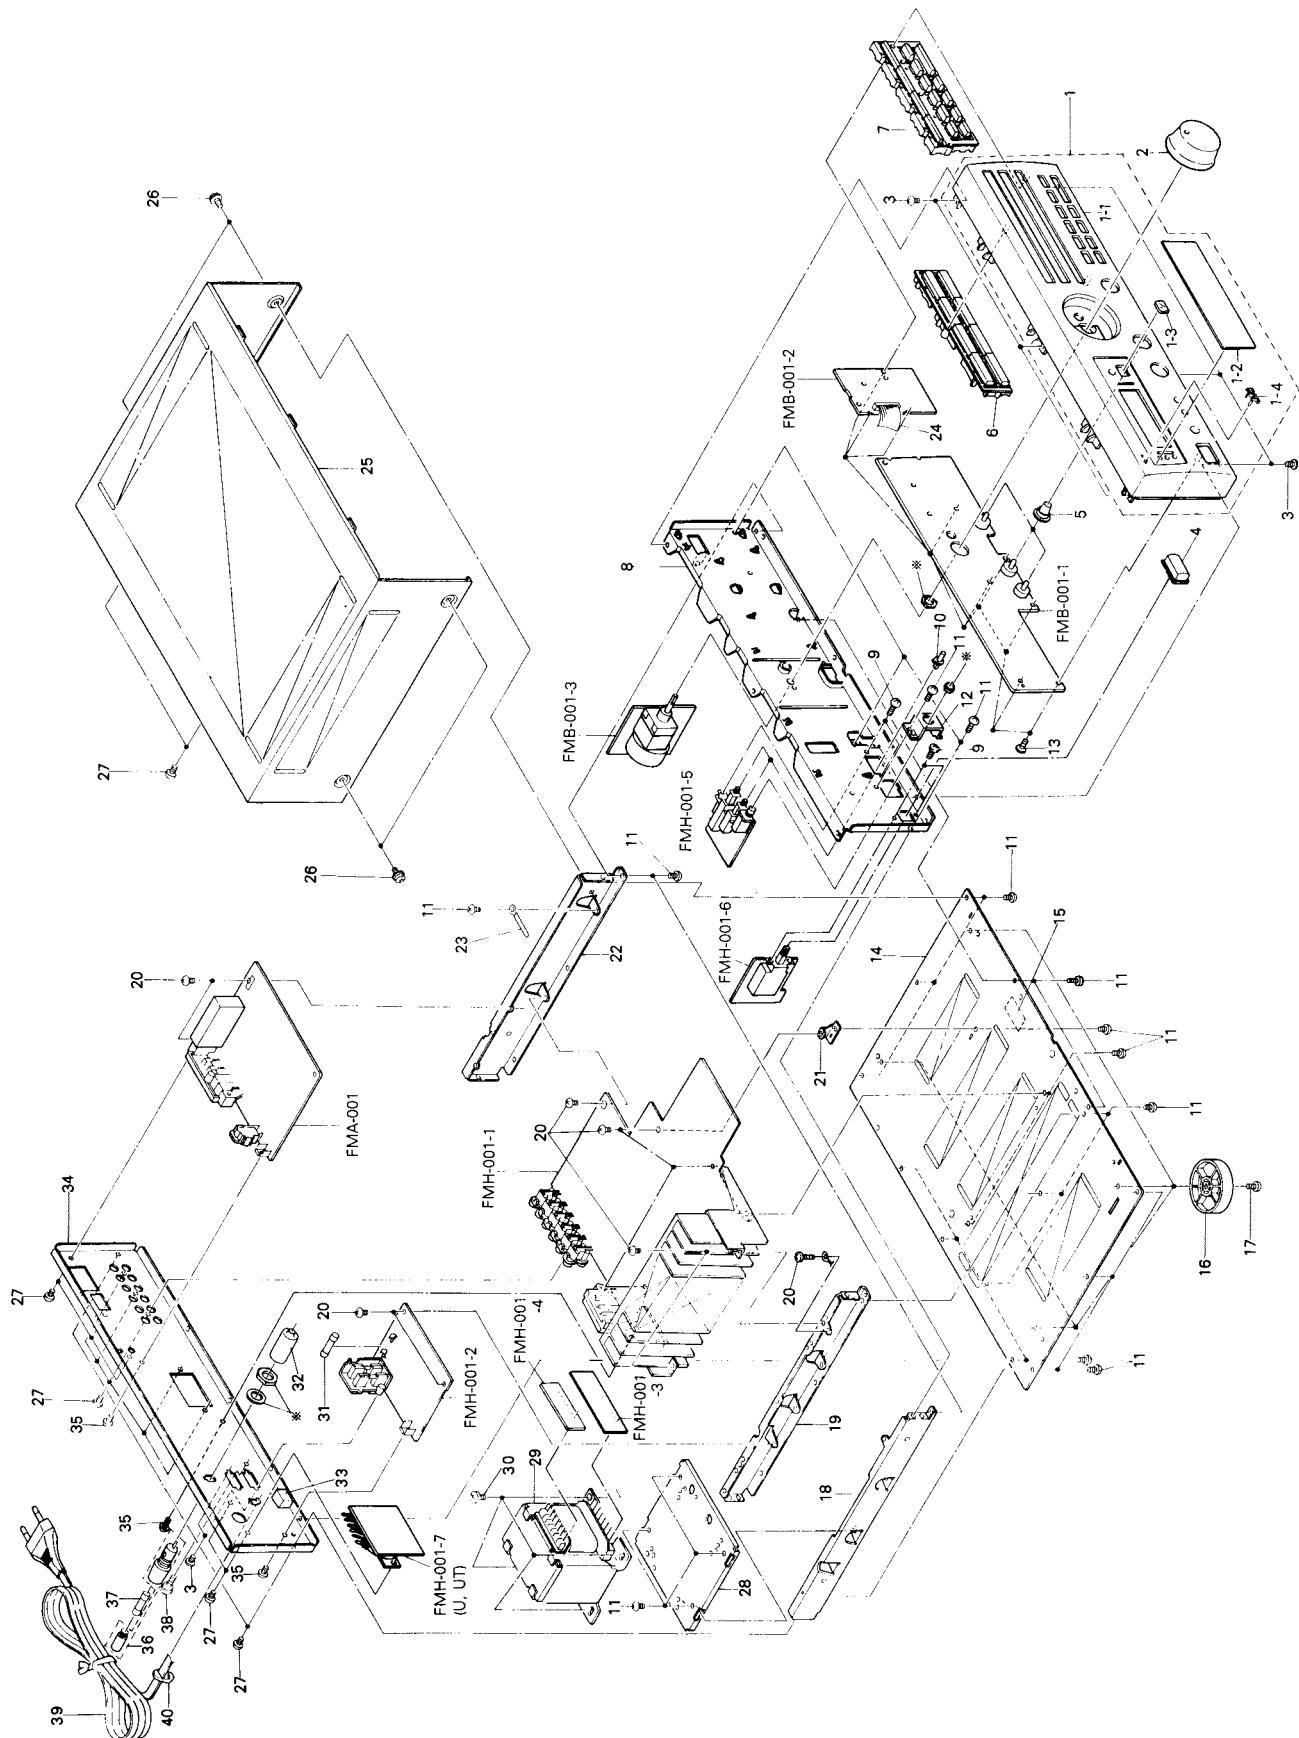

* mark indicates attached part.

シンボルNo. M 1 M M

Parts List

Item	Part Number	Part Name	Q'ty	Description	Areas
1	EFP-RX212BKU(S) EFP-RX212BKU(S) EFP-RX212BKE(S) EFP-RX212BKE(S) EFP-RX212BKE(S)	FRONT PANEL ASSY FRONT PANEL ASSY FRONT PANEL ASSY FRONT PANEL ASSY FRONT PANEL ASSY	1 1 1 1 1		U UT BS EF EN
1-1	EFP-RX212BKE(S) E102647-018SM E102647-018SM E102647-019SM E102647-019SM	FRONT PANEL ASSY FRONT PANEL FRONT PANEL FRONT PANEL FRONT PANEL	1 1 1 1 1		G U UT BS EF
1-2	E102647-019SM E102647-019SM	FRONT PANEL FRONT PANEL	1 1		EN G
1-3	E308268-007SM	WINDOW SCREEN	1		
1-4	E72436-006 VJD5429-001	SCREEN JVC MARK	1 1		
2	E308842-002SM	VOLUME KNOB ASSY	1		
3	SDSG3008M SDSG3008M SDSG3008M	SCREW SCREW SCREW	6 2 2		U UT
4	FMXP4001-001	POWER BUTTON	1		
5	E308267-002SM	TONE KNOB	3		
6	E207677-002SM	PUSH BUTTON	1		
7	E207678-004SM	PUSH BUTTON	1		
8	E102649-004SM	FRONT BRACKET	1		
9	SBST3006Z	SCREW	5		
10	E407321-002SM	SPEAKER BUTTON	2		
11	SBSG3008Z	SCREW	30		
12	E407323-002SM	HEADPHONE BRACKET	1		
13	SDSF2608Z	SCREW	9		
14	E102371-005SM	BOTTOM BASE	1		
15	E70115-002	CAUTION LABEL	1		
16	E406379-008SS E406379-008SS E406379-008SS E406379-008SS	FOOT FOOT FOOT FOOT	4 4 4 4		BS EF EN G
17	E406379-010SS	FOOT	4		
18	SBST3010Z	FOOT	4		
19	E206956-002SM E206958-004SM	SCREW SIDE BRACKET CENTER BRACKET	4 1 1	FOR FOOT LEFT	U UT
20	SBSG3008CC	SCREW	6		
21	E68587-222SM	BRACKET PLATE	1		
22	E206957-001SM	SIDE BRACKET	1	RIGHT	
23	VKZ4001-111S	WIRE CLAMP	2		
24	FMWH0001-001	CARD WIRE	1		
25	E206967-002SM	METAL COVER	1		
26	E61660-004	SPECIAL SCREW	4		
27	SBSG3008M SBSG3008M SBSG3008M	SCREW SCREW SCREW	12 2 2		U UT
28	E206959-002SM	TRANS BRACKET	1		
29	FMTTP1070-01EA FMTTP1070-01EA FMTTP1070-01EA FMTTP1070-01EA	POWER TRANSFORMER POWER TRANSFORMER POWER TRANSFORMER POWER TRANSFORMER	1 1 1 1		BS EF EN G

△	Item	Part Number	Part Name	Q'ty	Description	Areas
△		FMTTP1070-01FA	POWER TRANSFORMER	1		U
△		FMTTP1070-01FA	POWER TRANSFORMER	1		UT
△	30	E65389-002	SPECIAL SCREW	4		
△	31	QMF51E2-1R2J1BS	FUSE	1	F001 (T1.25A / 250V)	BS
△		QMF51E2-1R25J1	FUSE	1	F001 (T1.25A / 250V)	EF
△		QMF51E2-1R25J1	FUSE	1	F001 (T1.25A / 250V)	EN
△		QMF51E2-1R25J1	FUSE	1	F001 (T1.25A / 250V)	G
△	32	E69291-001	FUSE COVER	1		U
△		E69291-001	FUSE COVER	1		UT
△	33	E306805-023	SPACER	1		BS
		E306805-023	SPACER	1		EF
		E306805-023	SPACER	1		EN
	34	E207332-041SM	REAR PANEL	1		G
		E207332-041SM	REAR PANEL	1		BS
		E207332-043SM	REAR PANEL	1		U
		E207332-045SM	REAR PANEL	1		UT
	35	E207332-045SM	REAR PANEL	1		
		SBST3006M	SCREW	3		
	36	QMG0301-003	FUSE HOLDER	1		U
△		QMG0301-003	FUSE HOLDER	1		UT
△	37	QMF51E2-1R25J1	FUSE	1	F002 (T1.25A / 250V)	U
△		QMF51E2-1R25J1	FUSE	1	F002 (T1.25A / 250V)	UT
△	38	E73562-003	SPECIAL SCREW	1		
△	39	QMP5530-0085BS	POWER CORD	1		BS
△		QMP3900-200	POWER CORD	1		EF
△		QMP3900-200	POWER CORD	1		EN
△		QMP3900-200	POWER CORD	1		G
△		QMP7520-200	POWER CORD	1		U
△	40	QMP7520-200	POWER CORD	1		UT
△		QHS3876-162BS	CORD STOPPER	1		BS
△		QHS3876-162	CORD STOPPER	1		EF
△		QHS3876-162	CORD STOPPER	1		EN
△		QHS3876-162	CORD STOPPER	1		G
△	41	QHS3876-162	CORD STOPPER	1		U
△		QHS3876-162	CORD STOPPER	1		UT
△		EWS282-001	SOCKET WIRE	1		U
△		EWS282-001	SOCKET WIRE	1		UT
△		— QZL1031-101	LABEL	1		EF
		E70027-001	LABEL	1		EN
		— FMND4001-001	FTZ LABEL	1		G
		— FMND3004-001	RATING LABEL	1		UT
		— VND4003-030	UL FUSE LABEL	1		BS
		VND4003-030	UL FUSE LABEL	1		EF
		VND4003-030	UL FUSE LABEL	1		EN
		VND4003-030	UL FUSE LABEL	1		G

△ SAFETY PARTS

The Marks for Designated Areas

BS the U.K.
 G Germany
 No mark indicates all areas.


EN Scandinavia
 UT Taiwan

EF Continental Europe
 U Universal Type

Printed Circuit Board Ass'y and Parts List

■FMH-001□ Power Supply , Amplifier & Selector PC Board Ass'y

Note : FMH-001 □ varies according to the areas employed. See note (1) when placing an order.

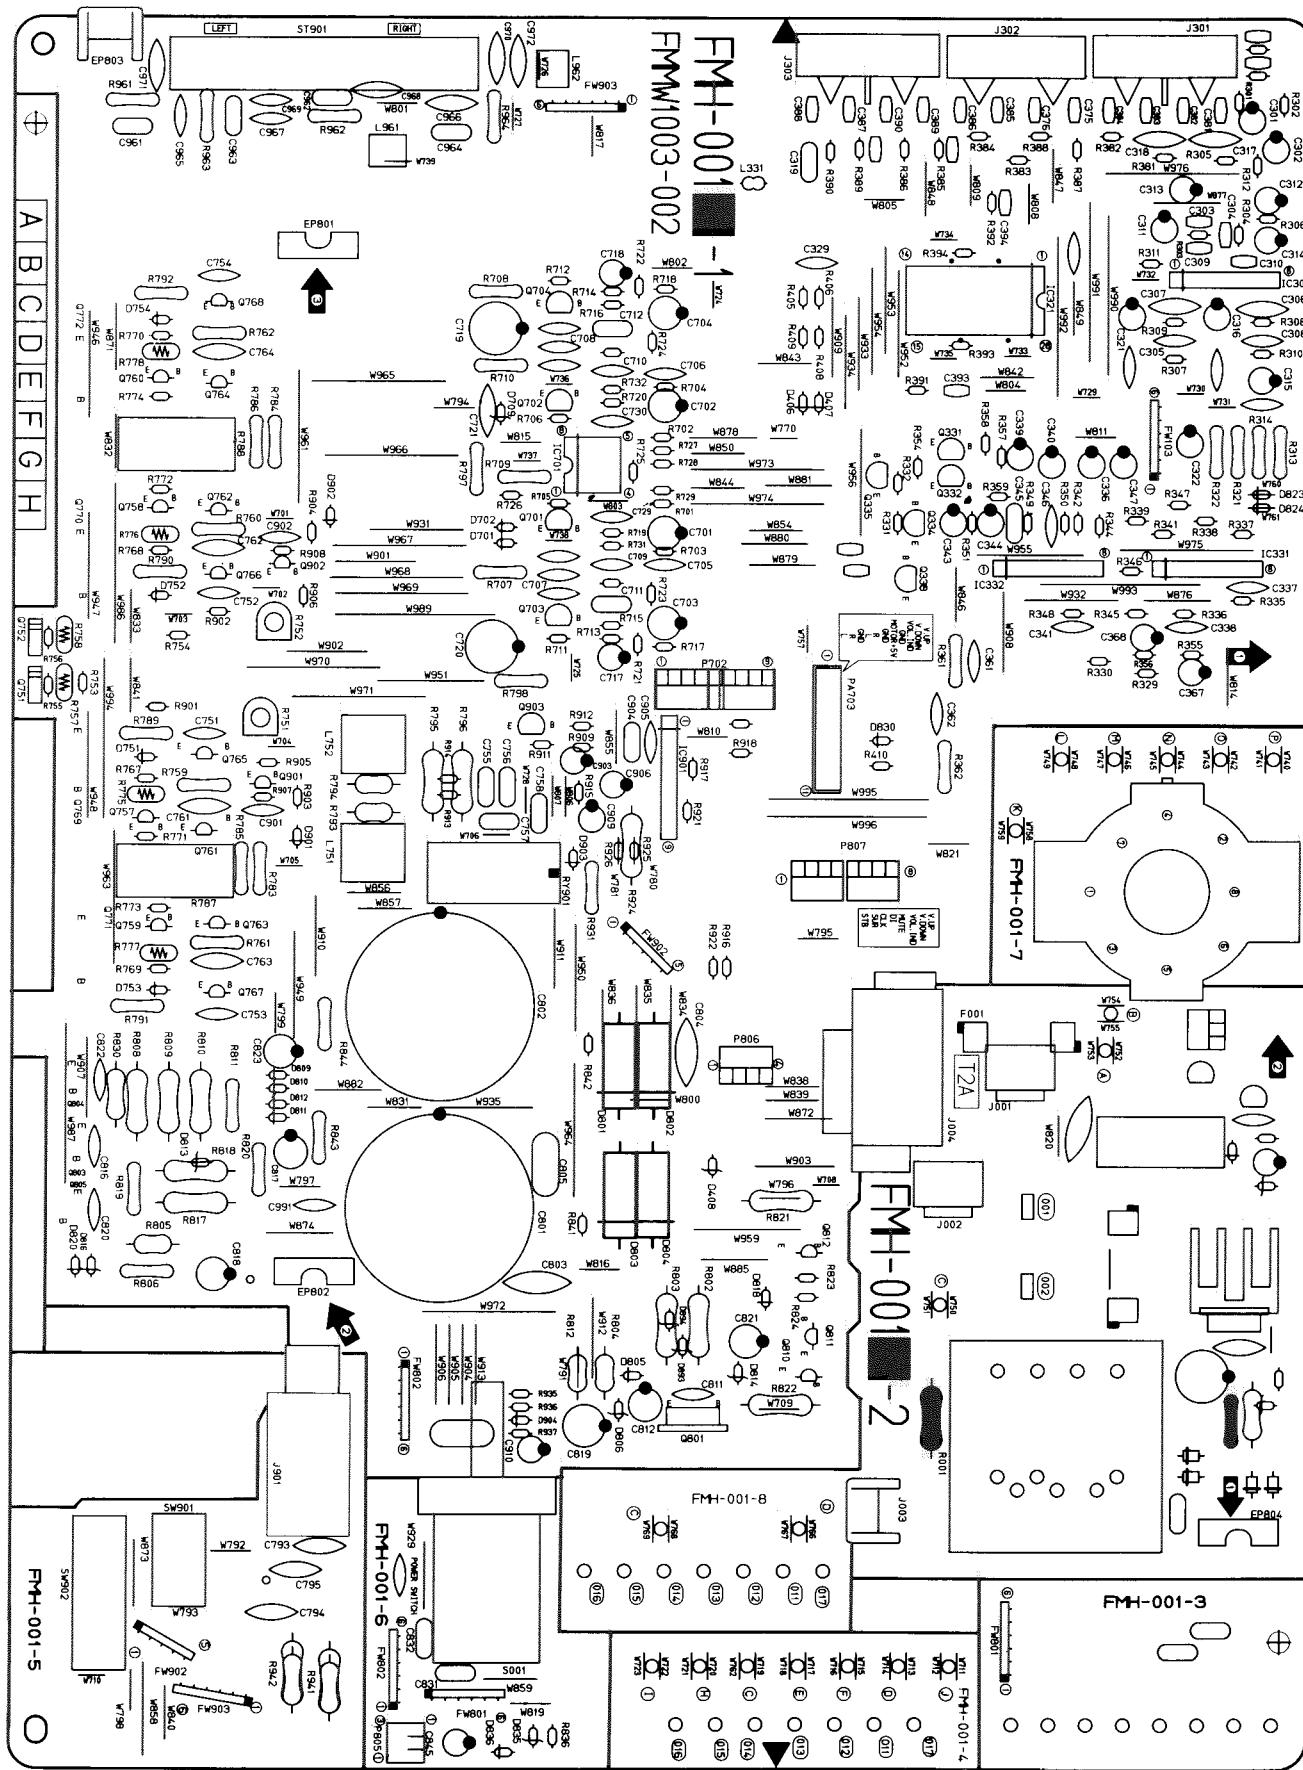

Note (1)

PC Board Ass'y	Version	Designated Areas
FMH-001 [C]	U UT	Universal Type Taiwan
FMH-001 [D]	EN EF	Scandinavia Continental Europe
FMH-001 [F] BS	BS	the U.K.
FMH-001 [G]	G	Germany

Diodes

△ ITEM	PART NUMBER	DESCRIPTION	AREA
D813	MTZ20JC	ZENER DIODEROHM	
D814	MTZ5.1JC	ZENER DIODEROHM	
D816	MTZ20JC	ZENER DIODEROHM	
D818	1SS133	SI.DIODE ROHM	
D820	1SS133	SI.DIODE ROHM	
D830	1SS133	SI.DIODE ROHM	
D835	MTZ5.6JC	ZENER DIODEROHM	
D836	1SS133	SI.DIODE ROHM	
D901	1SS133	SI.DIODE ROHM	
D902	1SS133	SI.DIODE ROHM	
D903	1SS133	SI.DIODE ROHM	
D904	1SS133	SI.DIODE ROHM	

△ : SAFETY PARTS

Transistors

△ ITEM	PART NUMBER	DESCRIPTION	AREA
Q331	BA1L4M-T	D.T.R.I.M	
Q332	2SD655(D,E)	SI.TRANSIST	
Q333	2SD2144S(VW)	SI.TRANSISTROHM	
Q334	2SD2144S(VW)	SI.TRANSISTROHM	
Q335	BN1L4M	DIGITAL TRA	
Q701	2SC2910(T)	SI.TRANSISTSANYO	
Q702	2SC2910(T)	SI.TRANSISTSANYO	
Q703	2SA970(GR)	SI.TRANSIST	
Q704	2SA970(GR)	SI.TRANSIST	
Q751	2SD636(Q,R)	SI.TRANSIST	
Q752	2SD636(Q,R)	SI.TRANSIST	
Q757	2SC945A	SI.TRANSISTNEC	
Q758	2SC945A	SI.TRANSISTNEC	
Q759	2SA733A(P,K)	SI.TRANSIST	
Q760	2SA733A(P,K)	SI.TRANSIST	
Q761	2SC2240(BL)	SI.TRANSIST	
Q762	2SC2240(BL)	SI.TRANSIST	
Q763	2SA970(GR)	SI.TRANSIST	
Q764	2SA970(GR)	SI.TRANSIST	
Q765	2SC2235(O,Y)	SI.TRANSISTTOSHIBA	
Q766	2SC2235(O,Y)	SI.TRANSISTTOSHIBA	
Q767	2SA965(Y)	SI.TRANSIST	
Q768	2SA965(Y)	SI.TRANSIST	
Q801	2SB1187(E,F)	SI.TRANSIST	
Q803	2SD2061(F,E)	SI.TRANSISTROHM	
Q804	2SD2061(F,E)	SI.TRANSISTROHM	
Q805	2SB1187F(E,F)	SI.TRANSISTROHM	
Q810	2SD2144S(VW)	SI.TRANSISTROHM	
Q811	2SD2144S(VW)	SI.TRANSISTROHM	
Q812	BN1A4P	DIGITAL TRANE	
Q901	2SC1775AV(F1)	SI.TRANSISTHITACHI	
Q902	2SC1775AV(F1)	SI.TRANSISTHITACHI	
Q903	2SA1038(S,E)	SILICON	

△ : SAFETY PARTS

I.C.s

△ ITEM	PART NUMBER	DESCRIPTION	AREA
IC301	NJM458BOLD	I.C(MONO-ANDAINICHI	
IC321	TC9164N	I.C(DIGI-MOTOSHIBA	
IC331	BA15218N	I.C(MONO-ANROHM	
IC332	BA15218N	I.C(MONO-ANROHM	
IC701	NJM4560DD	I.C(MONO-ANDAINICHI	
IC901	TA7317P	I.C(MONO-ANTOSHIBA	

△ : SAFETY PARTS

Diodes

△ ITEM	PART NUMBER	DESCRIPTION	AREA
D406	1SS133	SI.DIODE ROHM	
D407	1SS133	SI.DIODE ROHM	
D408	MTZ6.8JC	ZENER DIODEROHM	
D701	1SS133	SI.DIODE ROHM	
D702	1SS133	SI.DIODE ROHM	
D709	MTZ3.0JB	ZENER DIODEROHM	
D751	1SS133	SI.DIODE ROHM	
D752	1SS133	SI.DIODE ROHM	
D753	1SS133	SI.DIODE ROHM	
D754	1SS133	SI.DIODE ROHM	
D801	30DF2SFC	SI.DIODE NIHONINTER	
D802	30DF2SFC	SI.DIODE NIHONINTER	
D803	30DF2SFC	SI.DIODE NIHONINTER	
D804	30DF2SFC	SI.DIODE NIHONINTER	
D805	1SS133	SI.DIODE ROHM	
D806	MTZ16JC	ZENER DIODEROHM	
D809	1SS133	SI.DIODE ROHM	
D810	MTZ16JC	ZENER DIODEROHM	
D811	1SS133	SI.DIODE ROHM	
D812	MTZ7.5JC	ZENER DIODEROHM	

△ : SAFETY PARTS

Capacitors

△ ITEM	PART NUMBER	DESCRIPTION	AREA
C301	QETB1HM-475	4.7MF 50V AL E.CAPAC	IT
C302	QETB1HM-475	4.7MF 50V AL E.CAPAC	IT
C303	QCB81HK-471Y	470PF 50V CER.CAPACI	TO BS
C303	QCB81HK-471Y	470PF 50V CER.CAPACI	TO EF
C303	QCB81HK-471Y	470PF 50V CER.CAPACI	TO G
C303	QCB81HK-101Y	100PF 50V CER.CAPACI	TO U
C303	QCB81HK-101Y	100PF 50V CER.CAPACI	TO UT
C304	QCB81HK-471Y	470PF 50V CER.CAPACI	TO BS
C304	QCB81HK-471Y	470PF 50V CER.CAPACI	TO EF
C304	QCB81HK-471Y	470PF 50V CER.CAPACI	TO EN
C304	QCB81HK-471Y	470PF 50V CER.CAPACI	TO G
C304	QCB81HK-101Y	100PF 50V CER.CAPACI	TO U
C304	QCB81HK-101Y	100PF 50V CER.CAPACI	TO UT
C305	QCY31HK-182Z	1800PF 50V CER.CAPACI	TO
C306	QCY31HK-182Z	1800PF 50V CER.CAPACI	TO
C307	QCY31HK-682Z	6800PF 50V CER.CAPACI	TO
C308	QCY31HK-682Z	6800PF 50V CER.CAPACI	TO
C309	QCB81HK-101Y	100PF 50V CER.CAPACI	TO
C310	QCB81HK-101Y	100PF 50V CER.CAPACI	TO
C311	QETB1HM-475	4.7MF 50V AL E.CAPAC	IT
C312	QETB1HM-475	4.7MF 50V AL E.CAPAC	IT
C313	QETB1AM-107	100MF 10V AL E.CAPAC	IT
C314	QETB1AM-107	100MF 10V AL E.CAPAC	IT
C315	QETB1CM-476	47MF 16V AL E.CAPAC	IT
C316	QETB1CM-476	47MF 16V AL E.CAPAC	IT
C317	QCF21HP-223A	0.022MF 50V CER.CAPACI	TO
C318	QCF21HP-223A	0.022MF 50V CER.CAPACI	TO
C319	QVF81HK-154	0.15MF 50V THIN FILM	CA
C321	QETB1EM-226	22MF 25V E.CAPACITO R	
C322	QETB1EM-226	22MF 25V E.CAPACITO R	
C329	QCS21HK-331	330PF 50V CER.CAPACI	TO
C336	QETB1CM-226	22MF 50V E.CAPACITO R	
C337	QCS21HK-100	10PF 50V CER.CAPACI	TO
C338	QCS21HK-100	10PF 50V CER.CAPACI	TO
C339	QETB1HM-475	4.7MF 50V AL E.CAPAC	IT
C340	QETB1HM-475	4.7MF 50V AL E.CAPAC	IT
C341	QCS21HK-330	33PF 50V CER.CAPACI	TO
C343	QETB1HM-475	4.7MF 50V AL E.CAPAC	IT
C344	QETB1HM-105	1MF 50V AL E.CAPAC	IT
C345	QLFB1HK-392	3900PF 50V MYLAR CAPA	CI
C346	QCS21HK-100	10PF 50V CER.CAPACI	TO
C347	QETB1EM-226	22MF 25V E.CAPACITO R	
C361	QCF21HP-223A	0.022MF 50V CER.CAPACI	TO
C362	QCF21HP-223A	0.022MF 50V CER.CAPACI	TO
C367	QETB1HM-475	4.7MF 50V AL E.CAPAC	IT
C368	QETB1HM-475	4.7MF 50V AL E.CAPAC	IT
C375	QCB81HK-331Y	330PF 50V CER.CAPACI	TO EF
C375	QCB81HK-331Y	330PF 50V CER.CAPACI	TO EN
C375	QCB81HK-331Y	330PF 50V CER.CAPACI	TO G
C376	QCB81HK-331Y	330PF 50V CER.CAPACI	TO BS
C376	QCB81HK-331Y	330PF 50V CER.CAPACI	TO EF
C376	QCB81HK-331Y	330PF 50V CER.CAPACI	TO G
C376	QCB81HK-331Y	330PF 50V CER.CAPACI	TO BS
C376	QCB81HK-331Y	330PF 50V CER.CAPACI	TO EN
C376	QCB81HK-331Y	330PF 50V CER.CAPACI	TO G
C381	QCB81HK-331Y	330PF 50V CER.CAPACI	TO BS
C381	QCB81HK-331Y	330PF 50V CER.CAPACI	TO EF
C381	QCB81HK-331Y	330PF 50V CER.CAPACI	TO EN
C381	QCB81HK-331Y	330PF 50V CER.CAPACI	TO G
C382	QCB81HK-331Y	330PF 50V CER.CAPACI	TO BS
C382	QCB81HK-331Y	330PF 50V CER.CAPACI	TO EF
C382	QCB81HK-331Y	330PF 50V CER.CAPACI	TO EN
C382	QCB81HK-331Y	330PF 50V CER.CAPACI	TO G
C383	QCB81HK-331Y	330PF 50V CER.CAPACI	TO BS
C383	QCB81HK-331Y	330PF 50V CER.CAPACI	TO EF
C383	QCB81HK-331Y	330PF 50V CER.CAPACI	TO EN
C383	QCB81HK-331Y	330PF 50V CER.CAPACI	TO G
C384	QCB81HK-331Y	330PF 50V CER.CAPACI	TO BS
C384	QCB81HK-331Y	330PF 50V CER.CAPACI	TO EF
C384	QCB81HK-331Y	330PF 50V CER.CAPACI	TO EN
C384	QCB81HK-331Y	330PF 50V CER.CAPACI	TO G
C385	QCB81HK-331Y	330PF 50V CER.CAPACI	TO BS
C385	QCB81HK-331Y	330PF 50V CER.CAPACI	TO EF
C385	QCB81HK-331Y	330PF 50V CER.CAPACI	TO EN
C385	QCB81HK-331Y	330PF 50V CER.CAPACI	TO G

△ : SAFETY PARTS

Capacitors

▲ ITEM	PART NUMBER	DESCRIPTION				AREA
C386	QCB81HK-331Y	330PF	50V	CER.CAPACI	TG BS	
C386	QCB81HK-331Y	330PF	50V	CER.CAPACI	TO EF	
C386	QCB81HK-331Y	330PF	50V	CER.CAPACI	TO EN	
C386	QCB81HK-331Y	330PF	50V	CER.CAPACI	TO G	
C387	QCB81HK-561Y	560PF	50V	CER.CAPACI	TO DS	
C387	QCB81HK-561Y	550PF	50V	CER.CAPACI	TO EF	
C387	QCB81HK-561Y	560PF	50V	CER.CAPACI	TO EW	
C387	QCB81HK-561Y	560PF	50V	CER.CAPACI	TO G	
C388	QCB81HK-561Y	560PF	50V	CER.CAPACI	TO BS	
C388	QCB81HK-561Y	560PF	50V	CER.CAPACI	TO EF	
C388	QCB81HK-561Y	560PF	50V	CER.CAPACI	TO EN	
C388	QCB81HK-561Y	560PF	50V	CER.CAPACI	TO G	
C389	QCB81HK-221Y	220PF	50V	CER.CAPACI	TO BS	
C389	QCB81HK-221Y	220PF	50V	CER.CAPACI	TO EF	
C389	QCB81HK-221Y	220PF	50V	CER.CAPACI	TO EN	
C389	QCB81HK-221Y	220PF	50V	CER.CAPACI	TO G	
C390	QCB81HK-221Y	220PF	50V	CER.CAPACI	TO BS	
C390	QCB81HK-221Y	220PF	50V	CER.CAPACI	TO EF	
C390	QCB81HK-221Y	220PF	50V	CER.CAPACI	TO EN	
C393	QCB81HK-221Y	220PF	50V	CER.CAPACI	TO DS	
C393	QCB81HK-221Y	220PF	50V	CER.CAPACI	TO EF	
C393	QCB81HK-221Y	220PF	50V	CER.CAPACI	TO EN	
C394	QCB81HK-221Y	220PF	50V	CER.CAPACI	TO G	
C394	QCB81HK-221Y	220PF	50V	CER.CAPACI	TO BS	
C394	QCB81HK-221Y	220PF	50V	CER.CAPACI	TO EF	
C394	QCB81HK-221Y	220PF	50V	CER.CAPACI	TO EN	
C701	QETB1HM-106	10MF	50V	E.CAPACITO R		
C702	QETB1HM-106	10MF	50V	E.CAPACITO R		
C703	QETB1AM-107	100MF	10V	AL E.CAPAC IT		
C704	QETB1AM-107	100MF	10V	AL E.CAPAC IT		
C705	QCS21HJ-101A	100PF	50V	CER.CAPACI TO U		
C705	QCS21HJ-101A	100PF	50V	CER.CAPACI TO UT		
C706	QCS21HJ-101A	100PF	50V	CER.CAPACI TO U		
C706	QCS21HJ-101A	100PF	50V	CER.CAPACI TO UT		
C707	QCS21HJ-270	27PF	50V	CER.CAPACI TO		
C708	QCS21HJ-270	27PF	50V	CER.CAPACI TO		
C709	QCS21HJ-270	27PF	50V	CER.CAPACI TO		
C710	QCS21HJ-270	27PF	50V	CER.CAPACI TO		
C711	QFLB1HJ-103	0.01MF	50V	MYLAR CAPA CI		
C712	QFLB1HJ-103	0.01MF	50V	MYLAR CAPA CI		
C717	QETB1HM-226	22MF	50V	AL E.CAPAC IT		
C718	QETB1HM-226	22MF	50V	AL E.CAPAC IT		
C719	QETB1JM-476	47MF	63V	AL E.CAPAC IT		
C720	QETB1JM-476	47MF	63V	AL E.CAPAC IT		
C721	QCF21HP-223A	0.022MF	50V	CER.CAPACI TO		
C729	QCS21HJ-220	22PF	50V	CER.CAPACI TO		
C730	QCS21HJ-220	22PF	50V	CER.CAPACI TO		
C751	QCS22HJ-470A	47PF	500V	CER.CAPACI TO		
C752	QCS22HJ-470A	47PF	500V	CER.CAPACI TO		
C753	QCS22HJ-470A	47PF	500V	CER.CAPACI TO		
C754	QCS22HJ-470A	47PF	500V	CER.CAPACI TO		
C755	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA CI		
C756	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA CI		
C757	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA CI		
C758	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA CI		
C761	QCF21HP-473A	0.047MF	50V	CER.CAPACI TO		
C762	QCF21HP-473A	0.047MF	50V	CER.CAPACI TO		
C763	QCF21HP-473A	0.047MF	50V	CER.CAPACI TO		
C764	QCF21HP-473A	0.047MF	50V	CER.CAPACI TO		
C793	QCS21HJ-221	220PF	50V	CER.CAPACI TO BS		
C793	QCS21HJ-221	220PF	50V	CER.CAPACI TO EF		
C793	QCS21HJ-221	220PF	50V	CER.CAPACI TO EN		
C794	QCS21HJ-221	220PF	50V	CER.CAPACI TO G		
C794	QCS21HJ-221	220PF	50V	CER.CAPACI TO BS		
C794	QCS21HJ-221	220PF	50V	CER.CAPACI TO EF		
C794	QCS21HJ-221	220PF	50V	CER.CAPACI TO EN		
C795	QCF21HP-223A	0.022MF	50V	CER.CAPACI TO		
C801	FMEW5001-478			E.CAPA	BS	
C801	FMEW5001-478			E.CAPA	EF	
C801	FMEW5001-478			E.CAPA	EN	
C801	FMEW5001-478			E.CAPA	G	
C801	FMEW5001-478			E.CAPA	U	
C802	FMEW5001-478			E.CAPA	UT	
C802	FMEW5001-478			E.CAPA	BS	
C802	FMEW5001-478			E.CAPA	EF	
C802	FMEW5001-478			E.CAPA	EN	
C802	FMEW5001-478			E.CAPA	G	
C802	FMEW5001-478			E.CAPA	U	
C803	QCE22HP-103	0.01MF	500V	CERAMIC		
C804	QCE22HP-103	0.01MF	500V	CERAMIC		
C805	QFN82CJ-224	0.22MF	160V	MYLAR CAPA CI		
C811	QCF21HP-472	4700PF	50V	CER.CAPACI TO		
C812	QETB1EM-107	100MF	25V	AL E.CAPAC IT		
C816	QCF21HP-472	4700PF	50V	CER.CAPACI TO		
C817	QETB1EM-107	100MF	25V	AL E.CAPAC IT		
C818	QETB1HM-476	47MF	50V	E.CAPACITO R		
C819	QETB1HM-107	100MF	50V	E.CAPACITO R		
C820	QCF21HP-472	4700PF	50V	CER.CAPACI TO		
C821	QETB1EM-107	100MF	25V	AL E.CAPAC IT		
C822	QCF21HP-472	4700PF	50V	CER.CAPACI TO		
C823	QETB1EM-107	100MF	25V	AL E.CAPAC IT		

▲ : SAFETY PARTS

Capacitors

▲ ITEM	PART NUMBER	DESCRIPTION				AREA
C831	QFLB1HJ-223	0.022MF	50V	MYLAR CAPA	CI BS	
C831	QFLB1HJ-223	0.022MF	50V	MYLAR CAPA	CI EF	
C831	QFLB1HJ-223	0.022MF	50V	MYLAR CAPA	CI EN	
C832	QFLB1HJ-223	0.022MF	50V	MYLAR CAPA	CI G	
C832	QFLB1HJ-223	0.022MF	50V	MYLAR CAPA	CI BS	
C832	QFLB1HJ-223	0.022MF	50V	MYLAR CAPA	CI EF	
C832	QFLB1HJ-223	0.022MF	50V	MYLAR CAPA	CI EN	
C845	QETB1EM-476	47MF	25V	AL E.CAPAC IT		
C901	QCF21HP-223A	0.022MF	50V	CER.CAPACI	TO	
C902	QCF21HP-223A	0.022MF	50V	CER.CAPACI	TO	
C903	QETB1HM-226	22MF	50V	AL E.CAPAC IT		
C904	QFLB1HJ-223	0.022MF	50V	MYLAR CAPA	CI	
C905	QCY21HK-102	1000PF	50V	CER.CAPACI	TO	
C906	QETB1AM-476	47MF	10V	E.CAPACITO R		
C909	QETB1CM-226	22MF	16V	E.CAPACITO R		
C910	QETB1HM-225	2.2MF	50V	E.CAPACITO R		
C961	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA	CI BS	
C961	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA	CI EF	
C961	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA	CI EN	
C961	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA	CI G	
C962	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA	CI BS	
C962	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA	CI EF	
C962	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA	CI EN	
C962	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA	CI G	
C963	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA	CI BS	
C963	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA	CI EF	
C963	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA	CI EN	
C963	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA	CI G	
C964	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA	CI BS	
C964	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA	CI EF	
C964	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA	CI EN	
C964	QFLB1HJ-473	0.047MF	50V	MYLAR CAPA	CI G	
C965	QCS21HJ-101A	100PF	50V	CER.CAPACI	TO BS	
C965	QCS21HJ-101A	100PF	50V	CER.CAPACI	TO EF	
C965	QCS21HJ-101A	100PF	50V	CER.CAPACI	TO EN	
C966	QCS21HJ-101A	100PF	50V	CER.CAPACI	TO G	
C966	QCS21HJ-471	470PF	50V	CERAMIC	BS	
C966	QCS21HJ-471	470PF	50V	CERAMIC	EF	
C966	QCS21HJ-471	470PF	50V	CERAMIC	EN	
C966	QCS21HJ-471	470PF	50V	CERAMIC	G	
C967	QCS21HJ-151	150PF	50V	CERAMIC	BS	
C967	QCS21HJ-151	150PF	50V	CERAMIC	EF	
C967	QCS21HJ-151	150PF	50V	CERAMIC	EN	
C967	QCS21HJ-151	150PF	50V	CERAMIC	G	
C968	QCS21HJ-471	470PF	50V	CERAMIC	BS	
C968	QCS21HJ-471	470PF	50V	CERAMIC	EF	
C968	QCS21HJ-471	470PF	50V	CERAMIC	EN	
C968	QCS21HJ-471	470PF	50V	CERAMIC	G	
C969	QCS21HJ-471	470PF	50V	CERAMIC	BS	
C970	QCS21HJ-391	390PF	50V	CERAMIC		
C971	QCS21HJ-471	470PF	50V	CERAMIC		
C972	QCS21HJ-471	470PF	50V	CERAMIC		
C991	QCF21HP-103A	0.01MF	50V	CER.CAPACI	TO EF	
C991	QCF21HP-103A	0.01MF	50V	CER.CAPACI	TO EN	
C991	QCF21HP-103A	0.01MF	50V	CER.CAPACI	TO G	

▲ : SAFETY PARTS

▲ ITEM	PART NUMBER	DESCRIPTION				AREA
R301	QRD167J-222	2.2K	1/6W	CARBON RES	IS	
R302	QRD167J-222	2.2K	1/6W	CARBON RES	IS	
R303	QRD167J-473	47K	1/6W	CARBON RES	IS	
R304	QRD167J-473	47K	1/6W	CARBON RES	IS	
R305	QRD161J-621	620	1/6W	CARBON RES	IS	
R306	QRD161J-621	620	1/6W	CARBON RES	IS	
R307	QRD167J-393	39K	1/6W	CARBON RES	IS	
R308	QRD167J-393	39K	1/6W	CARBON RES	IS	
R309	QRD167J-474	470K	1/6W	CARBON RES	IS	
R310	QRD167J-474	470K	1/6W	CARBON RES	IS	
R311	QRD167J-104	100K	1/6W	CARBON RES	IS	
R312	QRD167J-104	100K	1/6W	CARBON RES	IS	
R313	QRD14CJ-391S	390	1/4W	UNF.CARBON	R	
R314						

Resistors

△	ITEM	PART NUMBER	DESCRIPTION	AREA
R347	QRD161J-273	27K	1/6W CARBON RES	IS
R348	QRD167J-334	330K	1/6W CARBON RES	IS
R349	QRD167J-682	6.8K	1/6W CARBON RES	IS
R350	QRD167J-334	330K	1/6W CARBON RES	IS
R351	QRD167J-332	3.3K	1/6W CARBON RES	IS
R354	QRD167J-473	47K	1/6W CARBON RES	IS
R355	QRD167J-104	100K	1/6W CARBON RES	IS
R356	QRD167J-104	100K	1/6W CARBON RES	IS
R359	QRD167J-564	560K	1/6W CARBON	
△	R361	QRZ0077-680	68	1/4W FUSIBLE RE SI
△	R362	QRZ0077-680	68	1/4W FUSIBLE RE SI
R381	QRD167J-471	470	1/6W CARBON RES	IS
R382	QRD167J-471	470	1/6W CARBON RES	IS
R383	QRD167J-471	470	1/6W CARBON RES	IS
R384	QRD167J-471	470	1/6W CARBON RES	IS
R385	QRD167J-222	2.2K	1/6W CARBON RES	IS BS
R385	QRD167J-222	2.2K	1/6W CARBON RES	IS EF
R385	QRD167J-222	2.2K	1/6W CARBON RES	IS EN
R385	QRD167J-471	470	1/6W CARBON RES	IS G
R385	QRD167J-471	470	1/6W CARBON RES	IS U
R385	QRD167J-471	470	1/6W CARBON RES	IS UT
R386	QRD167J-222	2.2K	1/6W CARBON RES	IS BS
R386	QRD167J-222	2.2K	1/6W CARBON RES	IS EF
R386	QRD167J-222	2.2K	1/6W CARBON RES	IS EN
R386	QRD167J-222	2.2K	1/6W CARBON RES	IS G
R386	QRD167J-471	470	1/6W CARBON RES	IS U
R386	QRD167J-471	470	1/6W CARBON RES	IS UT
R387	QRD167J-222	2.2K	1/6W CARBON RES	IS BS
R387	QRD167J-222	2.2K	1/6W CARBON RES	IS EF
R387	QRD167J-222	2.2K	1/6W CARBON RES	IS EN
R387	QRD167J-222	2.2K	1/6W CARBON RES	IS G
R387	QRD167J-222	2.2K	1/6W CARBON RES	IS U
R387	QRD167J-222	2.2K	1/6W CARBON RES	IS UT
R388	QRD167J-471	470	1/6W CARBON RES	IS BS
R388	QRD167J-471	470	1/6W CARBON RES	IS EF
R388	QRD167J-471	470	1/6W CARBON RES	IS EN
R388	QRD167J-471	470	1/6W CARBON RES	IS G
R388	QRD167J-471	470	1/6W CARBON RES	IS U
R388	QRD167J-471	470	1/6W CARBON RES	IS UT
R388	QRD167J-222	2.2K	1/6W CARBON RES	IS BS
R388	QRD167J-222	2.2K	1/6W CARBON RES	IS EF
R388	QRD167J-222	2.2K	1/6W CARBON RES	IS EN
R388	QRD167J-222	2.2K	1/6W CARBON RES	IS G
R388	QRD167J-222	2.2K	1/6W CARBON RES	IS U
R388	QRD167J-222	2.2K	1/6W CARBON RES	IS UT
R389	QRD167J-471	470	1/6W CARBON RES	IS BS
R389	QRD167J-471	470	1/6W CARBON RES	IS EF
R389	QRD167J-471	470	1/6W CARBON RES	IS EN
R389	QRD167J-471	470	1/6W CARBON RES	IS G
R389	QRD167J-471	470	1/6W CARBON RES	IS U
R389	QRD167J-471	470	1/6W CARBON RES	IS UT
R390	QRD161J-105	1M	1/6W CARBON RES	IS
R391	QRD161J-105	1M	1/6W CARBON RES	IS
R392	QRD161J-105	1M	1/6W CARBON RES	IS
R393	QRD167J-103	10K	1/6W CARBON RES	IS
R394	QRD167J-103	10K	1/6W CARBON RES	IS
R405	QRD161J-512	5.1K	1/6W CARBON RES	IS
R406	QRD161J-512	5.1K	1/6W CARBON RES	IS
R408	QRD167J-103	10K	1/6W CARBON RES	IS
R409	QRD167J-103	10K	1/6W CARBON RES	IS
R410	QRD161J-221	220	1/6W CARBON RES	IS
R701	QRD167J-222	2.2K	1/6W CARBON RES	IS
R702	QRD167J-222	2.2K	1/6W CARBON RES	IS
R703	QRD167J-104	100K	1/6W CARBON RES	IS
R704	QRD167J-104	100K	1/6W CARBON RES	IS
R705	QRD167J-472	4.7K	1/6W CARBON RES	IS
R706	QRD167J-472	4.7K	1/6W CARBON RES	IS
△	R707	QRD14CJ-820S	82	1/4W UNF. CARBON R
△	R708	QRD14CJ-820S	82	1/4W UNF. CARBON R
△	R709	QRZ0077-820	82	1/4W FUSIBLE RE SI
△	R710	QRZ0077-820	82	1/4W FUSIBLE RE SI
R711	QRD167J-470	47	1/6W CARBON RES	IS
R712	QRD167J-470	47	1/6W CARBON RES	IS
R713	QRD167J-243	24K	1/6W CARBON RES	IS
R714	QRD167J-243	24K	1/6W CARBON RES	IS
R715	QRD167J-243	24K	1/6W CARBON RES	IS
R716	QRD167J-243	24K	1/6W CARBON RES	IS
R717	QRD161J-302	3K	1/6W CARBON RES	IS
R718	QRD161J-302	3K	1/6W CARBON RES	IS
R719	QRD167J-133	13K	1/6W CARBON RES	IS
R720	QRD167J-133	13K	1/6W CARBON RES	IS
R721	QRD167J-243	24K	1/6W CARBON RES	IS
R722	QRD167J-243	24K	1/6W CARBON RES	IS
R723	QRD167J-751	750	1/6W CARBON RES	IS BS
R723	QRD167J-751	750	1/6W CARBON RES	IS EF
R723	QRD167J-751	750	1/6W CARBON RES	IS EN
R723	QRD167J-751	750	1/6W CARBON RES	IS G
R723	QRD161J-681	680	1/6W CARBON RES	IS U
R723	QRD161J-681	680	1/6W CARBON RES	IS UT
R724	QRD167J-751	750	1/6W CARBON RES	IS BS
R724	QRD167J-751	750	1/6W CARBON RES	IS EF
R724	QRD167J-751	750	1/6W CARBON RES	IS EN
R724	QRD167J-751	750	1/6W CARBON RES	IS G
R724	QRD161J-681	680	1/6W CARBON RES	IS U
R724	QRD161J-681	680	1/6W CARBON RES	IS UT
R725	QRD161J-202	2K	1/6W CARBON RES	IS
R725	QRD167J-751	750	1/6W CARBON RES	IS
R726	QRD161J-273	27K	1/6W CARBON RES	IS
R727	QRD167J-222	2.2K	1/6W CARBON RES	IS
R728	QRD167J-222	2.2K	1/6W CARBON RES	IS
R729	QRD167J-102	1K	1/6W CARBON RES	IS
R731	QRD167J-823	82K	1/6W CARBON RES	IS
R732	QRD167J-823	82K	1/6W CARBON RES	IS
R751	QVPAP601-501A	500	TRIMMER RE SI	
R752	QVPAP601-501A	500	TRIMMER RE SI	
R753	QRD167J-152	1.5K	1/6W CARBON RES	IS
R754	QRD167J-152	1.5K	1/6W CARBON RES	IS

△: SAFETY: PARTS

Resistors

△	ITEM	PART NUMBER	DESCRIPTION	AREA
R755	QRD167J-391	390	1/6W CARBON RES	IS
R756	QRD167J-391	390	1/6W CARBON RES	IS
△	R759	QRD14CJ-100S	10	1/6W UNF. CARBON R
△	R760	QRD14CJ-100S	10	1/6W UNF. CARBON R
△	R761	QRD14CJ-100S	10	1/6W UNF. CARBON R
△	R762	QRD14CJ-100S	10	1/6W UNF. CARBON R
R767	QRD161J-820	82	1/6W CARBON RES	IS
R768	QRD161J-820	82	1/6W CARBON RES	IS
R769	QRD161J-820	82	1/6W CARBON RES	IS
R770	QRD161J-820	82	1/6W CARBON RES	IS
R771	QRD167J-151	150	1/6W CARBON RES	IS U
R771	QRD167J-151	150	1/6W CARBON RES	IS UT
R772	QRD167J-151	150	1/6W CARBON RES	IS U
R772	QRD167J-151	150	1/6W CARBON RES	IS UT
R773	QRD167J-151	150	1/6W CARBON RES	IS U
R774	QRD167J-151	150	1/6W CARBON RES	IS U
R774	QRD167J-151	150	1/6W CARBON RES	IS UT
△	R783	QRD14CJ-272S	2.7K	1/4W UNF. CARBON R
△	R784	QRD14CJ-272S	2.7K	1/4W UNF. CARBON R
△	R785	QRD14CJ-271S	270	1/4W UNF. CARBON R
△	R786	QRD14CJ-271S	270	1/4W UNF. CARBON R
△	R787	ERF032K-R22	0.22	3W CEM. RESIST OR
△	R788	ERF032K-R22	0.22	3W CEM. RESIST OR
△	R789	QRZ0077-100	10	1/4W FUSIBLE RE SI
R790	QRZ0077-100	10	1/4W FUSIBLE RE SI	
R791	QRZ0077-100	10	1/4W FUSIBLE RE SI	
R792	QRZ0077-100	10	1/4W FUSIBLE RE SI	
R793	QRD129J-330S	33	1/2W UNF. CARBON	
R794	QRD129J-330S	33	1/2W UNF. CARBON	
R795	QRG022J-100GJ7	10	2W OXIDE META L	
R796	QRG022J-100GJ7	10	2W OXIDE META L	
△	R797	QRZ0077-221	220	1/4W FUSIBLE RE SI
△	R798	QRZ0077-820	82	1/4W FUSIBLE RE SI
R802	QRG022J-121GJ7	120	2W O.M. FILM	BS
R802	QRG022J-121GJ7	120	2W O.M. FILM	EF
R802	QRG022J-121GJ7	120	2W O.M. FILM	EN
R802	QRG022J-821GJ7	820	2W OXIDE META L	U
R802	QRG022J-821GJ7	820	2W OXIDE META L	UT
R803	QRG022J-102GJ7	1K	2W OXIDE META L	U
R803	QRG022J-102GJ7	1K	2W OXIDE META L	UT
R804	QRD129J-472S	4.7K	1/2W UNF. CARBON	BS
R804	QRD129J-472S	4.7K	1/2W UNF. CARBON	EN
R804	QRD129J-562S	5.6K	1/2W UNF. CARBON	U
R804	QRD129J-562S	5.6K	1/2W UNF. CARBON	UT
R805	QRD129J-392S	3.9K	1/2W UNF. CARBON	BS
R805	QRD129J-392S	3.9K	1/2W UNF. CARBON	EN
R805	QRD129J-392S	3.9K	1/2W UNF. CARBON	G
R805	QRD129J-472S	4.7K	1/2W UNF. CARBON	U
R805	QRD129J-472S	4.7K	1/2W UNF. CARBON	UT
△	R806	QRZ0077-121	120	1/4W FUSIBLE RE SI
R808	QRG022J-181GJ7	180	2W OXIDE META L	BS
R808	QRG022J-181GJ7	180	2W OXIDE META L	EF
R808	QRG022J-181GJ7	180	2W OXIDE META L	EN
R808	QRG022J-561GJ7	560	2W OXIDE META L	U
R808	QRG022J-561GJ7	560	2W OXIDE META L	UT
R809	QRG022J-181GJ7	180	2W OXIDE META L	BS
R809	QRG022J-181GJ7	180	2W OXIDE META L	EF
R809	QRG022J-181GJ7	180	2W OXIDE META L	EN
R809	QRG022J-181GJ7	180	2W OXIDE META L	G
R809	QRG022J-561GJ7	560	2W OXIDE META L	U
R809	QRG022J-561GJ7	560	2W OXIDE META L	UT
R810	QRG022J-561GJ7	560	2W OXIDE META L	BS
R810	QRG022J-561GJ7	560	2W OXIDE META L	EF
R810	QRD12CJ-472SX	4.7K	1/2W R.NETWORK SF	
R811	QRD12CJ-472SX	4.7K	1/2W R.NETWORK SF	
R811	QRD12CJ-472SX	4.7K	1/2W R.NETWORK SF	
△	R811	QRD12CJ-472S	8.2K	1/2W NETWORK RE SI U
△	R811	QRD12CJ-822S	8.2K	1/2W NETWORK RE SI JT
△	R812	QRD129J-180S	18	1/2W UNF. CARBON U
△	R812	QRD129J-180S	18	1/2W UNF. CARBON UT
R817	QRG022J-121GJ7	120	2W O.M. FILM	
R818	QRG022J-151GJ7	150	2W O.M. FILM	
R819	QRZ0077-47	4.7	1/4W FUSE RESIST TO	
R820	QRD12CJ-682SX	6.8K	1/2W RESISTOR A RR BS	
R820	QRD12CJ-682SX	6.8K	1/2W RESISTOR A RR EF	
R820	QRD12CJ-682SX	6.8K	1/2W RESISTOR A RR EN	
R820	QRD12CJ-682SX	6.8K	1/2W RESISTOR A RR G	
△	R820	GRD12CJ-822S	8.2K	1/2W NETWORK RE SI U
△	R820	QRD12CJ-822S	8.2K	1/2W NETWORK RE SI UT
R823	QRD167J-103	10K	1/6W CARBON RES IS	
R824	QRD167J-103	10K	1/6W CARBON RES IS	
R836	QRD167J-912	9.1K	1/6W CARBON	
R841	QRD167J-104	100K	1/6W CARBON RES IS	
R842				

Resistors

△ ITEM	PART NUMBER	DESCRIPTION			AREA
R903	QRD167J-562	5.6K	1/6W	CARBON RES	IS
R904	QRD167J-562	5.6K	1/6W	CARBON RES	IS
R905	QRD167J-123	12K	1/6W	CARBON RES	IS
R906	QRD167J-123	12K	1/6W	CARBON RES	IS
R907	QRD167J-152	1.5K	1/6W	CARBON RES	IS
R908	QRD167J-152	1.5K	1/6W	CARBON RES	IS
R909	QRD167J-103	10K	1/6W	CARBON RES	IS
R911	QRD167J-332	3.3K	1/6W	CARBON RES	IS
R912	QRD167J-473	47K	1/6W	CARBON RES	IS
R913	QRD167J-104	100K	1/6W	CARBON RES	IS
R914	QRD167J-823	82K	1/6W	CARBON RES	IS
R915	QRD167J-473	47K	1/6W	CARBON RES	IS
R916	QRD167J-563	56K	1/6W	CARBON RES	IS
R917	QRD167J-683	68K	1/6W	CARBON RES	IS
R918	QRD167J-392	3.9K	1/6W	CARBON RES	IS
R921	QRD167J-224	220K	1/6W	CARBON RES	IS
R922	QRD167J-182	1.8K	1/6W	CARBON RES	IS
R924	QRG022J-821GJ7	820	2W	OXIDE META	L BS
R924	QRG022J-821GJ7	820	2W	OXIDE META	L EF
R924	QRG022J-821GJ7	820	2W	OXIDE META	L EN
R924	QRG022J-821GJ7	820	2W	OXIDE META	L G
R924	QRG022J-122GJ7	1.2K	2W	O.M.FILM	U
R924	QRG022J-122GJ7	1.2K	2W	O.M.FILM	UT
R925	QRD167J-750	75	1/6W	CARBON RES	IS U
R925	QRD167J-750	75	1/6W	CARBON RES	IS UT
R931	QRD14CJ-330S	33	1/4W	UNF.CARBON	R
R935	QRD167J-562	5.6K	1/6W	CARBON RES	IS
R936	QRD167J-822	8.2K	1/6W	CARBON RES	IS
R937	QRD167J-103	10K	1/6W	CARBON RES	IS
R941	QRG012J-471J7	470	1W	O.M.FILM	
R942	QRG012J-471J7	470	1W	O.M.FILM	
R961	QRZ0077-100	10	1/4W	FUSIBLE RE	SI BS
R961	QRZ0077-100	10	1/4W	FUSIBLE RE	SI EF
R961	QRZ0077-100	10	1/4W	FUSIBLE RE	SI EN
R961	QRZ0077-100	10	1/4W	FUSIBLE RE	SI G
R962	QRZ0077-100	10	1/4W	FUSIBLE RE	SI BS
R962	QRZ0077-100	10	1/4W	FUSIBLE RE	SI EF
R962	QRZ0077-100	10	1/4W	FUSIBLE RE	SI EN
R962	QRZ0077-100	10	1/4W	FUSIBLE RE	SI G
R963	QRZ0077-100	10	1/4W	FUSIBLE RE	SI BS
R963	QRZ0077-100	10	1/4W	FUSIBLE RE	SI EF
R963	QRZ0077-100	10	1/4W	FUSIBLE RE	SI EN
R963	QRZ0077-100	10	1/4W	FUSIBLE RE	SI G
R964	QRZ0077-100	10	1/4W	FUSIBLE RE	SI BS
R964	QRZ0077-100	10	1/4W	FUSIBLE RE	SI EF
R964	QRZ0077-100	10	1/4W	FUSIBLE RE	SI EN
R964	QRZ0077-100	10	1/4W	FUSIBLE RE	SI G

△ : SAFETY PARTS

Others

△ ITEM	PART NUMBER	DESCRIPTION			AREA
EP802	E65396-003	EARTH PLATE			BS
EP802	E65396-003	EARTH PLATE			EF
EP802	E65396-003	EARTH PLATE			EN
EP802	E65396-003	EARTH PLATE			G
EP803	E70225-001	EARTH PLATE			
FW103	EWR36D-25KS	FLAT WIRE(6PIN)			
FW801	EWR36D-20SS	FLAT WIRE(6PIN)			
FWB02	EWR36D-30SS	FLAT WIRE(6PIN)			
FW902	EWR35D-40SS	FLAT WIRE(6PIN)			
FW903	EWR36D-55SS	FLAT WIRE(6PIN)			
JT001	EMV7122-004	CONNECT TERMINAL(4PIN)			
JT002	EMV7122-005	MALE CONNECTOR(5PIN)			
JT003	EMV7122-004	CONNECT TERMINAL(4PIN)			
JT004	EMV7122-004	CONNECT TERMINAL(4PIN)			
PA703	EMVS109-011A	MALE CONNECTOR(11PIN)			
RY901	ESK7D24-2120	RELAY			
ST901	EMB90TV-801A	SPEAKER TERMINAL			
SW901	QST4241-E05J2	PUSH SWITCH(SPK-1)			
SW902	QST4241-E05J2	PUSH SWITCH(SPK-2)			

△ : SAFETY PARTS


Others

△ ITEM	PART NUMBER	DESCRIPTION			AREA
	E308271-004	HEAT SINK			
	E73525-003	SCREW			
	E307874-001SM	HEAT SINK BRACKET			
	E307874-002SM	HEAT SINK BRACKET			
	SBSG3008CC	TAPPING SCREW			
	E65508-002	TAB			
	EWT011-076	TERMINAL WIRE ASSY			
	QSR0085-018	SELECT SWITCH	U		
	QSR0085-018	SELECT SWITCH	UT		
F001	VMZ0087-001	FUSE CLIP	BS		
F001	VMZ0087-001	FUSE CLIP	EF		
F001	VMZ0087-001	FUSE CLIP	EN		
F001	VMZ0087-001	FUSE CLIP	G		
J001	EMV5137-002	CONNECT TERMINAL	U		
J001	EMV5137-002	CONNECT TERMINAL	UT		
J003	E70225-001	EARTH PLATE	BS		
J003	E70225-001	EARTH PLATE	EF		
J003	E70225-001	EARTH PLATE	EN		
J003	E70225-001	EARTH PLATE	G		
J004	QMCA002-E01S	AC OUTLET	U		
J004	QMCA002-E01S	AC OUTLET	UT		
J301	EMN00TV-423AJ2	PIN JACK			
J302	EMN00TV-421AJ2	4P PIN JACK			
J303	EMN00TV-421AJ2	4P PIN JACK			
J901	QMS6022-V01	MICROPHONE JACK			
L331	EQL4007-220	INDUCTOR			
L751	EQL0121-1R2J1	INDUCTOR			
L752	EQL0121-1R2J1	INDUCTOR			
L961	EQL0011-R45J1	INDUCTOR			
L961	EQL0011-R45J1	INDUCTOR	BS		
L961	EQL0011-R45J1	INDUCTOR	EF		
L961	EQL0011-R45J1	INDUCTOR	EN		
L961	EQL0011-R45J1	INDUCTOR	G		
L962	EQL0011-R45J1	INDUCTOR	BS		
L962	EQL0011-R45J1	INDUCTOR	EF		
L962	EQL0011-R45J1	INDUCTOR	EN		
L962	EQL0011-R45J1	INDUCTOR	G		
P805	EMV7122-103	CONNECT TERMINAL(3PIN)			
P806	EMV7122-004	CONNECT TERMINAL(4PIN)			
S001	QSP2PJ21-E02	PUSH SWITCH(POWERSWITCH)			
EP801	E65396-003	EARTH PLATE			

△ : SAFETY PARTS

■FMB-001 □ Front, Tone Control & Volume PC Board Ass'y

Note : FMB-001 □ varies according to the areas employed. See note (1) when placing an order.

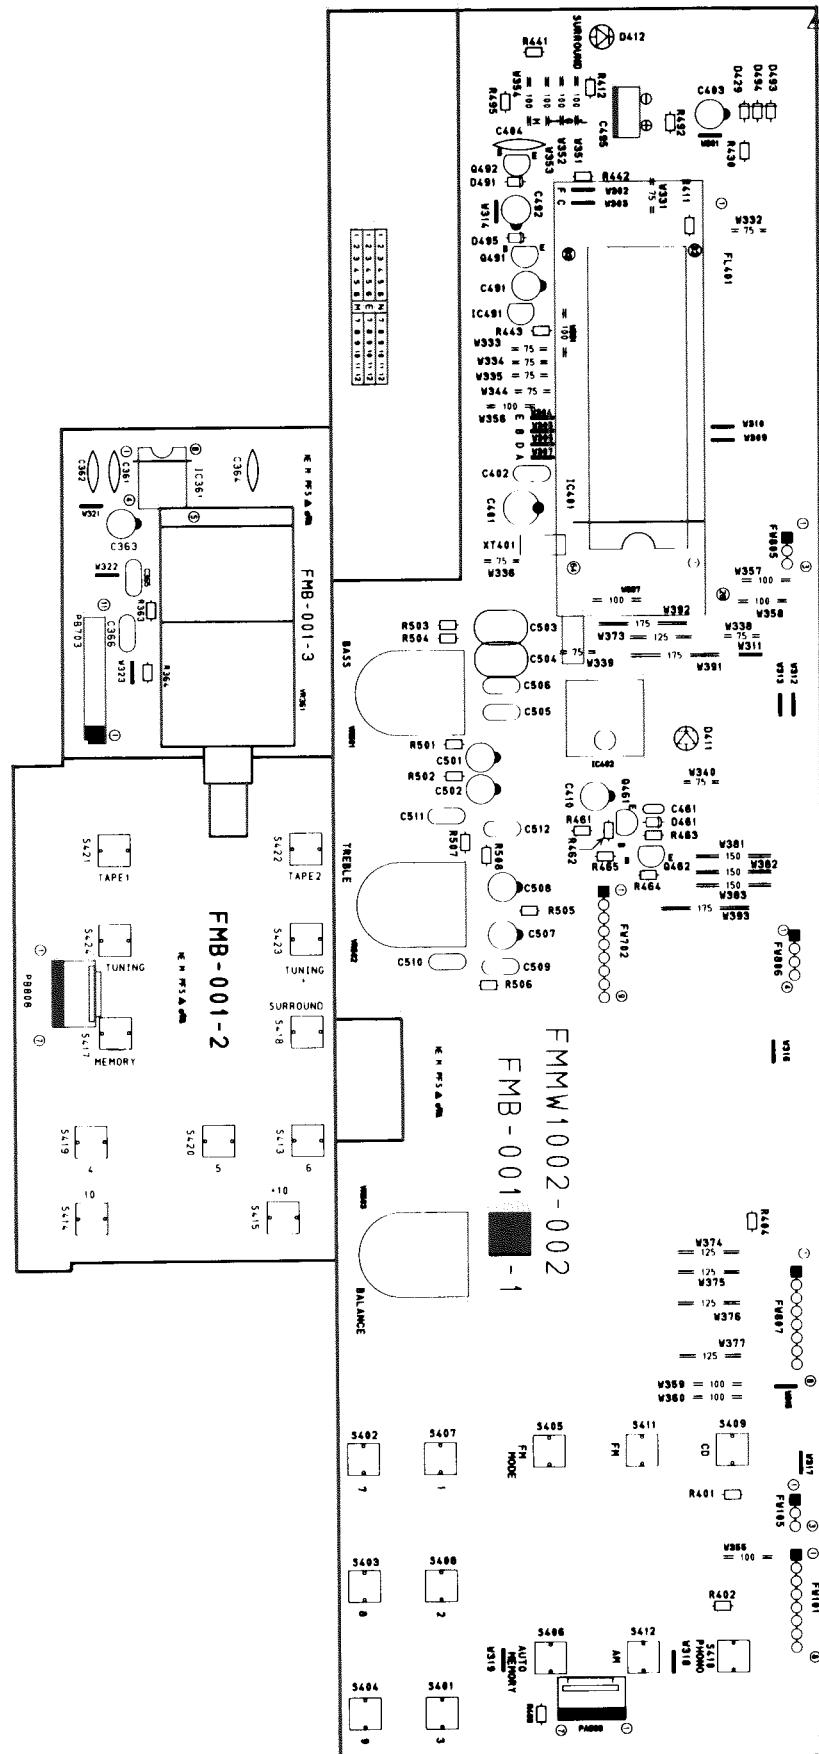

Note (1)

PC Board Ass'y	Version	Designated Areas
FMB-001 [B]	U UT	Universal Type Taiwan
FMB-001 [C]	EN EF	Scandinavia Continental Europe
FMB-001 [E]	BS	the U.K.
FMB-001 [F]	G	Germany

Transistors

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	Q461	ZSC1740S(R,S)	SI.TRANSISTROHM	
	Q462	ZSC1740S(R,S)	SI.TRANSISTROHM	
	Q492	DTC114YS	DIGITAL TRAROHM	

Δ : ISAFETY PARTS

I.C.s

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	IC361	LB1639-CV	I.C(DIGI-OTSANYO	
	IC401	MN171202JPY1	I.C(MICRO-CMATSUSHITA	
	IC402	SPS-420-1	INFRARED DESANYO	
	IC491	MN1281(P,Q)	I.C(DIGI-MOMATSUSHITA	

Δ : ISAFETY PARTS

Diodes

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	D411	SLR-54VC50F124	L.E.D. ROHM	BS
	D411	SLR-54VC50F124	L.E.D. ROHM	EF
	D411	SLR-54VC50F124	L.E.D. ROHM	EN
	D411	SLR-54VC50F124	L.E.D. ROHM	G
	D411	SLR-54VC50F124	L.E.D. ROHM	U
	D411	SLR-54VC50F124	L.E.D. ROHM	UT
	D412	SLR-34DC50F124	L.E.D. ROHM	
	D429	ISS133	SI.DIODE ROHM	
	D461	ISS133	SI.DIODE ROHM	
	D491	ISS133	SI.DIODE ROHM	
	D493	ISS133	SI.DIODE ROHM	
	D494	ISS133	SI.DIODE ROHM	

Δ : ISAFETY PARTS

Capacitors

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	C361	QCY21HK-331	330PF 50V CER.CAPAC	TO
	C362	QCY21HK-331	330PF 50V CER.CAPAC	TO
	C363	QETBOJM-107	100MF 6.3V AL E.CAPAC	IT
	C364	QCF21HP-473A	0.047MF 50V CER.CAPAC	TO
	C401	QE611AM-2272M	220MF 10V AL E.CAPAC	IT
	C402	QCZ0202-155	1.5MF 25V CER.RESIST	OR
	C403	QEKS1HM-475	4.7MF 50V AL E.CAPAC	IT
	C404	QCY21HK-102	1000PF 50V CER.CAPAC	TO
	C410	QEKS1HM-105G	1MF 50V AL E.CAPAC	IT
	C491	QEKS1HM-225G	2.2MF 50V AL E.CAPAC	IT
	C495	QEADOHZ-4792B	47000MF E.CAPACITO R	
	C501	QEKS1HM-105G	1MF 50V AL E.CAPAC	IT
	C502	QEKS1HM-105G	1MF 50V AL E.CAPAC	IT
	C503	QFLB1HJ-823	0.082MF 50V MYLAR CAPA CI	
	C504	QFLB1HJ-823	0.082MF 50V MYLAR CAPA CI	
	C505	QFLB1HJ-153	0.015MF 50V MYLAR CAPA CI	
	C506	QFLB1HJ-153	0.015MF 50V MYLAR CAPA CI	
	C507	QETB1HM-105	1MF 50V AL E.CAPAC	IT
	C508	QETB1HM-105	1MF 50V AL E.CAPAC	IT
	C509	QFLB1HJ-332	3300PF 50V MYLAR CAPA CI	
	C510	QFLB1HJ-332	3300PF 50V MYLAR CAPA CI	
	C511	QFLB1HJ-183	0.018MF 50V MYLAR CAPA CI	
	C512	QFLB1HJ-183	0.018MF 50V MYLAR CAPA CI	

Δ : ISAFETY PARTS

Resistors

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	R363	QRD167J-682	6.8K 1/6W CARBON RES	IS
	R364	QRD167J-682	6.8K 1/6W CARBON RES	IS
	R401	QRD167J-104	100K 1/6W CARBON RES	IS
	R402	QRD167J-104	100K 1/6W CARBON RES	IS
	R403	QRD167J-104	100K 1/6W CARBON RES	IS
	R404	QRD167J-104	100K 1/6W CARBON RES	IS
	R411	QRD161J-221	220 1/6W CARBON RES	IS
	R412	QRD161J-221	220 1/6W CARBON RES	IS
	R430	QRD161J-220	22 1/6W CARBON RES	IS
	R441	QRD167J-473	47K 1/6W CARBON RES	IS
	R442	QRD167J-473	47K 1/6W CARBON RES	IS U
	R442	QRD167J-473	47K 1/6W CARBON RES	IS UT
	R443	QRD167J-473	47K 1/6W CARBON RES	IS
	R461	QRD167J-103	10K 1/6W CARBON RES	IS
	R462	QRD167J-223	22K 1/6W CARBON RES	IS
	R463	QRD167J-473	47K 1/6W CARBON RES	IS
	R464	QRD167J-471	470 1/6W CARBON RES	IS
	R465	QRD167J-103	10K 1/6W CARBON RES	IS
	R492	QRD161J-331	330 1/6W CARBON RES	IS
	R495	QRD167J-473	47K 1/6W CARBON RES	IS
	R501	QRD161J-203	20K 1/6W CARBON RES	IS
	R502	QRD161J-203	20K 1/6W CARBON RES	IS
	R503	QRD161J-362	3.6K 1/6W CARBON RES	IS
	R504	QRD161J-362	3.6K 1/6W CARBON RES	IS
	R505	QRD167J-472	4.7K 1/6W CARBON RES	IS
	R506	QRD167J-472	4.7K 1/6W CARBON RES	IS
	R507	QRD161J-821	820 1/6W CARBON RES	IS
	R508	QRD161J-821	820 1/6W CARBON RES	IS
	VR361	QVD871B-E15BJ3	100K VARIABLE	
	VR501	QVD892C-E15CJ3	100K VARIABLE	RES
	VR502	QVD892C-E15CJ3	100K VARIABLE	RES
	VR503	QVDA92W-E15EJ3	100K VARIABLE	RES

Δ : ISAFETY PARTS


Others

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	E308270-001	FL HOLDER		
	E3400-444	FELT SPACER		
	S401	ESP0001-023ZJ5	TACT SWITCH(3)	
	S402	ESP0001-023ZJ5	TACT SWITCH(7)	
	S403	ESP0001-023ZJ5	TACT SWITCH(8)	
	S404	ESP0001-023ZJ5	TACT SWITCH(9)	
	S405	ESP0001-023ZJ5	TACT SWITCH(FM MODE)	
	S406	ESP0001-023ZJ5	TACT SWITCH(AUTO MEMORY)	
	S407	ESP0001-023ZJ5	TACT SWITCH(1)	
	S408	ESP0001-023ZJ5	TACT SWITCH(2)	
	S409	ESP0001-023ZJ5	TACT SWITCH(CD)	
	S410	ESP0001-023ZJ5	TACT SWITCH PHONO)	
	S411	ESP0001-023ZJ5	TACT SWITCH(FM)	
	S412	ESP0001-023ZJ5	TACT SWITCH(AM)	
	S413	ESP0001-023ZJ5	TACT SWITCH(6)	
	S414	ESP0001-023ZJ5	TACT SWITCH(10)	
	S415	ESP0001-023ZJ5	TACT SWITCH(+10)	
	S417	ESP0001-023ZJ5	TACT SWITCH(MEMORY)	
	S418	ESP0001-023ZJ5	TACT SWITCH(SURROUND)	
	S419	ESP0001-023ZJ5	TACT SWITCH(4)	
	S420	ESP0001-023ZJ5	TACT SWITCH(5)	
	S421	ESP0001-023ZJ5	TACT SWITCH(TAPE1)	
	S422	ESP0001-023ZJ5	TACT SWITCH(TAPE2)	
	S423	ESP0001-023ZJ5	TACT SWITCH(F UP)	
	S424	ESP0001-023ZJ5	TACT SWITCH(F DOWN)	
	FL401	ELU0001-143	FLUORESCENT DISPLAY TUBE	
	FW101	EWR38D-35KS	FLAT WIRE(3PIN)	
	FW105	EWR33D-35KS	FLAT WIRE(3PIN)	
	FW105	EWR33D-35KS	FLAT WIRE(3PIN)	
	FW702	EWR39D-35LS	FLAT WIRE(3PIN)	
	FW805	EWR33D-20LS	FLAT WIRE(3PIN)	
	FW806	EWR34D-25LS	FLAT WIRE ASSY(4PIN)	
	FW807	EWR38D-25LS	FLAT WIRE(3PIN)	
	PA808	EMV7153-007R	CONNECTOR(7PIN)	
	PB703	EWS29B-1734	SOCKET WIRE(11PIN)	
	PB808	EMV7153-007R	CONNECTOR(7PIN)	
	XT401	ECX0060-000EM	CERAMIC RESONATOR	

Δ : ISAFETY PARTS

■FMA-001□ Tuner PC Board Ass'y

Note : FMA-001 □ varies according to the areas employed. See note (1) when placing an order.

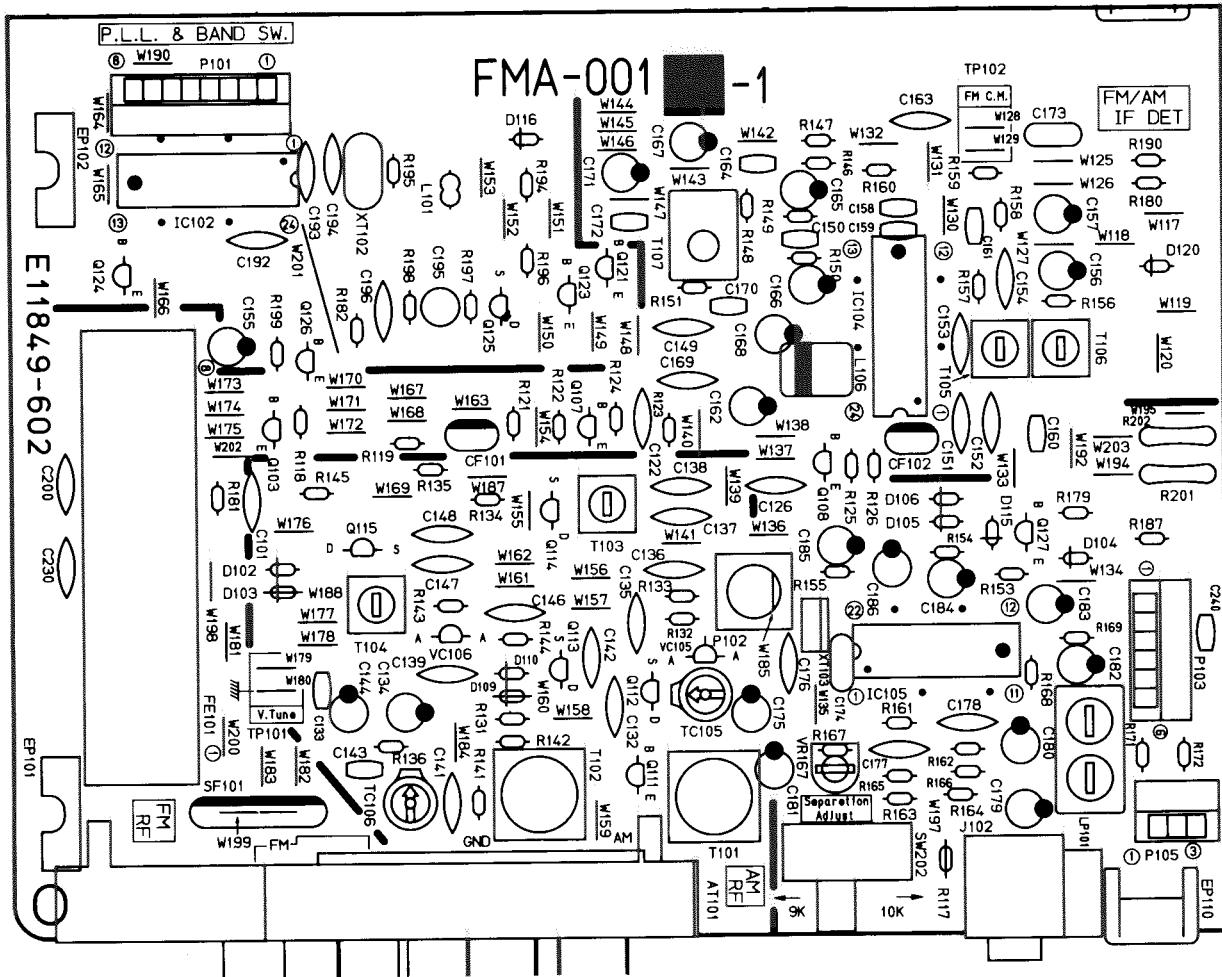

Note (1)

PC Board Ass'y	Version	Designated Areas
FMA-001 <input checked="" type="checkbox"/>	U UT	Universal Type Taiwan
FMA-001 <input checked="" type="checkbox"/>	BS EN EF	the U.K. Scandinavia Continental Europe
FMA-001 <input checked="" type="checkbox"/>	G	Germany

Transistors

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	Q121	BN1A4P	DIGITAL TRANEC	BS
	Q121	BN1A4P	DIGITAL TRANEC	EF
	Q121	BN1A4P	DIGITAL TRANEC	EN
	Q121	BN1A4P	DIGITAL TRANEC	G
	Q123	BN1A4P	DIGITAL TRANEC	
	Q124	BN1A4P	DIGITAL TRANEC	
	Q125	2SK301(Q2)	F.E.T.	
	Q126	2SC458(D)	SI.TRANSIST	
	Q127	BA1L4M-T	D.T.R.I.M	

SAFETY PARTS

Transistors

A	ITEM	PART NUMBER	DESCRIPTION	AREA
	Q103	2SC461(B,C)	SI.TRANSISTHITACHI	
	Q107	2SC535(B,C)	SI.TRANSIST	
	Q108	2SC461(B,C)	SI.TRANSISTHITACHI	
	Q111	2SD1302(S,T)	SI.TRANSIST	
	Q111	2SD1302(S,T)	SI.TRANSIST	BS
	Q111	2SD1302(S,T)	SI.TRANSIST	EF
	Q111	2SD1302(S,T)	SI.TRANSIST	EN
	Q111	2SD1302(S,T)	SI.TRANSIST	G
	Q112	2SK301(Q,R)	F.E.T.	
	Q113	2SK301(Q,R)	F.E.T.	BS
	Q113	2SK301(Q,R)	F.E.T.	EF
	Q113	2SK301(Q,R)	F.E.T.	EN
	Q113	2SK301(Q,R)	F.E.T.	G
	Q114	2SK301(P,Q)	F.E.T.	MATSUSHITA
	Q114	2SK301(P,Q)	F.E.T.	BS
	Q114	2SK301(P,Q)	F.E.T.	EF
	Q114	2SK301(P,Q)	F.E.T.	EN
	Q114	2SK301(P,Q)	F.E.T.	G
	Q115	2SK301(P,Q)	F.E.T.	MATSUSHITA
	Q115	2SK301(P,Q)	F.E.T.	BS
	Q115	2SK301(P,Q)	F.E.T.	EF
	Q115	2SK301(P,Q)	F.E.T.	EN
	Q115	2SK301(P,Q)	F.E.T.	G

ANSI SAFETY PARTS

I.C.s

▲	ITEM	PART NUMBER	DESCRIPTION	AREA
	IC102	LC7218	I.C(DIGI-MO	
	IC104	LA1266A	I.C(MONO-ANSANYO	
	IC105	LA3401	I.C(MONO-ANSANYO	

A SAFETY PARTIS

Diodes

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
D102	1SS133	SI.DIODE ROHM	BS	
D102	1SS133	SI.DIODE ROHM	EF	
D102	1SS133	SI.DIODE ROHM	EN	
D102	1SS133	SI.DIODE ROHM	G	
D103	1SS133	SI.DIODE ROHM	BS	
D103	1SS133	SI.DIODE ROHM	EF	
D103	1SS133	SI.DIODE ROHM	EN	
D103	1SS133	SI.DIODE ROHM	G	
D104	1SS133	SI.DIODE ROHM		
D105	1SS133	SI.DIODE ROHM		
D106	1SS133	SI.DIODE ROHM		
D109	1SS133	SI.DIODE ROHM	BS	
D109	1SS133	SI.DIODE ROHM	EF	
D109	1SS133	SI.DIODE ROHM	EN	
D109	1SS133	SI.DIODE ROHM	G	
D110	1SS133	SI.DIODE ROHM	BS	
D110	1SS133	SI.DIODE ROHM	EF	
D110	1SS133	SI.DIODE ROHM	EN	
D110	1SS133	SI.DIODE ROHM	G	
D115	1SS133	SI.DIODE ROHM		
D116	1SS133	SI.DIODE ROHM		
D120	1SS133	SI.DIODE ROHM		
VC105	SVC342(L)	VARI-CAPA DSANYO		
VC106	SVC342(L)	VARI-CAPA DSANYO	BS	
VC106	SVC342(L)	VARI-CAPA DSANYO	EF	
VC106	SVC342(L)	VARI-CAPA DSANYO	EN	
VC106	SVC342(L)	VARI-CAPA DSANYO	G	

Δ : SAFETY PARTS

Capacitors

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
C163	QCY31HK-332Z	3300PF 50V	CER.CAPACI	TO
C164	QCHB1EZ-223	0.022MF 25V	CER.CAPACI	TO
C165	QETB1HM-474	0.47MF 50V	ELECTRO	
C166	QETB1HM-225	2.2MF 50V	E.CAPACITO R	
C167	QETB1HM-225	2.2MF 50V	E.CAPACITO P	
C168	QETB1HM-475	4.7MF 50V	AL E.CAPAC IT	
C169	QCF21HP-223A	0.022MF 50V	CER.CAPACI	TO
C170	QCHB1EZ-223	0.022MF 25V	CER.CAPACI	TO
C171	QETB1EM-106	10MF 25V	AL E.CAPAC IT	
C172	QCVB1CM-103Y	0.01MF 16V	CER.CAPACI	TO
C173	QFLB1HK-223	0.022MF 50V	MYLAR CAPA CI	
C174	QFLB1HK-473	0.047MF 50V	MYLAR CAPA CI	
C175	QETB1EM-106	10MF 25V	AL E.CAPAC IT	
C176	QCY21HK-102	1000PF 50V	CER.CAPACI	TO
C177	QCS21HJ-271A	270PF 50V	CER.CAPACI	TO BS
C177	QCS21HJ-271A	270PF 50V	CER.CAPACI	TO EF
C177	QCS21HJ-271A	270PF 50V	CER.CAPACI	TO EN
C177	QCS21HJ-561	560PF 50V	CER.CAPACI	TO G
C177	QCS21HJ-561	560PF 50V	CER.CAPACI	TO UT
C178	QCS21HJ-271A	270PF 50V	CER.CAPACI	TO BS
C178	QCS21HJ-271A	270PF 50V	CER.CAPACI	TO EF
C178	QCS21HJ-271A	270PF 50V	CER.CAPACI	TO EN
C178	QCS21HJ-561	560PF 50V	CER.CAPACI	TO U
C178	QCS21HJ-561	560PF 50V	CER.CAPACI	TO UT
C179	QETB1HM-225	2.2MF 50V	E.CAPACITO R	
C180	QETB1HM-225	2.2MF 50V	E.CAPACITO R	
C181	QETB1EM-106	10MF 25V	AL E.CAPAC IT	
C183	QETB1HM-105	1MF 50V	AL E.CAPAC IT	
C184	QETB1HM-105	1MF 50V	AL E.CAPAC IT	
C185	QETB1HM-225	2.2MF 50V	E.CAPACITO R	
C186	QETB1HM-474	0.47MF 50V	ELECTRO	
C192	QCC21EM-473	0.047MF 25V	CER.CAPACI	TO
C193	QCS21HJ-180A	18PF 50V	CER.CAPACI	TO
C194	QCS21HJ-180A	18PF 50V	CER.CAPACI	TO
C195	QEN51HM-474	0.47MF 50V	NP E.CAPAC IT	
C196	QCY21HK-102	1000PF 50V	CER.CAPACI	TO
C230	QCF21HP-103A	0.01MF 50V	CER.CAPACI	TO
C240	QCBB1HK-101Y	100PF 50V	CER.CAPACI	TO BS
C240	QCBB1HK-101Y	100PF 50V	CER.CAPACI	TO EF
C240	QCBB1HK-101Y	100PF 50V	CER.CAPACI	TO EN
C240	QCBB1HK-101Y	100PF 50V	CER.CAPACI	TO G

Δ : SAFETY PARTS

Capacitors

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
C101	QCF21HP-223A	0.022MF 50V	CER.CAPACI	TO
C122	QCF21HP-223A	0.022MF 50V	CER.CAPACI	TO
C126	QCF21HP-223A	0.022MF 50V	CER.CAPACI	TO
C132	QCS21HJ-561	560PF 50V	CER.CAPACI	TO
C133	QCHB1EZ-223	0.022MF 25V	CER.CAPACI	TO
C134	QETB1EM-106	10MF 25V	AL E.CAPAC IT	
C135	QCC21EM-223	0.022MF 25V	CER.CAPACI	TO
C136	QCT26CH-180	18PF 50V	CER.CAPACI	TO
C137	QCT26CH-221	220PF 50V	CER.CAPACI	TO
C138	QCT26CH-241	240PF 50V	CER.CAPACI	TO
C139	QCC21EM-223	0.022MF 25V	CER.CAPACI	TO BS
C139	QCC21EM-223	0.022MF 25V	CER.CAPACI	TO EF
C139	QCC21EM-223	0.022MF 25V	CER.CAPACI	TO EN
C141	QCS21HJ-270	27PF 50V	CER.CAPACI	TO G
C141	QCS21HJ-270	27PF 50V	CER.CAPACI	TO BS
C141	QCS21HJ-270	27PF 50V	CER.CAPACI	TO EF
C141	QCS21HJ-270	27PF 50V	CER.CAPACI	TO EN
C142	QCY21HK-272	2700PF 50V	CER.CAPACI	TO BS
C142	QCY21HK-272	2700PF 50V	CER.CAPACI	TO EF
C142	QCY21HK-272	2700PF 50V	CER.CAPACI	TO EN
C142	QCY21HK-272	2700PF 50V	CER.CAPACI	TO G
C143	QCHB1EZ-223	0.022MF 25V	CER.CAPACI	TO BS
C143	QCHB1EZ-223	0.022MF 25V	CER.CAPACI	TO EF
C143	QCHB1EZ-223	0.022MF 25V	CER.CAPACI	TO G
C144	QETB1EM-106	10MF 25V	AL E.CAPAC IT	
C144	QETB1EM-106	10MF 25V	AL E.CAPAC IT	
C144	QETB1EM-106	10MF 25V	AL E.CAPAC IT	
C144	QETB1EM-106	10MF 25V	AL E.CAPAC IT	
C146	QCT26CH-680	68PF 50V	CER.CAPACI	TO BS
C146	QCT26CH-680	68PF 50V	CER.CAPACI	TO EF
C146	QCT26CH-680	68PF 50V	CER.CAPACI	TO EN
C146	QCT26CH-680	68PF 50V	CER.CAPACI	TO G
C147	QCT26CH-220	22PF 50V	CER.CAPACI	TO BS
C147	QCT26CH-220	22PF 50V	CER.CAPACI	TO EF
C147	QCT26CH-220	22PF 50V	CER.CAPACI	TO EN
C147	QCT26CH-220	22PF 50V	CER.CAPACI	TO G
C148	QCT26CH-121	120PF 50V	CER.CAPACI	TO BS
C148	QCT26CH-121	120PF 50V	CER.CAPACI	TO EF
C148	QCT26CH-121	120PF 50V	CER.CAPACI	TO EN
C148	QCT26CH-121	120PF 50V	CER.CAPACI	TO G
C149	QCF21HP-223A	0.022MF 50V	CER.CAPACI	TO
C150	QCHB1EZ-223	0.022MF 25V	CER.CAPACI	TO
C151	QCF21HP-223A	0.022MF 50V	CER.CAPACI	TO
C152	QCF21HP-223A	0.022MF 50V	CER.CAPACI	TO
C153	QCC21EM-223	0.022MF 25V	CER.CAPACI	TO
C154	QCF21HP-223A	0.022MF 50V	CER.CAPACI	TO
C155	QETB1EM-226	22MF 25V	E.CAPACITO R	
C157	QETB1HM-474	0.47MF 50V	ELECTRO	
C158	QCBB1HK-101Y	100PF 50V	CER.CAPACI	TO
C159	QCBB1HK-101Y	100PF 50V	CER.CAPACI	TO
C160	QCBB1HK-101Y	100PF 50V	CER.CAPACI	TO BS
C160	QCBB1HK-101Y	100PF 50V	CER.CAPACI	TO EF
C160	QCBB1HK-101Y	100PF 50V	CER.CAPACI	TO EN
C160	QCBB1HK-221Y	220PF 50V	CER.CAPACI	TO G
C160	QCBB1HK-221Y	220PF 50V	CER.CAPACI	TO U
C160	QCBB1HK-221Y	220PF 50V	CER.CAPACI	TO UT
C161	QCHB1EZ-223	0.022MF 25V	CER.CAPACI	TO
C162	QETB1EM-106	10MF - 25V	AL E.CAPAC IT	

Δ : SAFETY PARTS

Resistors

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
R117	QRD167J-100	10	1/6W CARBON	
R118	QRD167J-332	3.3K	1/6W CARBON RES IS	
R119	QRD161J-221	220	1/6W CARBON RES IS	
R121	QRD167J-391	390	1/6W CARBON RES IS	
R122	QRD167J-272	2.7K	1/6W CARBON RES IS	
R123	QRD167J-102	1K	1/6W CARBON RES IS	
R124	QRD161J-681	680	1/6W CARBON RES IS	
R125	QRD167J-332	3.3K	1/6W CARBON RES IS	
R126	QRD161J-221	220	1/6W CARBON RES IS	
R131	QRD161J-331	330	1/6W CARBON RES IS	
R132	QRD167J-103	10K	1/6W CARBON RES IS	
R133	QRD167J-473	47K	1/6W CARBON RES IS	
R134	QRD167J-103	10K	1/6W CARBON RES IS BS	
R134	QRD167J-103	10K	1/6W CARBON RES IS EF	
R134	QRD167J-103	10K	1/6W CARBON RES IS EN	
R134	QRD167J-103	10K	1/6W CARBON RES IS G	
R135	QRD167J-470	47	1/6W CARBON RES IS	
R136	QRD167J-103	10K	1/6W CARBON RES IS	
R141	QRD167J-472	4.7K	1/6W CARBON RES IS BS	
R141	QRD167J-472	4.7K	1/6W CARBON RES IS EF	
R141	QRD167J-472	4.7K	1/6W CARBON RES IS EN	
R141	QRD167J-472	4.7K	1/6W CARBON RES IS G	
R142	QRD161J-331	330	1/6W CARBON RES IS BS	
R142	QRD161J-331	330	1/6W CARBON RES IS EF	
R142	QRD161J-331	330	1/6W CARBON RES IS EN	
R142	QRD161J-331	330	1/6W CARBON RES IS G	
R143	QRD167J-103	10K	1/6W CARBON RES IS BS	
R143	QRD167J-103	10K	1/6W CARBON RES IS EF	
R143	QRD167J-103	10K	1/6W CARBON RES IS EN	
R143	QRD167J-103	10K	1/6W CARBON RES IS G	
R144	QRD167J-473	47K	1/6W CARBON RES IS BS	
R144	QRD167J-473	47K	1/6W CARBON RES IS EF	
R144	QRD167J-473	47K	1/6W CARBON RES IS EN	
R144	QRD167J-473	47K	1/6W CARBON RES IS G	
R145	QRD167J-103	10K	1/6W CARBON RES IS BS	
R145	QRD167J-103	10K	1/6W CARBON RES IS EF	
R145	QRD167J-103	10K	1/6W CARBON RES IS EN	
R145	QRD167J-103	10K	1/6W CARBON RES IS G	
R146	QRD167J-560	56	1/6W CARBON RES IS	
R147	QRD167J-103	10K	1/6W CARBON RES IS	
R148	QRD167J-103	10K	1/6W CARBON RES IS	
R149	QRD161J-273	27K	1/6W CARBON RES IS	
R150	QRD167J-103	10K	1/6W CARBON RES IS	
R151	QRD167J-224	220K	1/6W CARBON RES IS	
R153	QRD167J-103	10K	1/6W CARBON RES IS	

Δ : SAFETY PARTS

Resistors

△	ITEM	PART NUMBER	DESCRIPTION	AREA
	R154	QRD167J-103	10K 1/6W CARBON RES	IS
	R155	QRD167J-562	5.6K 1/6W CARBON RES	IS
	R156	QRD167J-B22	8.2K 1/6W CARBON RES	IS
	R157	QRD167J-103	10K 1/6W CARBON RES	IS
	R158	QRD161J-333	33K 1/6W CARBON RES	IS
	R159	QRD161J-561	560 1/6W CARBON RES	IS
	R160	QRD161J-273	27K 1/6W CARBON RES	IS BS
	R160	QRD161J-273	27K 1/6W CARBON RES	IS EF
	R160	QRD161J-273	27K 1/6W CARBON RES	IS EN
	R160	QRD161J-273	27K 1/6W CARBON RES	IS G
	R160	QRD167J-123	12K 1/6W CARBON RES	IS U
	R160	QRD167J-123	12K 1/6W CARBON RES	IS UT
	R161	QRD161J-184	180K 1/6W CARBON RES	IS BS
	R161	QRD161J-184	180K 1/6W CARBON RES	IS EF
	R161	QRD161J-184	180K 1/6W CARBON RES	IS EN
	R161	QRD161J-184	180K 1/6W CARBON RES	IS G
	R161	QRD167J-124	120K 1/6W CARBON	U
	R161	QRD167J-124	120K 1/6W CARBON	UT
	R162	QRD161J-184	180K 1/6W CARBON RES	IS BS
	R162	QRD161J-184	180K 1/6W CARBON RES	IS EF
	R162	QRD161J-184	180K 1/6W CARBON RES	IS EN
	R162	QRD167J-124	120K 1/6W CARBON	U
	R162	QRD167J-124	120K 1/6W CARBON	UT
	R163	QRD167J-332	3.3K 1/6W CARBON RES	IS
	R164	QRD167J-332	3.3K 1/6W CARBON RES	IS
	R165	QRD161J-274	270K 1/6W CARBON RES	IS BS
	R165	QRD161J-274	270K 1/6W CARBON RES	IS EF
	R165	QRD161J-274	270K 1/6W CARBON RES	IS EN
	R165	QRD161J-274	270K 1/6W CARBON RES	IS G
	R165	QRD161J-184	180K 1/6W CARBON RES	IS U
	R165	QRD161J-184	180K 1/6W CARBON RES	IS UT
	R166	QRD161J-274	270K 1/6W CARBON RES	IS BS
	R166	QRD161J-274	270K 1/6W CARBON RES	IS EF
	R166	QRD161J-274	270K 1/6W CARBON RES	IS EN
	R166	QRD161J-274	270K 1/6W CARBON RES	IS G
	R166	QRD161J-184	180K 1/6W CARBON RES	IS U
	R166	QRD161J-184	180K 1/6W CARBON RES	IS UT
	R167	QRD167J-473	4.7K 1/6W CARBON RES	IS U
	R167	QRD167J-473	4.7K 1/6W CARBON RES	IS UT
	R168	QRD167J-103	10K 1/6W CARBON RES	IS
	R159	QRD167J-103	10K 1/6W CARBON RES	IS
	R171	QRD167J-682	6.8K 1/6W CARBON RES	IS
	R172	QRD167J-682	6.8K 1/6W CARBON RES	IS
	R179	QRD167J-562	5.6K 1/6W CARBON RES	IS
	R180	QRD167J-472	4.7K 1/6W CARBON RES	IS
	R181	QRD167J-222	2.2K 1/6W CARBON RES	IS
	R182	QRD161J-181	180 1/6W CARBON RES	IS
	R187	QRD161J-101	100 1/6W CARBON RES	IS
	R190	QRD167J-472	4.7K 1/6W CARBON RES	IS
	R194	QRD167J-472	4.7K 1/6W CARBON RES	IS
	R195	QRD167J-473	4.7K 1/6W CARBON RES	IS
	R196	QRD167J-222	2.2K 1/6W CARBON RES	IS BS
	R196	QRD167J-222	2.2K 1/6W CARBON RES	IS EF
	R196	QRD167J-222	2.2K 1/6W CARBON RES	IS EN
	R196	QRD167J-222	2.2K 1/6W CARBON RES	IS G
	R196	QRD167J-222	2.2K 1/6W CARBON RES	IS U
	R196	QRD167J-103	10K 1/6W CARBON RES	IS U
	R196	QRD167J-103	10K 1/6W CARBON RES	IS UT
	R197	QRD167J-222	2.2K 1/6W CARBON RES	IS
	R198	QRD167J-822	8.2K 1/6W CARBON RES	IS BS
	R198	QRD167J-822	8.2K 1/6W CARBON RES	IS EF
	R198	QRD167J-822	8.2K 1/6W CARBON RES	IS EN
	R198	QRD167J-822	8.2K 1/6W CARBON RES	IS G
	R198	QRD167J-332	3.3K 1/6W CARBON RES	IS U
	R198	QRD167J-332	3.3K 1/6W CARBON RES	IS UT
	R199	QRD167J-472	4.7K 1/6W CARBON RES	IS
	R201	QRZ0077-680	68 1/4W FUSIBLE RE SI	
	R202	QRZ0077-470	47 1/4W FUSIBLE RE SI BS	
	R202	QRZ0077-470	47 1/4W FUSIBLE RE SI EF	
	R202	QRZ0077-470	47 1/4W FUSIBLE RE SI EN	
	R202	QRZ0077-220	22 1/4W FUSIBLE RE SI G	
	R202	QRZ0077-470	47 1/4W FUSIBLE RE SI U	
	VR167	QVPE601-104	100K 0.15W TRIMMER RE SI BS	
	VR167	QVPE601-104	100K 0.15W TRIMMER RE SI EF	
	VR167	QVPE601-104	100K 0.15W TRIMMER RE SI EN	
	VR167	QVPE601-104	100K 0.15W TRIMMER RE SI G	

Others

△	ITEM	PART NUMBER	DESCRIPTION	AREA
	J102	QMS3501-021	PIN JACK	
	L101	EQL4007-1R0T	INDUCTOR	
	L106	EQL3001-102K	INDUCTOR	
	P101	VMC0107-008	CONNECT TERMINAL(8PIN)	
	P103	VMC0107-006	CONNECT TERMINAL(6PIN)	
	P105	VMC0107-003	CONNECT TERMINAL(3PIN)	U
	P105	VMC0107-003	CONNECT TERMINAL(3PIN)	UT
	T101	EQR1111-014	RF COIL	
	T102	EQR1111-005	RF COIL	BS
	T102	EQR1111-005	RF COIL	EF
	T102	EQR1111-005	RF COIL	EN
	T102	EQR1111-005	RF COIL	G
	T103	EQR1207-015	RF COIL	
	T104	EQR1307-009	RF COIL	BS
	T104	EQR1307-009	RF COIL	EF
	T104	EQR1307-009	RF COIL	EN
	T104	EQR1307-009	RF COIL	G
	T105	EQT2140-012	I.F. TRANSFORMER	
	T106	EQT2140-013	I.F. TRANSFORMER	
	T107	ECB1560-006	CERAMIC FILTER	
	AT101	EMB41YY-301K	ANTENNA TERMINAL	
	AT101	EMB41YY-301K	ANTENNA TERMINAL	EF
	AT101	EMB41YY-301K	ANTENNA TERMINAL	EN
	AT101	EMB41YY-301K	ANTENNA TERMINAL	G
	AT101	EMB41YY-401K	ANTENNA TERMINAL	U
	AT101	EMB41YY-401K	ANTENNA TERMINAL	UT
	CF101	ECB2118-007R	CERAMIC FILTER	BS
	CF101	ECB2118-007R	CERAMIC FILTER	EF
	CF101	ECB2118-007R	CERAMIC FILTER	EN
	CF101	ECB2118-007R	CERAMIC FILTER	G
	CF101	ECB2123-006R	CERAMIC FILTER	U
	CF101	ECB2123-006R	CERAMIC FILTER	UT
	CF102	ECB2118-007R	CERAMIC FILTER	BS
	CF102	ECB2118-007R	CERAMIC FILTER	EF
	CF102	ECB2118-007R	CERAMIC FILTER	EN
	CF102	ECB2118-007R	CERAMIC FILTER	G
	CF102	ECB2123-006R	CERAMIC FILTER	U
	CF102	ECB2123-006R	CERAMIC FILTER	UT
	EP101	E65396-003	EARTH PLATE	
	EP102	E65396-003	EARTH PLATE	
	EP110	E70225-001	EARTH PLATE	
	FE101	EAF2203-005	FRONT END	BS
	FE101	EAF2203-005	FRONT END	EF
	FE101	EAF2203-005	FRONT END	EN
	FE101	EAF2203-004	FRONT END	G
	FE101	EAF2203-004	FRONT END	U
	LP101	EQFO101-002LS	LOW PASS FILTER	
	LP102	EQFO102-001	LOWPASS FILTER	BS
	LP102	EQFO102-001	LOWPASS FILTER	EF
	LP102	EQFO102-001	LOWPASS FILTER	EN
	LP102	EQFO102-001	LOWPASS FILTER	G
	SW202	QSS1201-039	SLIDE SWITCH	
	SW202	QSS1201-039	SLIDE SWITCH	UT
	TC105	ENZ1003-006	TRIMMER CAPACITOR	
	TC106	ENZ1003-006	TRIMMER CAPACITOR	AS
	TC106	ENZ1003-006	TRIMMER CAPACITOR	EF
	TC106	ENZ1003-006	TRIMMER CAPACITOR	EN
	TC106	ENZ1003-006	TRIMMER CAPACITOR	G
	XT102	ECX0007-200KC	CRYSTAL	
	XT103	ECX0000-456KR	CERAMIC RESONATOR	

△ : SAFETY PARTS

Accessories List

シンボルNo. M 2 M M

⚠	Item	Part Number	Part Name	Q'ty	Description	Areas
	1	E30580-2080A E30580-2080A E30580-2080A E30580-2080A E30580-2081A	INSTRUCTION BOOK INSTRUCTION BOOK INSTRUCTION BOOK INSTRUCTION BOOK INSTRUCTION BOOK	1 1 1 1 1		BS EF U UT EN
	2	BT20060	WARRANTY CARD	1		BS
	3	BT-20134	WARRANTY CARD	1		G
	4	BT-20066A	EEC AGENCY	1		BS
	5	E43486-340A	SAFETY SHEET	1		BS
	6	E43486-371A	SHEET	1		BS
⚠	7	E306858-002	CAUTION SHEET	1		UT
⚠	8	FMND3004-001	RATING LABEL	1		UT
⚠	9	QMF51E2-2R5J1	FUSE	1	(T2.5A / 250V)	U
⚠	10	QMF51E2-2R5J1	FUSE	1	(T2.5A / 250V)	UT
⚠	11	E67142-T4R0 E03614-004 E03614-004 E03614-004 E03614-004	FUSE LABEL BILT-IN ANTENNA BILT-IN ANTENNA BILT-IN ANTENNA BILT-IN ANTENNA	1 1 1 1 1		UT BS EF EN U
	12	E03614-004	BILT-IN ANTENNA	1		UT
	13	E67007-001	WIRE ANTENNA	1		G
	14	EQB4001-015	AM LOOP ANTENNA	1		
	14	ENZ2203-001	CONTHI PLUG	1		U
	14	ENZ2203-001	CONTHI PLUG	1		UT
	15	UM-3(DJ)-2PSA	BATTERY	1		
	16	EMZ2001-014	ADAPTOR PLUG	1		BS
	16	EMZ2001-014	ADAPTOR PLUG	1		EF
	17	EMZ2001-014	ADAPTOR PLUG	1		EN
	17	RM-SR212U	REMOTE CONTROLLER	1		
	18	QPGA005-00703	ENVELOPE	1		U
	18	QPGA005-00703	ENVELOPE	1		UT
	19	QPGA025-03505B	ENVELOPE	1		

⚠ SAFETY PARTS

The Marks for Designated Areas

BS the U.K.

EN Scandinavia

EF Continental Europe

G Germany


UT Taiwan

U Universal Type

No mark indicates all areas.

Packing Materials and Part Numbers

シンボルNo. M | 3 | M | M

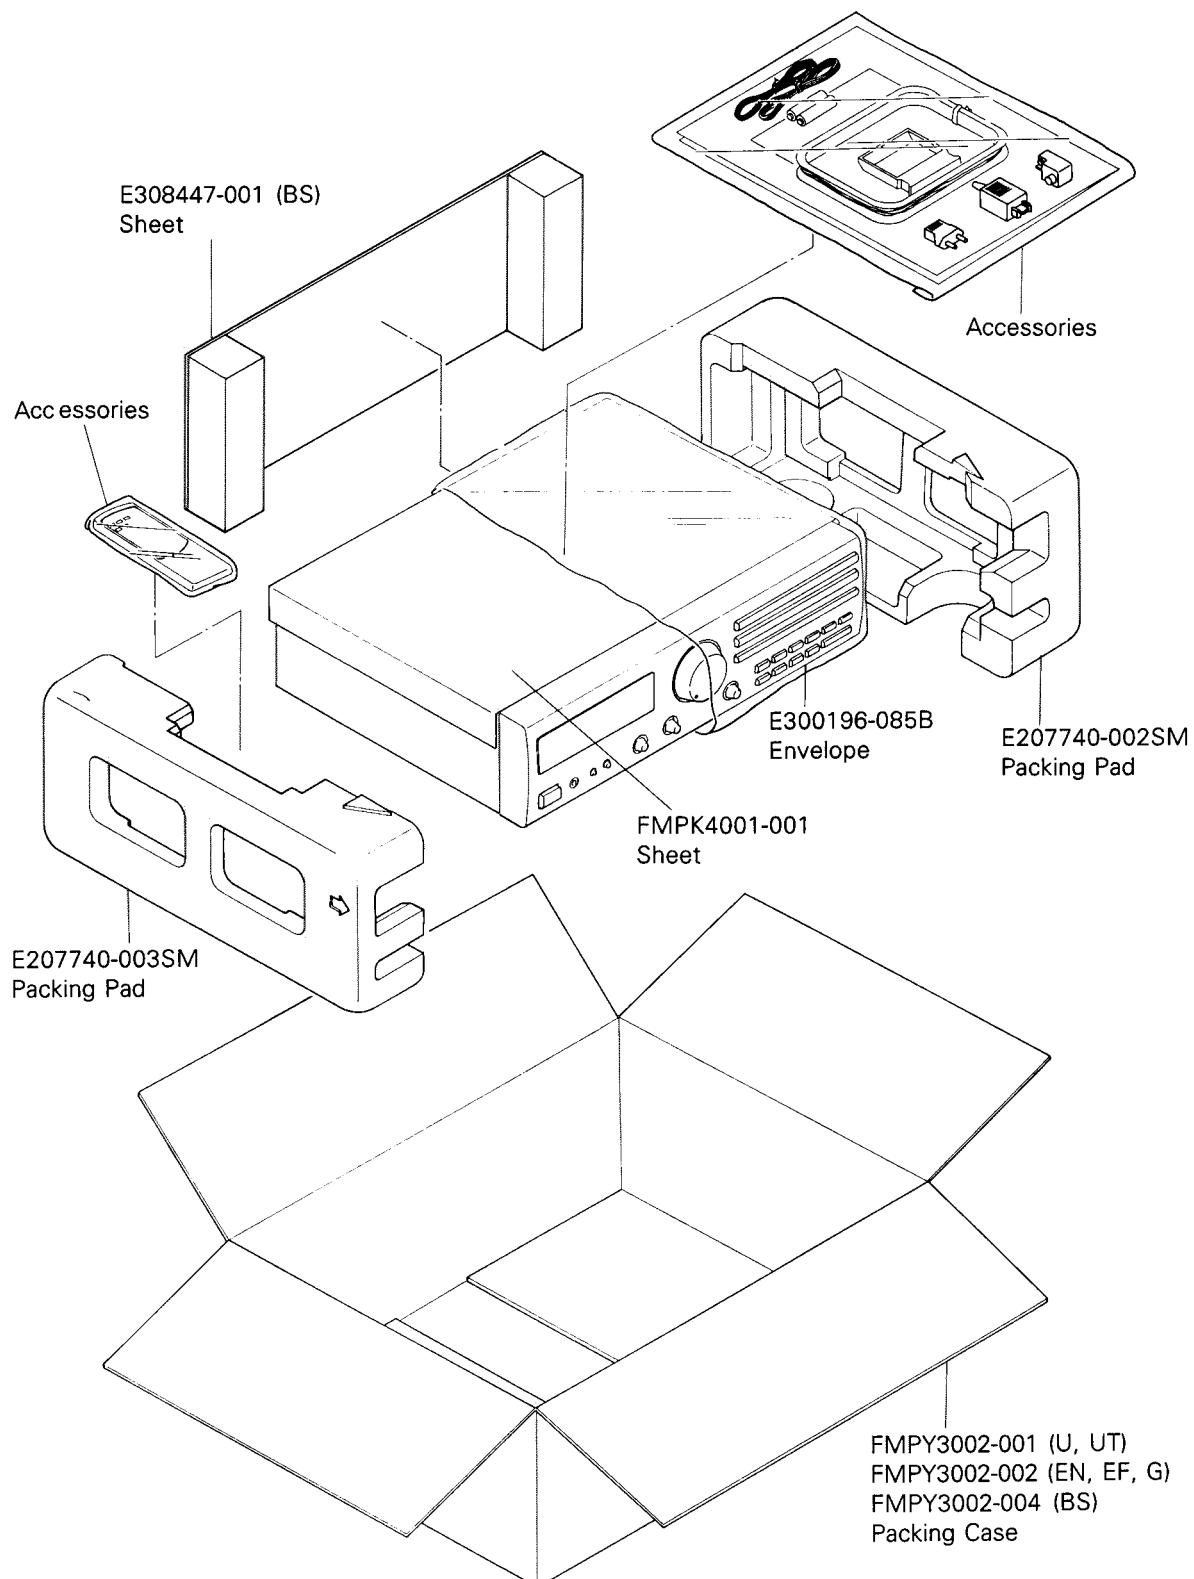

The Marks for Designated Areas

BS	the U.K.	EN	Scandinavia
EF	Continental Europe	G	Germany
UT	Taiwan	U	Universal Type
No marks indicates all areas.			



VICTOR COMPANY OF JAPAN, LIMITED
AUDIO PRODUCTS DIVISION, 1644, Shimotsuruma, Yamato-shi, Kanagawa-ken, 242, JAPAN

(No. 20462)



Printed in Japan
9312 (S)